

PUBLISHED: 10-OCT-2019
2020.0 DEFENDER (LE), 413-13

PARKING AID

FRONT PARK ASSIST SENSOR (G2414632)

mcx30.com

REMOVAL


 NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains illustrations for left side components, right side components are similar.
- The ignition must be switched off.

1. Raise and support the vehicle on a suitable 2-post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).


2. Remove the wheel and tire assembly.
Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).

- 3.

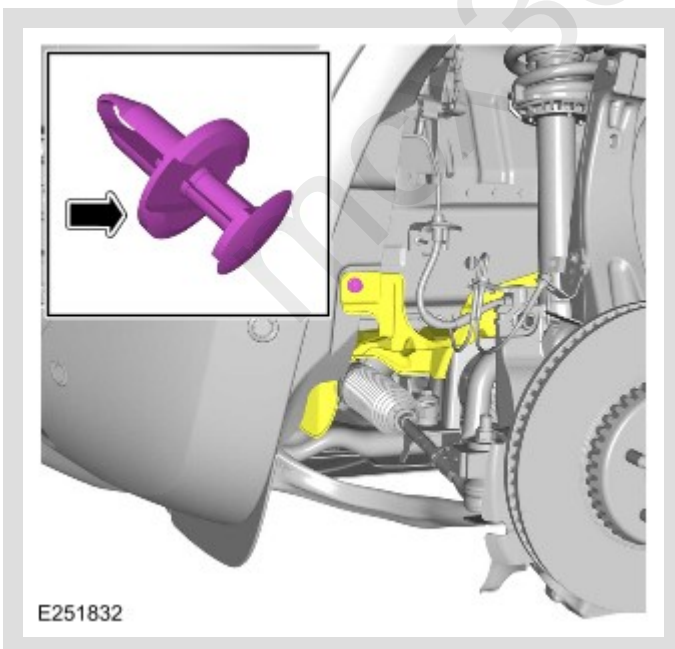


- Remove the clip.
- Release the side undershield.

4.

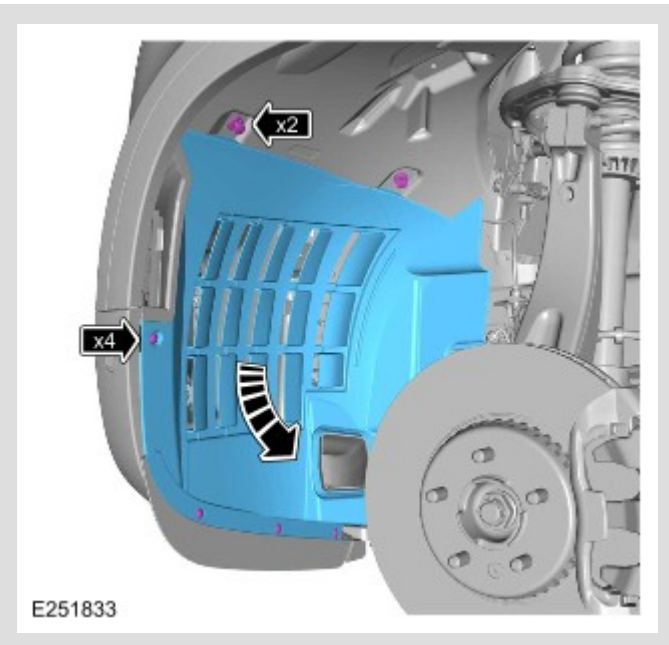



- Remove the 2 clips.
- Remove the 4 screws.
- Remove the wheel arch liner front section.

5.

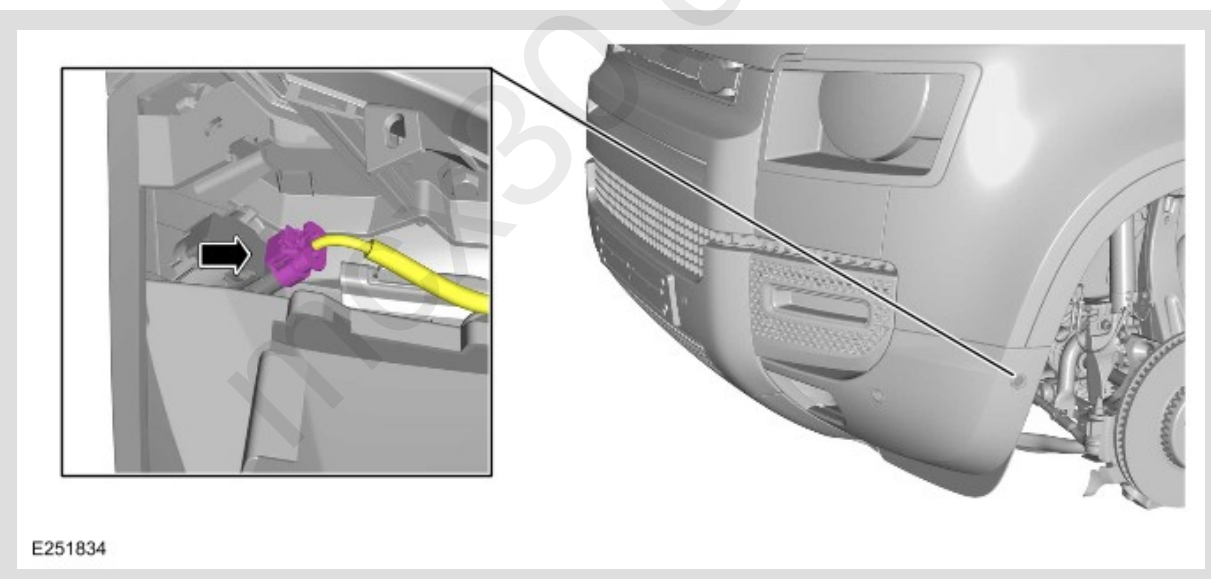

Disconnect the electrical connector from the front park assist sensor.

6.

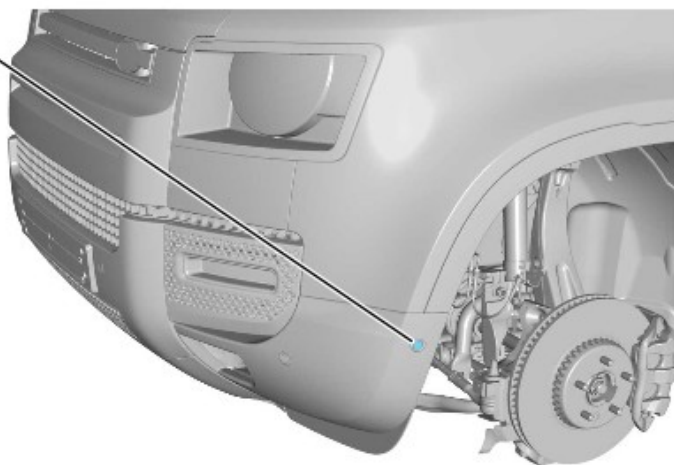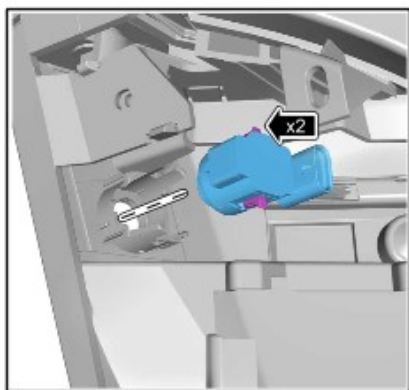

E251835


Release the 2 clips and remove the front park assist sensor.

mcx30.com

1.

⚠ CAUTIONS:

- If a new park assist sensor is installed, make sure that the membrane and the cylindrical edge of the membrane must be covered with a paint layer of at least 2 mm all the way around as illustrated.
- The whole paint film thickness on the membranes is up to a maximum of 120 micrometers (including the electro-coated layer) to make sure a proper sensor function.
- This is also valid for the multiple layer paints.

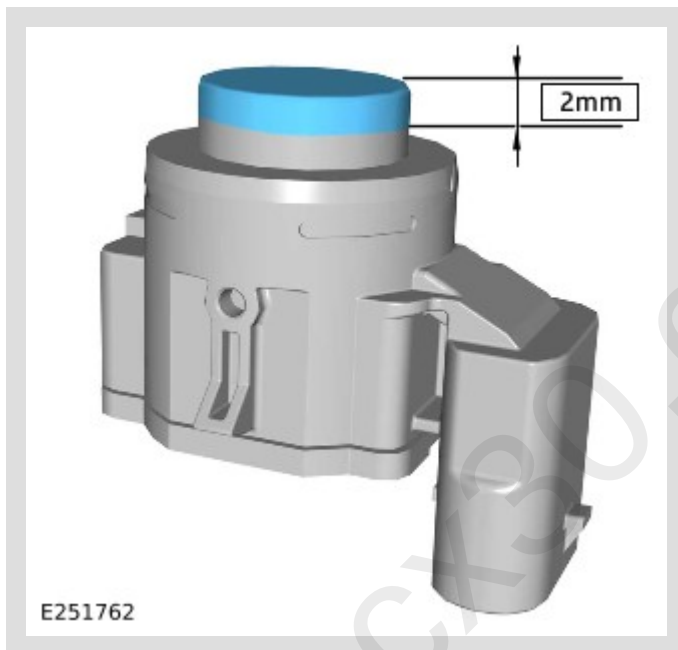


Check the paint layer of the parking assist sensor.

2.

⚠ CAUTIONS:

- Inspect the ring, replace if damaged.
- Make sure that the ring is correctly located to the sensor.

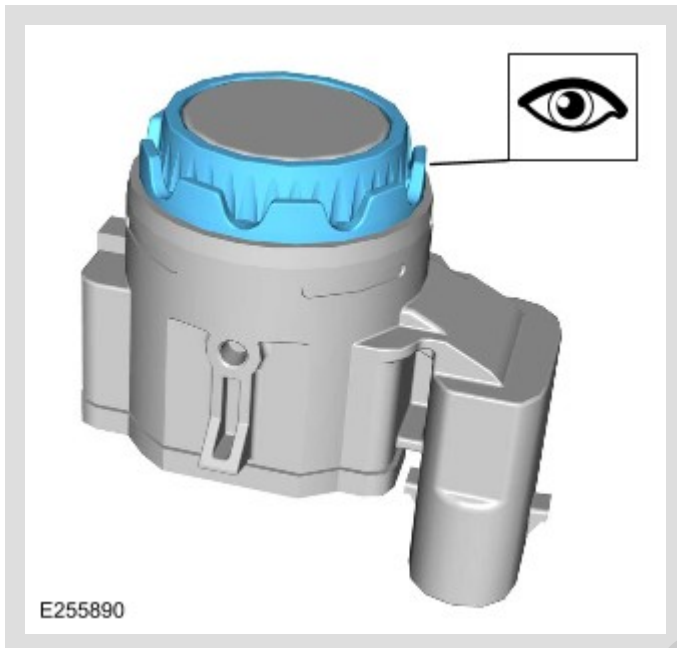

Before installing the front park assist sensor, check the condition and the position of the ring.

3.

⚠ NOTE:

Make sure that the sensor is correctly located to the bracket. Audible clicks will be heard to confirm connection.

- Install the front park assist sensor.
- Connect the electrical connector to the front park assist sensor.

4.

- Install the wheel arch liner front section.
- Install and tighten the 4 screws.
- Install the 2 clips.

5.

- Reposition the side undershield.
- Install the clip.

6.

Install the wheel and tire assembly.

Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).

mcx30.com