

PUBLISHED: 03-OCT-2019
2020.0 DEFENDER (LE), 417-01

EXTERIOR LIGHTING

FRONT FOG LAMP (G2323848)

mcx30.com


REMOVAL

 NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains illustrations for right side components, left side components are similar.


1. Raise and support the vehicle on a suitable 2-post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the wheel and tire assembly.
Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).

3.

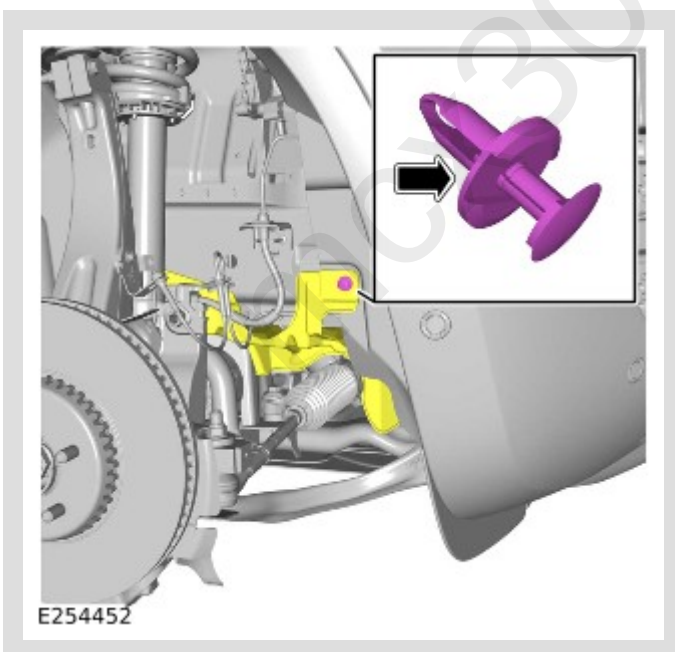

- Remove the clip.
- Release the right side undershield.

4.

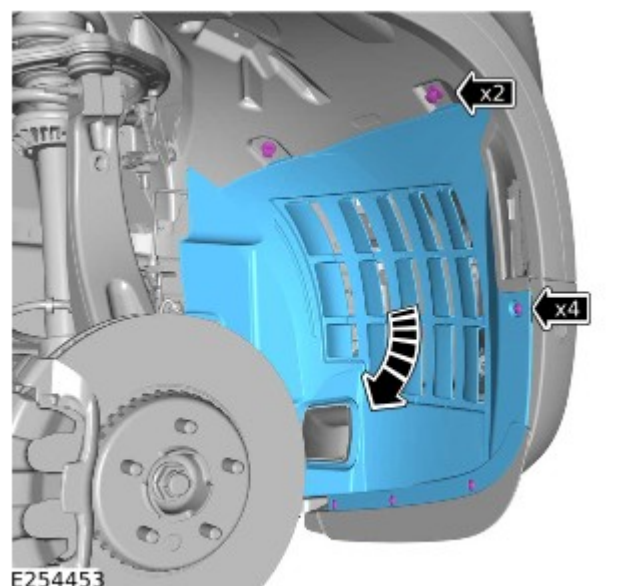


- Remove the 2 clips.
- Remove the 4 screws.
- Remove the wheel arch liner front section.

5.


If vehicle is equipped with the auxiliary cooler, remove the front bumper.
Refer to: [Front Bumper](#) (501-19 Bumpers, Removal and Installation).

6.

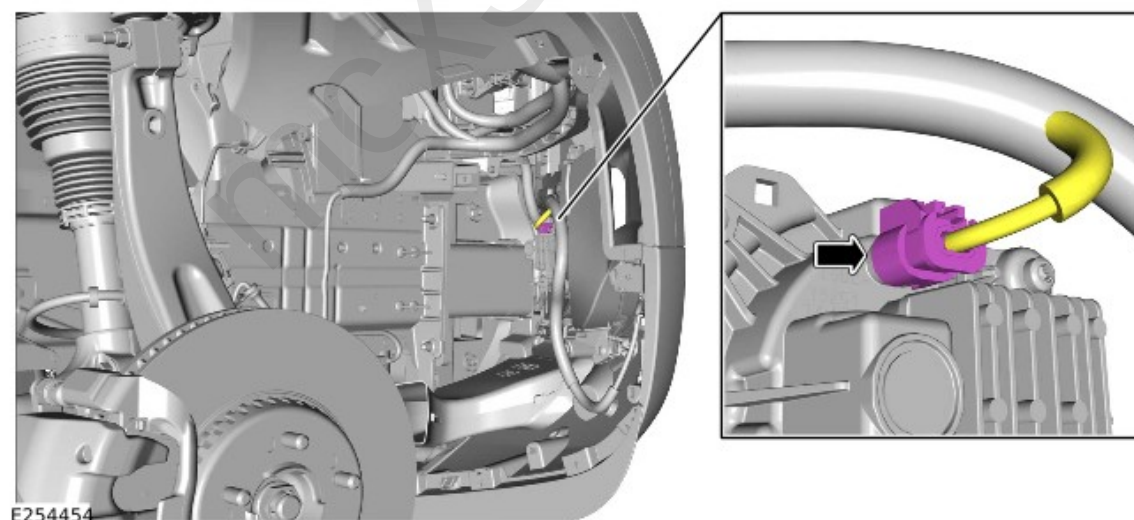

Disconnect the electrical connector from the front fog lamp.

7.

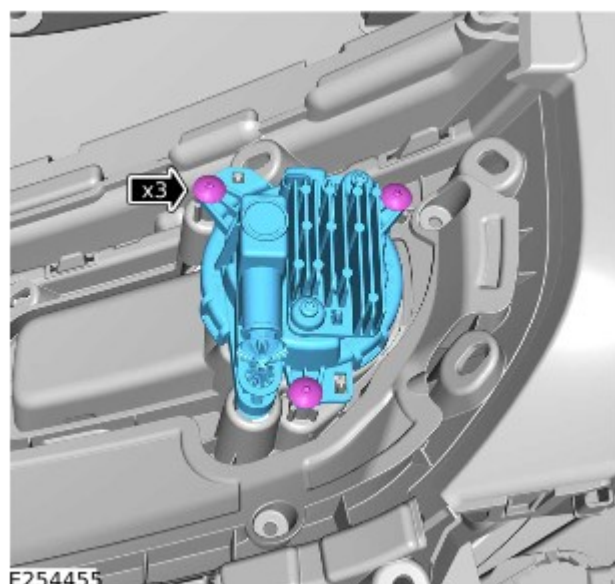

- Remove the 3 screws.
- Remove the front fog lamp.

INSTALLATION

1.

- Install the front fog lamp.
- Install and tighten the 3 screws.
Torque: 2Nm
- Connect the electrical connector to the front fog lamp.

2.

If vehicle is equipped with the auxiliary cooler, install the front bumper.
Refer to: [Front Bumper](#) (501-19 Bumpers, Removal and Installation).

3.

- Install the wheel arch liner front section.
- Install and tighten the 4 screws.
- Install the 2 clips.

4.

- Install the clip.
- Reposition the right side undershield.

5.

Install the wheel and tire assembly.
Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).

mcx30.com