
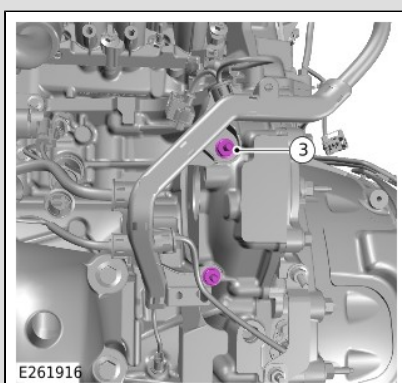
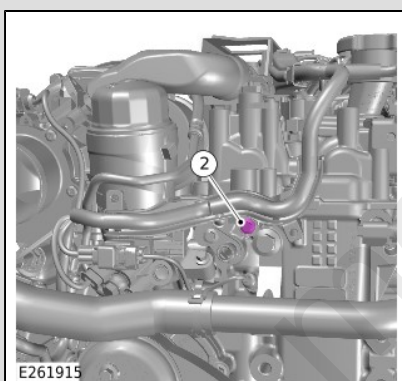


PUBLISHED: 26-FEB-2020
2020.0 DEFENDER (LE), 418-02




WIRING HARNESSSES (G2323862)

SPECIFICATIONS





COMPONENT TORQUE LOCATION

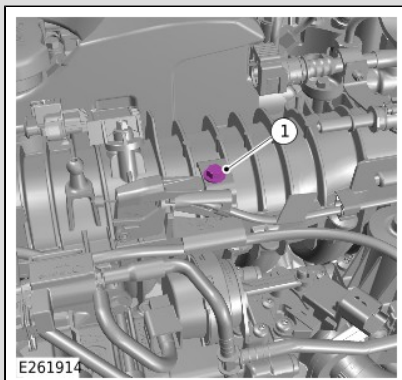





COMPONENT TORQUE LOCATION

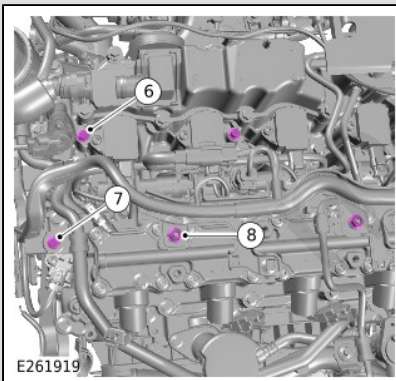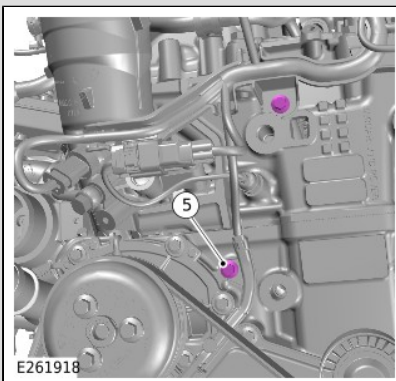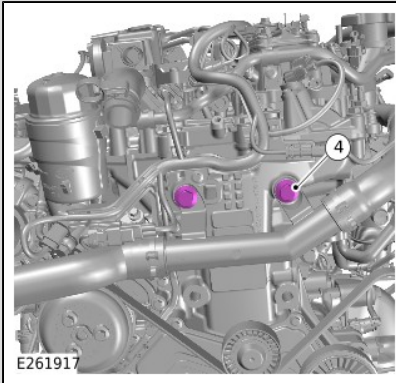


COMPONENT TORQUE LOCATION

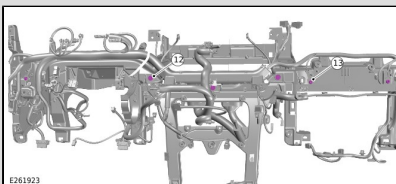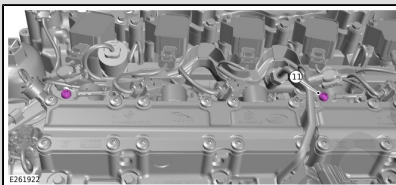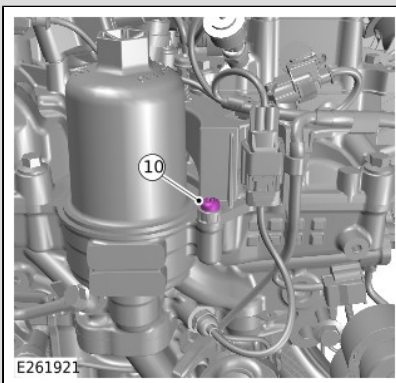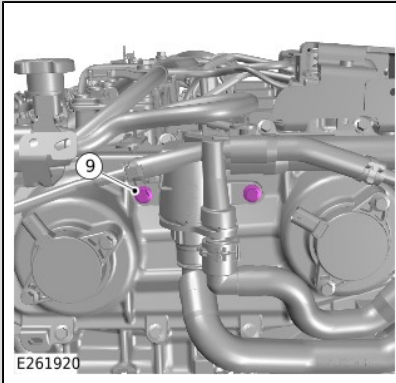

COMPONENT TORQUE LOCATION

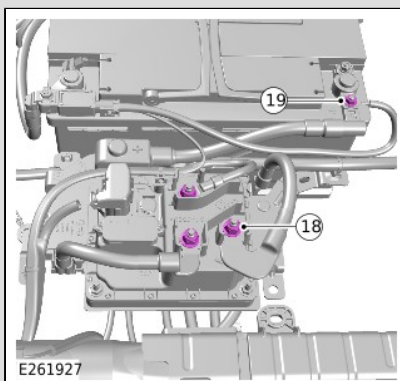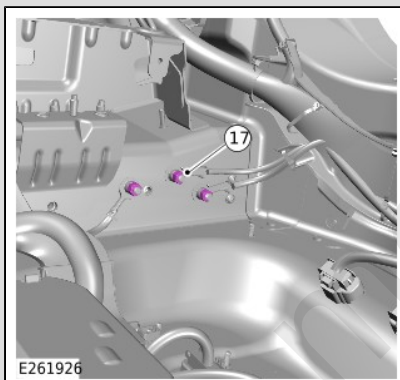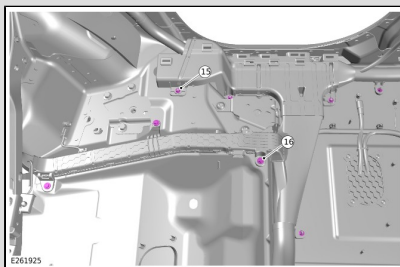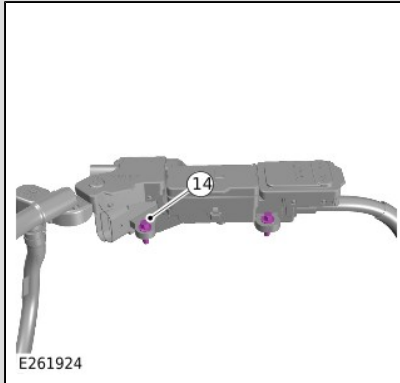

COMPONENT TORQUE LOCATION

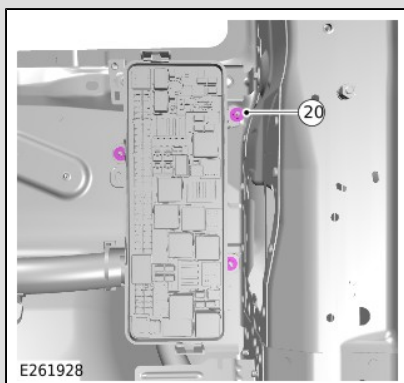

Torque Specifications

	DESCRIPTION	NM	LB-FT	LB-IN
1	Emergency parking release cable bolt	10	7	-
2	Engine wiring harness bracket bolt	10	7	-
3	Engine wiring harness bracket bolts	10	7	-
4	Coolant pipe bolts	10	7	-
5	Engine wiring harness bolt	9	-	79
6	Engine wiring harness ground cable bolts	9	-	79
7	Engine wiring harness bolt	9	-	79
8	Engine wiring harness nuts	9	-	79
9	Coolant degas separator bolts	10	7	-
10	Engine wiring harness bracket bolt	7	-	62
11	Engine wiring harness ground cable bolts	10	7	-
12	Instrument panel wiring harness bolts	9	-	79
13	Instrument panel wiring harness ground bolts	12	9	-
14	Jump start terminal bolts	8	-	70
15	Treadplate bracket nuts	8	-	70
16	Treadplate bracket bolts	8	-	70
17	Ground cable nuts	9	-	79
18	Power Supply Distribution Box (PSDB) battery cable nuts	12	9	-
19	Positive terminal battery cable nut	12	9	-

	DESCRIPTION	NM	LB-FT	LB-IN
20	Junction box nuts	8	-	70

cmjjaGFyZG1vcnRvbjeyMDIwLTASLTE4VDE4OjAxOjU3LjQwNVo7OTIuNDAuMTg5LjUzOw==

mcx30.com