

PUBLISHED: 04-NOV-2019
2020.0 DEFENDER (LE), 419-10

MULTIFUNCTION ELECTRONIC MODULES

FRONT DOOR MODULE (G2323872)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME

Jaguar Land Rover approved diagnostic equipment

REMOVAL

**WARNING:**

To avoid accidental deployment, the Restraints Control Module (RCM) backup power supply must be depleted. Wait at least 1 minute after disconnecting the startup battery ground cable(s) before doing any repair or adjustment to the Supplementary Restraint System (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.

**CAUTION:**

Protect the surrounding paintwork to avoid damage.

**NOTES:**

- This procedure contains illustrations for left side components, right side components are similar.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.

1. Make the Supplementary Restraint System (SRS) safe.

Refer to: [Supplementary Restraint System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


2. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

3. Remove the front door trim panel.

Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

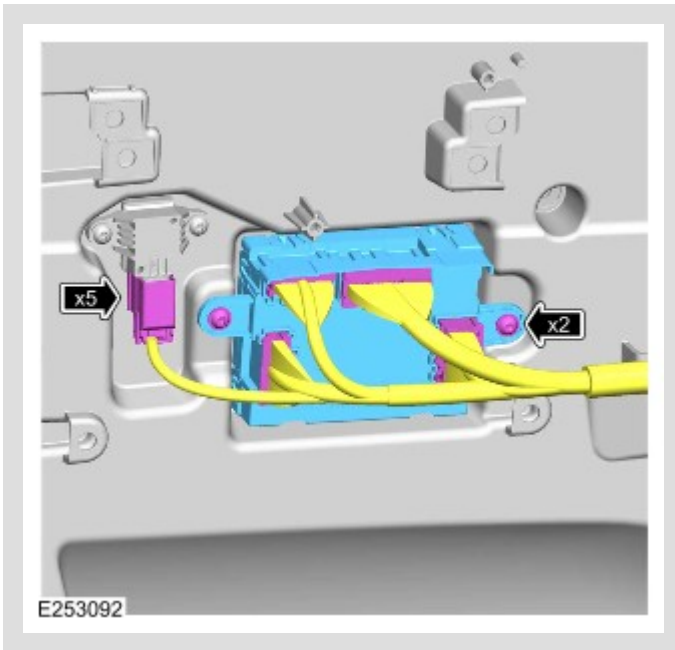

- Disconnect the electrical connector from the front door impact sensor.
- Disconnect the 4 electrical connectors from the front door module.
- Remove the 2 screws.
- Remove the front door module.

INSTALLATION

1.

- Install the front door module.
- Install and tighten the 2 screws.
Torque: 2Nm
- Connect the 4 electrical connectors to the front door module.
- Connect the electrical connector to the front door impact sensor.

2.

Install the front door trim panel.

Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

4.

Use the Jaguar Land Rover (JLR) approved diagnostic equipment to configure the new front door module.

General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)

mcx30.com