

PUBLISHED: 24-AUG-2020
2020.0 DEFENDER (LE), 501-03

BODY CLOSURES

FRONT DOOR CHECK ARM (G2417077)

mcx30.com

REMOVAL

⚠ CAUTION:

Protect the surrounding paintwork to avoid damage.

△ NOTES:

- This procedure contains illustrations for left side components, right side components are similar.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.

1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the front door trim panel.


Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

- 3.




- Remove the bolt.
- Disconnect the front door check arm.

4.

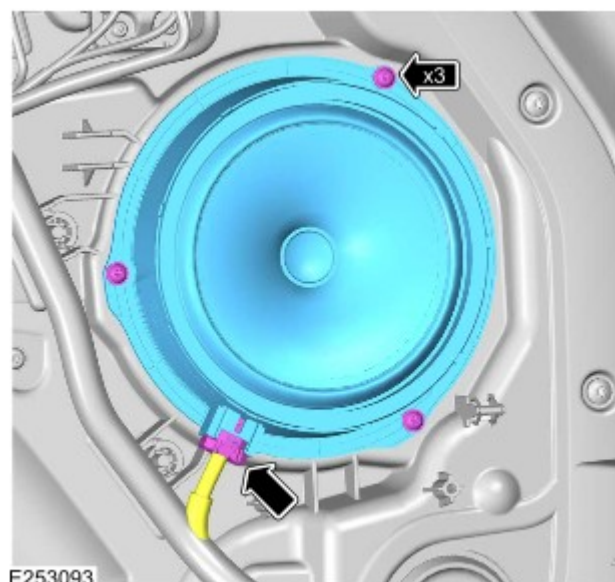


- Disconnect the electrical connector from the bass speaker.
- Remove the 3 screws.
- Remove the front door bass speaker.

5.

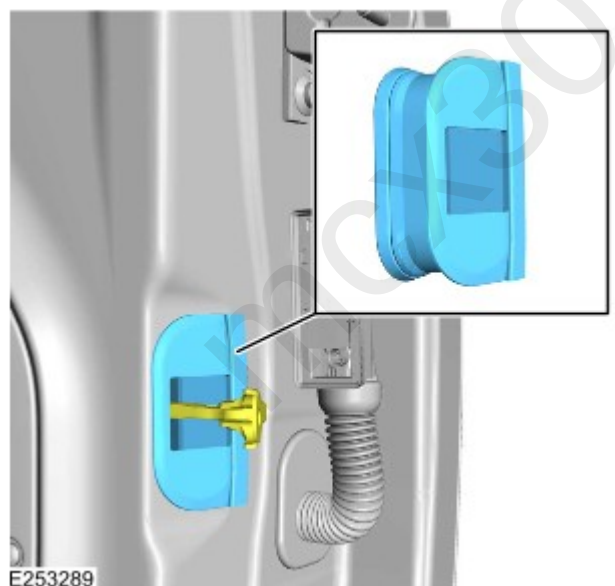

Remove the rubber access cover.

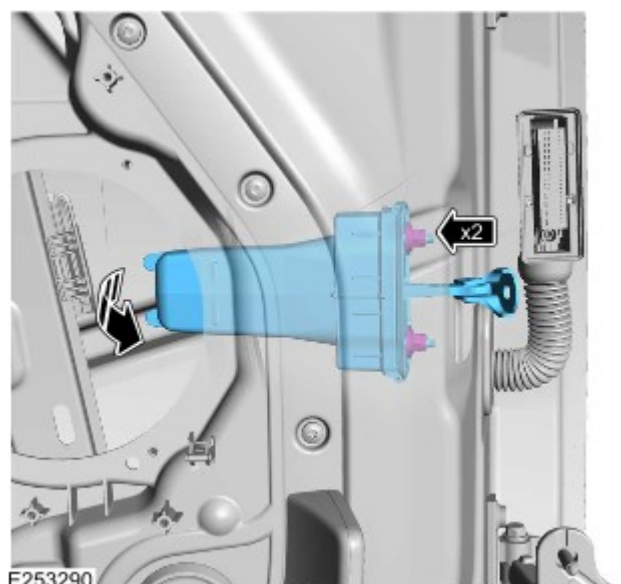

- Remove the 2 nuts.
- Remove the front door check arm.

INSTALLATION

1.

- Install the front door check arm.
- Install and tighten the 2 nuts.

Torque: 9Nm

2.

Install the access cover.

3.

- Install the front door bass speaker.
- Connect the electrical connector to the bass speaker.
- Install and tighten the 3 screws.

Torque: 2Nm

4.

- Connect the front door check arm.
- Install and tighten the bolt.

Torque: 25Nm

5.

Install the front door trim panel.

Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

6.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).