

PUBLISHED: 30-JAN-2020
2020.0 DEFENDER (LE), 501-10

SEATING

FRONT ROW SEAT RECLINER MOTOR (G2444776)

mcx30.com

REMOVAL AND INSTALLATION

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 1	Front seat frame bolt(s)	4

REMOVAL

NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Remove the lumbar assembly.

Refer to: [Lumbar Assembly](#) (501-10 Seating, Removal and Installation).

2. Remove the front row seat cushion cover.


Refer to: [Front Row Seat Cushion Cover](#) (501-10 Seating, Removal and Installation).

- 3.

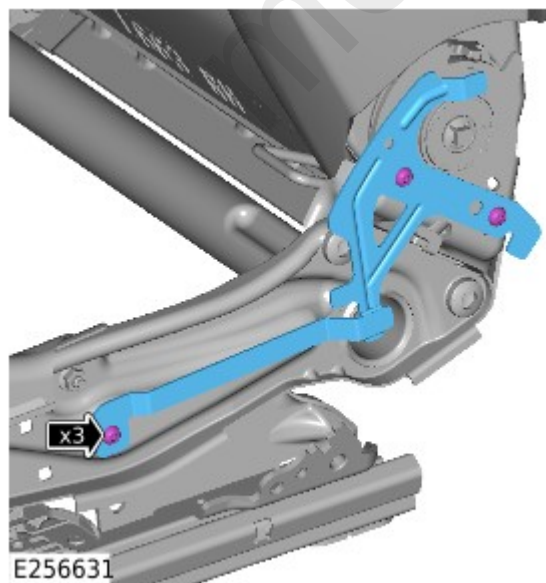


- Remove the 3 bolts.
- Remove the side trim panel bracket.

4.

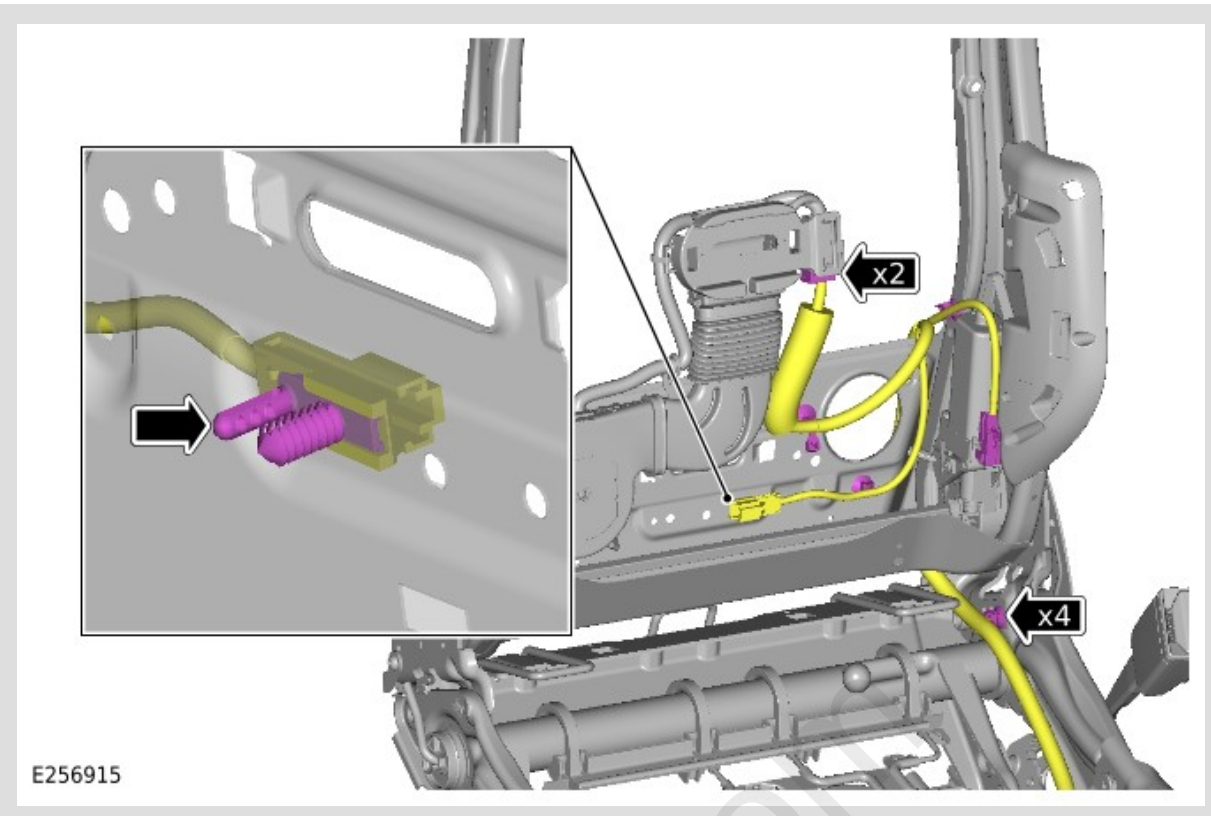


- Disconnect the 2 electrical connectors.
- Release the 5 wiring harness clips.

5.

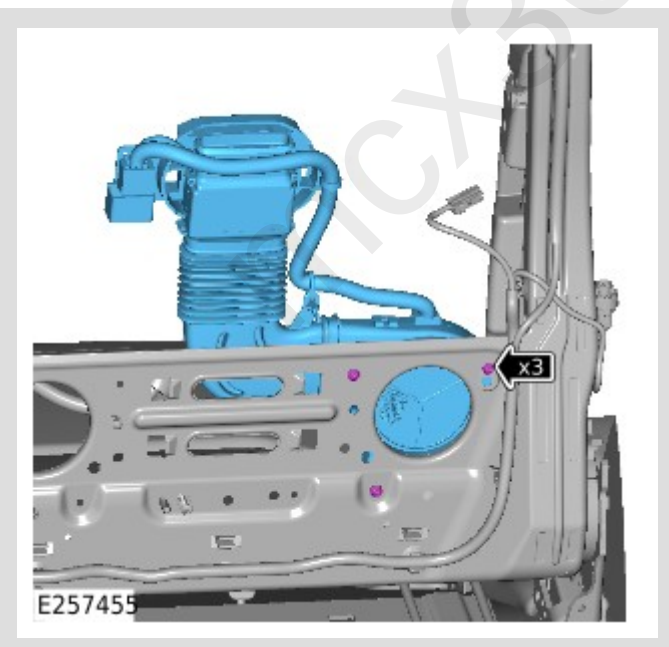


- Remove the 3 screws.
- Remove the front seat backrest blower motor.

6.

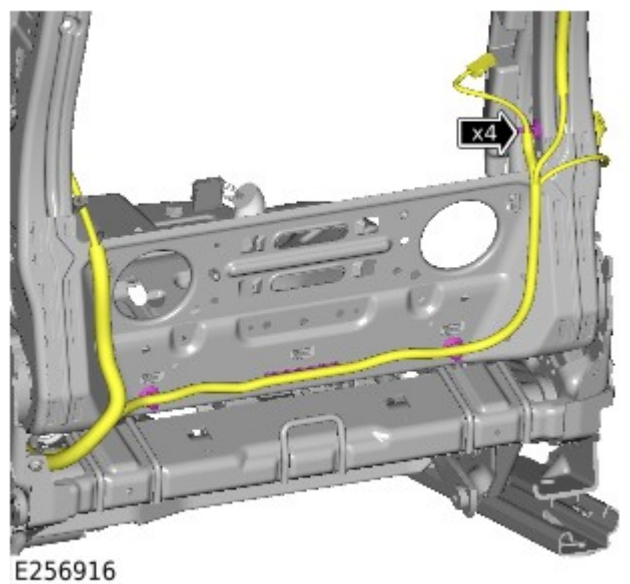


Release the 4 wiring harness clips.

7.

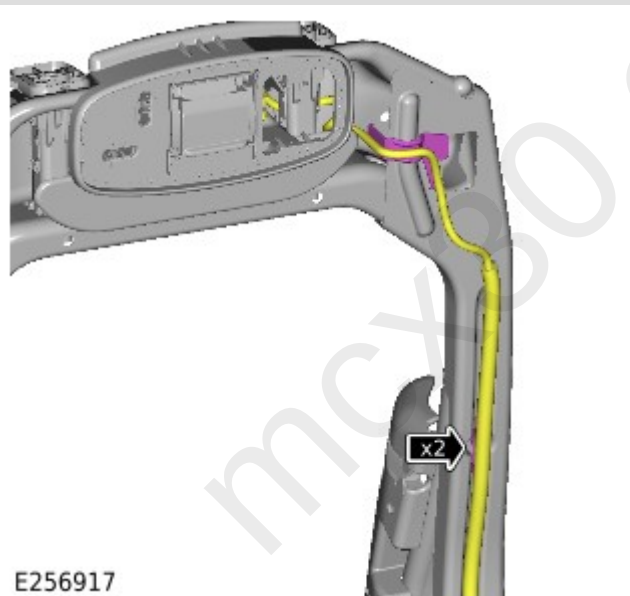

Release the 2 wiring harness clips.

8.

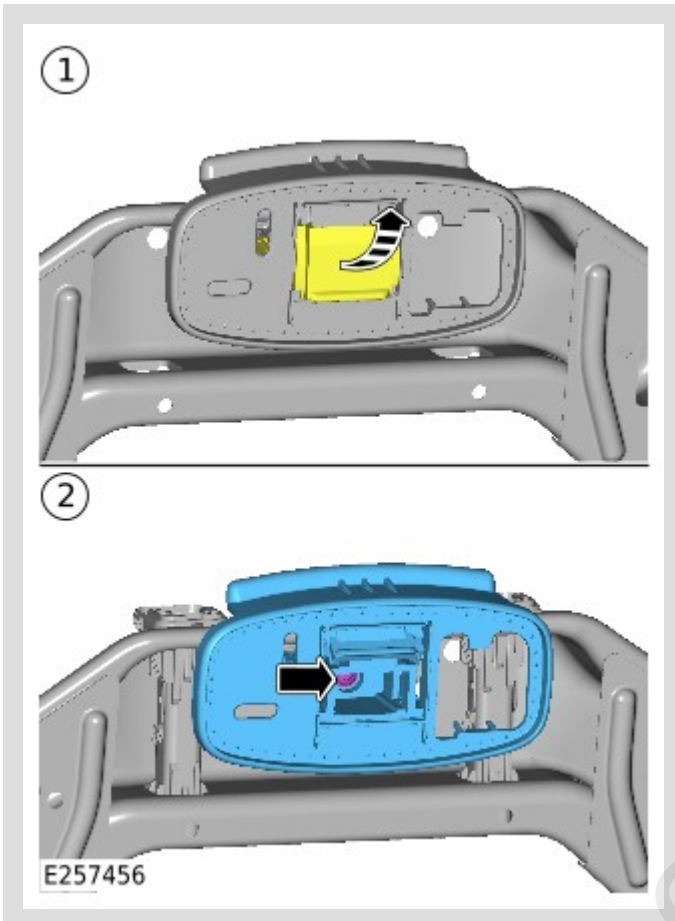

- Lift the cover to get access to the screw.
- Remove the screw.
- Remove the Rear Seat Entertainment (RSE) docking station.

9.




- Use a suitable tool to release the 4 clips.
- Remove the 2 head restraint support brackets.

10.

 NOTE:

Repeat the step for the other side.

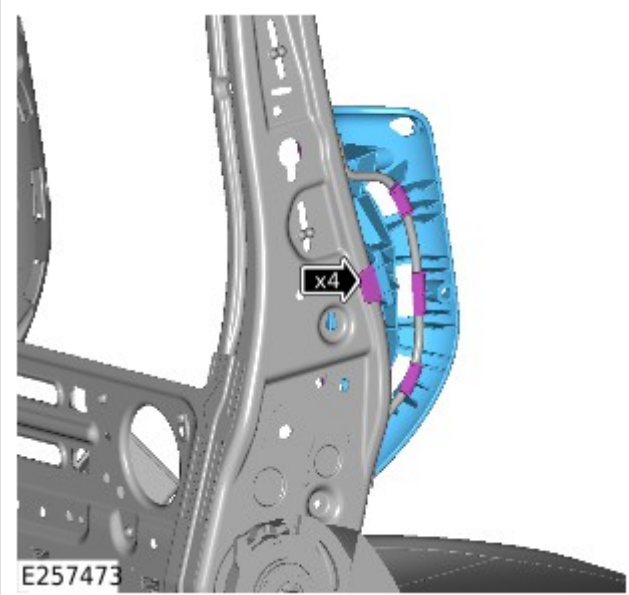

- Release the 4 clips.
- Remove the lumbar support.

11.



- Remove and discard the 4 bolts.
- Remove the front row seat recliner motor.

INSTALLATION

1.

- Install the front row seat recliner motor.
- Install and tighten the 4 new bolts.
Renew Part: [Front seat frame bolt\(s\)](#) Quantity: 4.
Torque: 50Nm

2.



NOTE:

Repeat the step for the other side.

- Install the lumbar support.
- Secure the 4 clips.

3.

Install the 2 head restraint support brackets.

4.

- Install the RSE docking station.
- Install and tighten the screw.

5.

Install the 2 wiring harness clips.

6.

Install the 4 wiring harness clips.

7.

- Install the front row seat backrest blower motor.
- Install and tighten the 3 screws.

8.

- Connect the 2 electrical connectors.
- Install the 5 wiring harness clips.

9.

- Install the side trim panel bracket.
- Install and tighten the 3 bolts.

10.

Install the front row driver seat cushion cover.

Refer to: [Front Row Seat Cushion Cover](#) (501-10 Seating, Removal and Installation).

11.

Install the lumbar assembly.

Refer to: [Lumbar Assembly](#) (501-10 Seating, Removal and Installation).

cmjjaGFyZG1vcnRvbjsyMDIwLTA5LTE4VDEyOjM0OQwLJE5N167OTluNDAuMTg5LjUwOw==

mcx30.com