

PUBLISHED: 10-MAR-2020
2020.0 DEFENDER (LE), 501-10

SEATING

FRONT ROW CENTER SEAT (G2453191)

mcx30.com

REMOVAL

**WARNINGS:**

- To avoid accidental deployment, the Restraints Control Module (RCM) backup power supply must be depleted. Wait at least 1 minute after disconnecting the startup battery ground cable(s) before doing any repair or adjustment to the Supplementary Restraint System (SRS), or any component(s) adjacent to the SRS sensors. Failure to following these instructions may result in personal injury.
- Do not probe the SRS electrical connectors.

**NOTE:**

- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.

1. Remove both front row seats.


Refer to: [Front Row Seat - Vehicles With: Power Seats](#) (501-10 Seating, Removal and Installation).

Refer to: [Front Row Seat - Vehicles Without: Power Seats](#) (501-10 Seating, Removal and Installation).

2.


 NOTE:

Repeat the step for the other side.

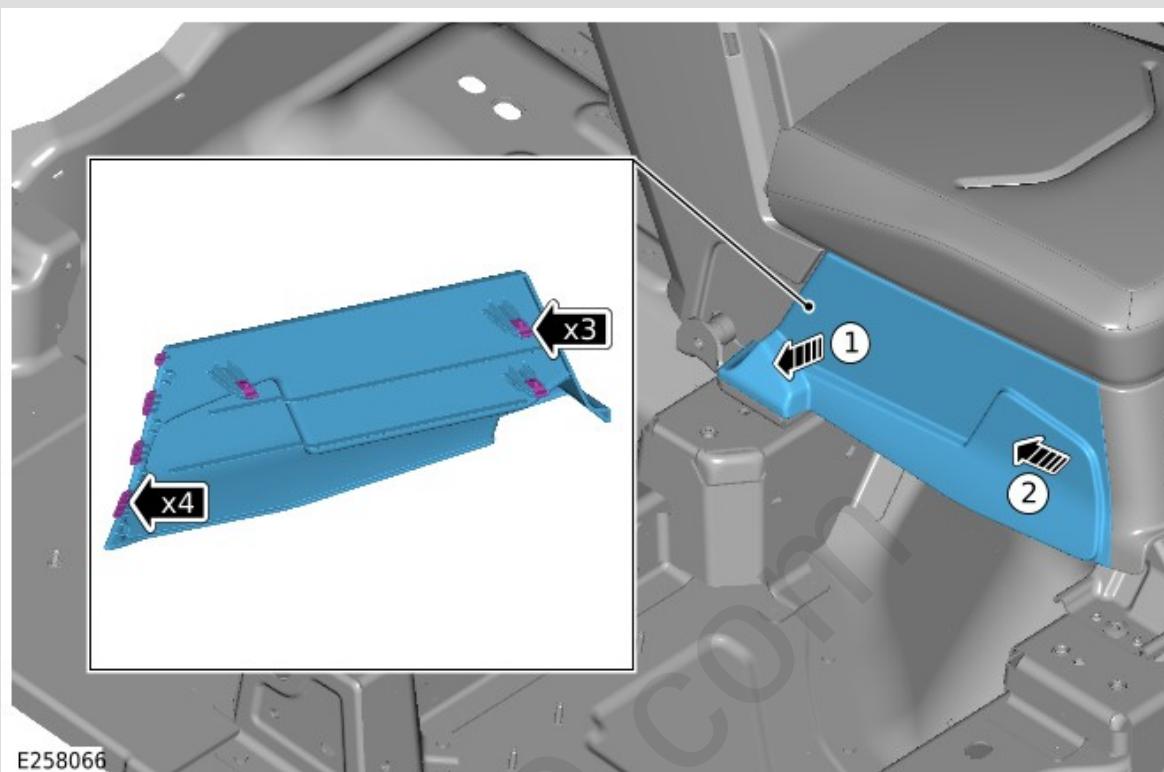


- Release the trim panel from the 3 clips.
- Release the trim panel from the 4 clips.
- Remove the center seat trim panel.

3.

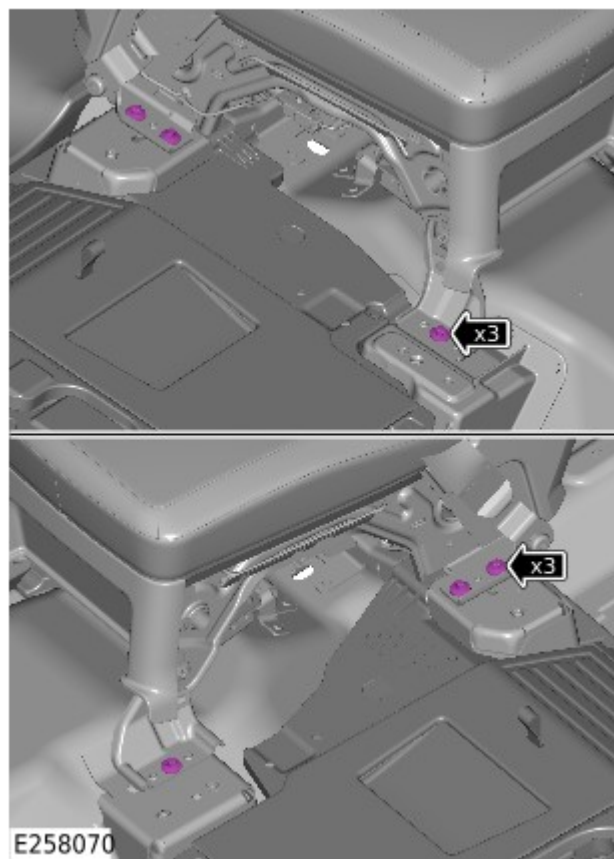


Remove the 6 bolts.

4.

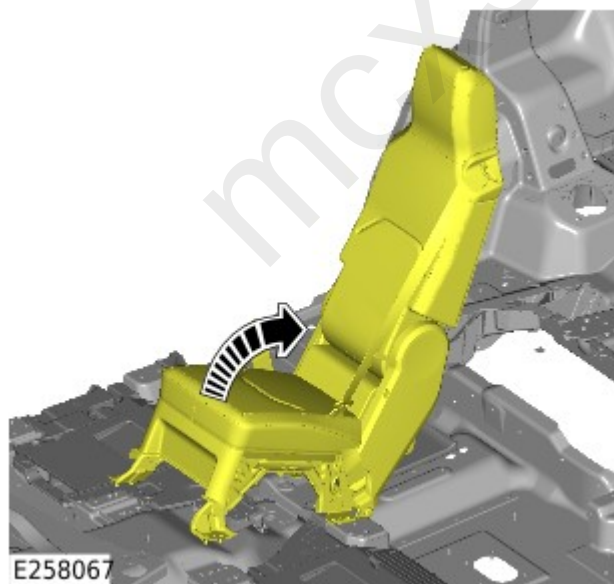

Carefully tip the front row center seat.

5.

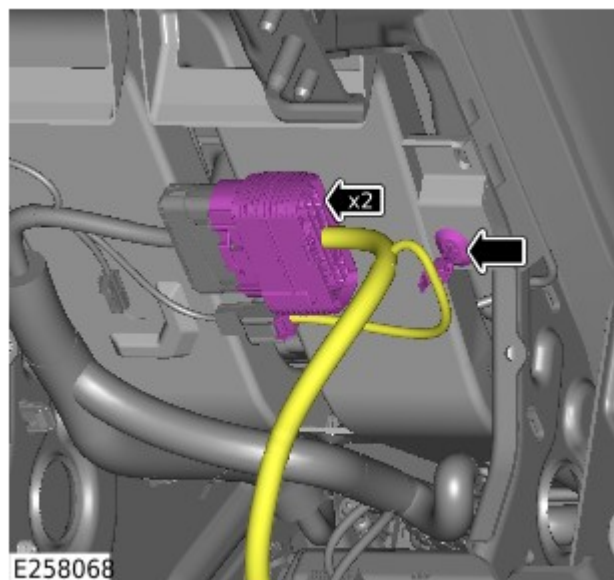


- Release the wiring harness clip.
- Disconnect the 2 electrical connectors.

6.



WARNING:

This step requires the aid of another technician.

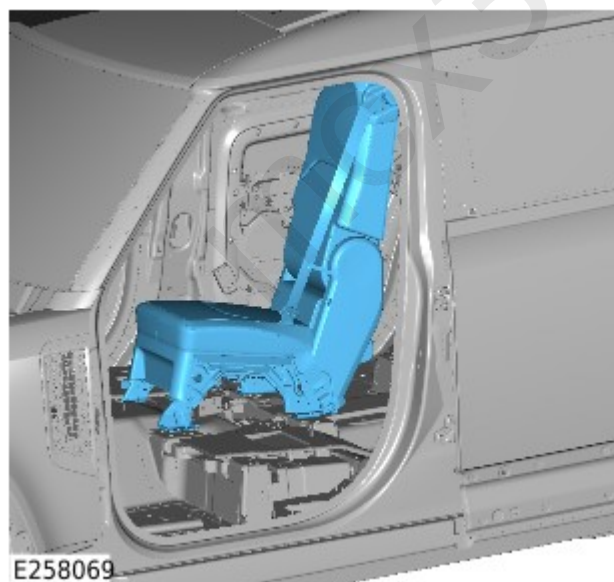

Remove the front row center seat.

INSTALLATION

1.



WARNING:

This step requires the aid of another technician.

Install the front row center seat.

2.

Carefully tip the front row center seat.

3.

- Install the wiring harness clip.
- Connect the 2 electrical connectors.

4.

Install and tighten the 6 bolts.

Torque: 48Nm

5.



NOTE:

Repeat the step for the other side.

- Install the trim panel to the 4 clips.
- Install the trim panel to the 3 clips.
- Install the center seat trim panel.

6.

Install both front row seats.

Refer to: [Front Row Seat - Vehicles With: Power Seats](#) (501-10 Seating, Removal and Installation).

Refer to: [Front Row Seat - Vehicles Without: Power Seats](#) (501-10 Seating, Removal and Installation).