


GLASS, FRAMES AND MECHANISMS (G2344392)

SPECIFICATIONS


Torque Specifications

COMPONENT TORQUE LOCATION

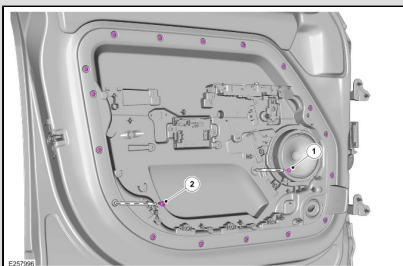


	DESCRIPTION	NM	LB-FT	LB-IN
1	Front door inner panel screw	3.2	-	28
2	Front door inner panel bolt	6	-	53

COMPONENT TORQUE LOCATION

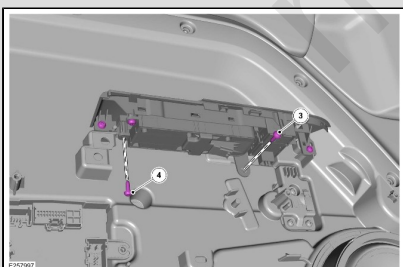


	DESCRIPTION	NM	LB-FT	LB-IN
3	Door switchpack assembly screw	5	-	44
4	Door window control switch screw	2	-	18

COMPONENT TORQUE LOCATION

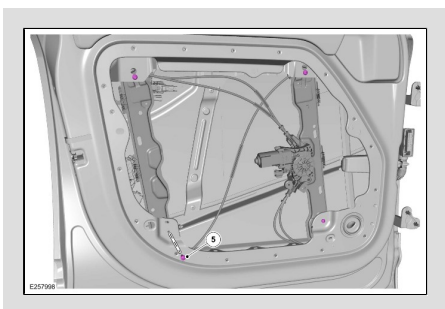


	DESCRIPTION	NM	LB-FT	LB-IN
5	Front door window regulator bolt	7	-	62

COMPONENT TORQUE LOCATION

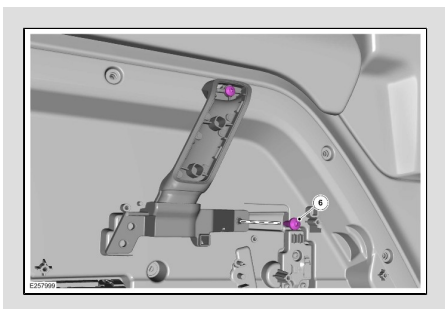


	DESCRIPTION	NM	LB-FT	LB-IN
6	Interior door handle bolt	6	-	53


COMPONENT TORQUE LOCATION

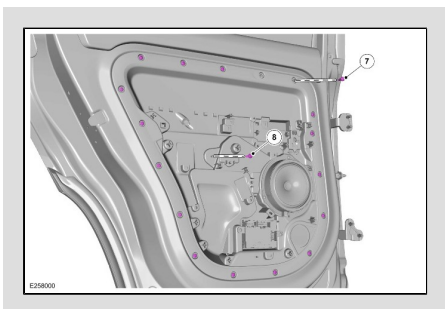

	DESCRIPTION	NM	LB-FT	LB-IN
7	Rear door inner panel bolt	6	-	53
8	Rear door inner panel screw	3.2	-	28

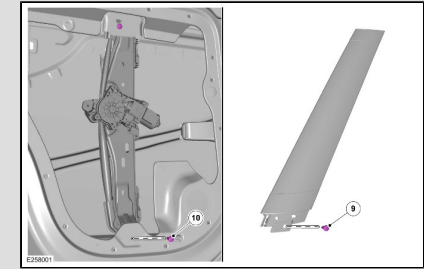COMPONENT TORQUE LOCATION				
				

	DESCRIPTION	NM	LB-FT	LB-IN
9	Windshield moulding bolt	6	-	53
10	Rear window regulator bolt	7	-	62

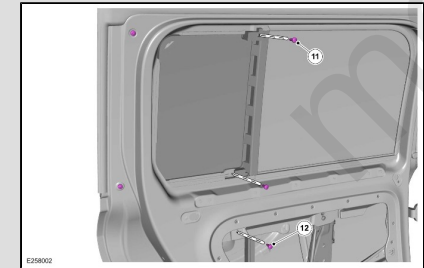COMPONENT TORQUE LOCATION				
				

	DESCRIPTION	NM	LB-FT	LB-IN
11	Rear door fixed window screw	4	-	35
12	Rear door fixed window bolt	6	-	53