

PUBLISHED: 14-OCT-2019
2020.0 DEFENDER (LE), 501-11

GLASS, FRAMES AND MECHANISMS

DRIVER DOOR WINDOW CONTROL SWITCH (G2416815)

mcx30.com

REMOVAL

 NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the front door trim panel.


Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

- 3.

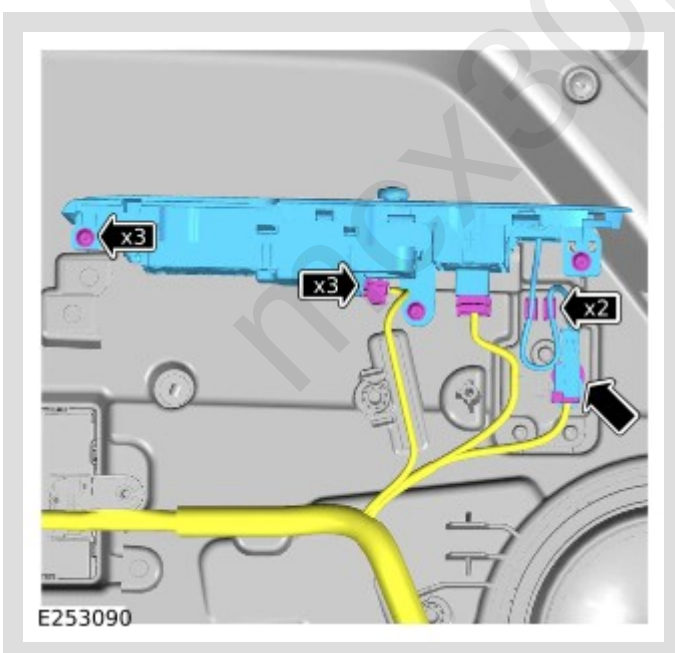

- Disconnect the 3 electrical connectors from the driver door switchpack.
- Release the connector.
- Release the 2 wiring harness clips.
- Remove the 3 screws.
- Remove the driver door switchpack assembly.

4.

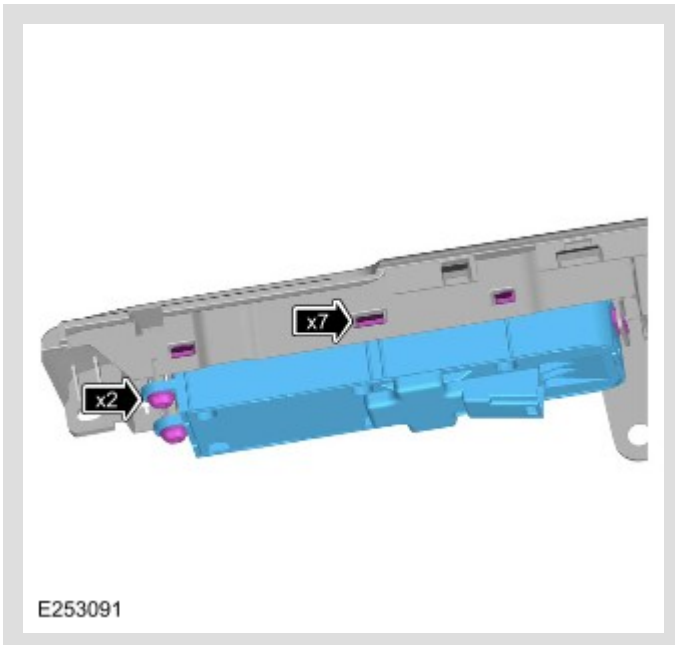

- Remove the 2 screws.
- Release the 7 clips.
- Remove the driver door window control switch.

INSTALLATION

1.

- Install the driver door window control switch into the bracket.
- Install and tighten the 2 screws.

Torque: 2Nm

2.

- Install the driver door control switch assembly.
- Install and tighten the 3 bolts.
Torque: 5Nm
- Install the electrical connector.
- Install the 2 wiring harness clips.
- Connect the 3 electrical connectors to the driver door switchpack.

3.

Install the front door trim panel.

Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

cmjjaGFyZG1vbnRvbjsyMDIwLTASLTE4VDEyOjM4OjQwLjYxM1o7OTluNDAuMTg5LjUwOw==

mcx30.com