

PUBLISHED: 02-MAR-2020
2020.0 DEFENDER (LE), 501-20A

SEATBELT SYSTEM

FRONT ROW SEATBELT BUCKLE – VEHICLES WITHOUT: POWER SEATS (G2414462)

mcx30.com

REMOVAL

 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains illustrations for right side components, left side components are similar.


1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the front row seat.


Refer to: [Front Row Seat - Vehicles Without Power Seats](#) (501-10 Seating, Removal and Installation).

- 3.

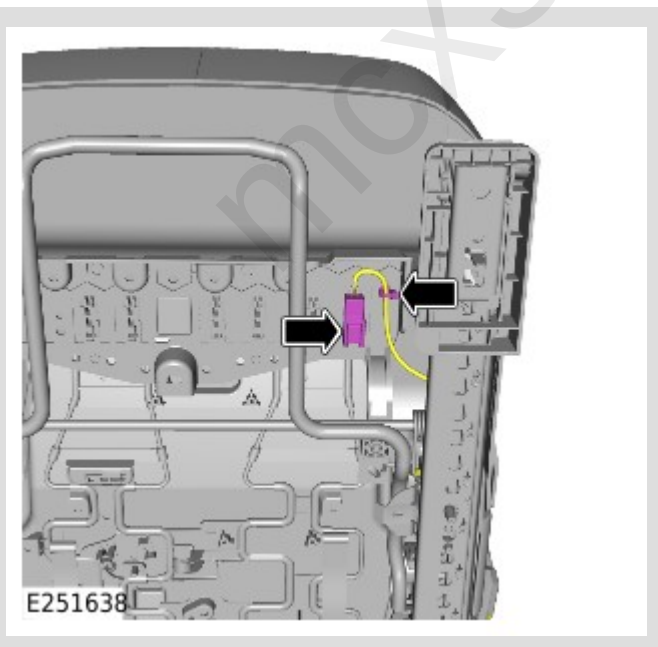

- Release the clip.
- Disconnect the electrical connector.


4.

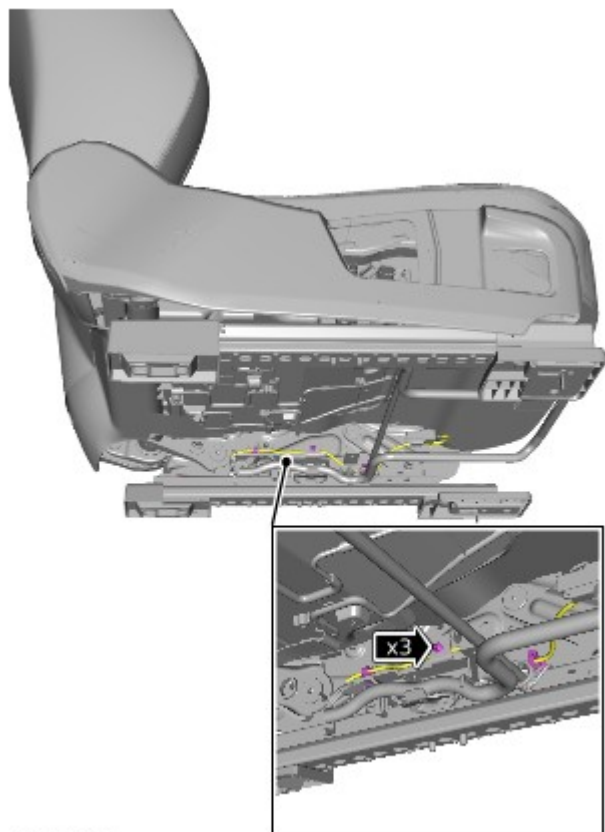

E251635

- Release the 3 clips.
- Release the wiring harness.

5.

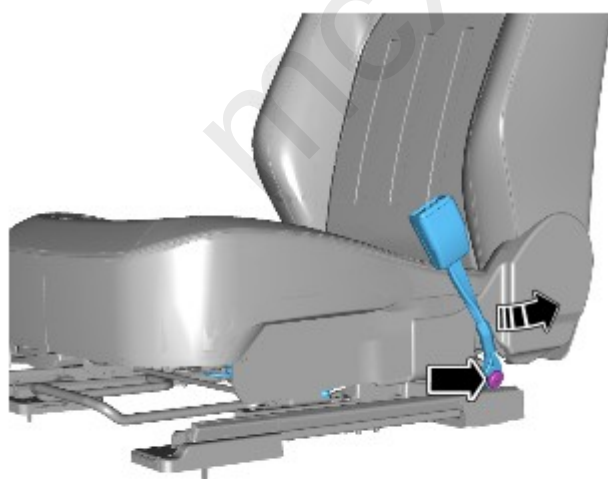

E251636

- Remove the bolt.
- Remove the front row seatbelt buckle.

INSTALLATION

1.

- Install the front row seatbelt buckle.
- Tighten the bolt.
Torque: 25Nm

2.

- Install the 3 clips.
- Install the wiring harness.

3.

- Install the clip.
- Connect the electrical connector.

4.

Install the front row seat.

Refer to: [Front Row Seat - Vehicles Without: Power Seats](#) (501-10 Seating, Removal and Installation).

5.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).