


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH


1. Body Hardware and Trim
2. Instrument Panel and Console Trim
3. Repair Instructions
- 4.

Front Floor Console Armrest Replacement


Removal Procedure

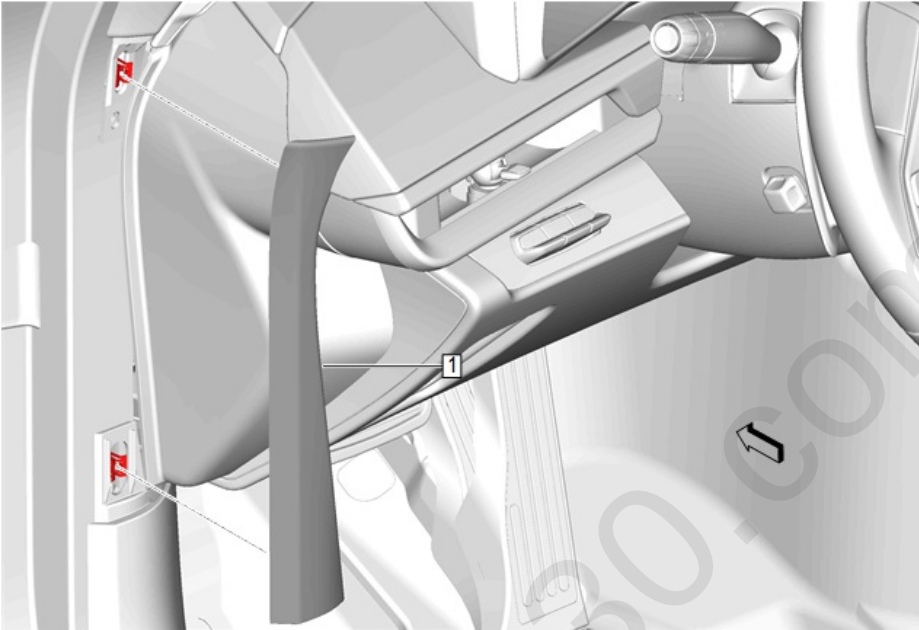

1. [Click here for full size](#)
2. Remove the left body hinge pillar garnish molding (1).Body Hinge Pillar Garnish Molding Replacement

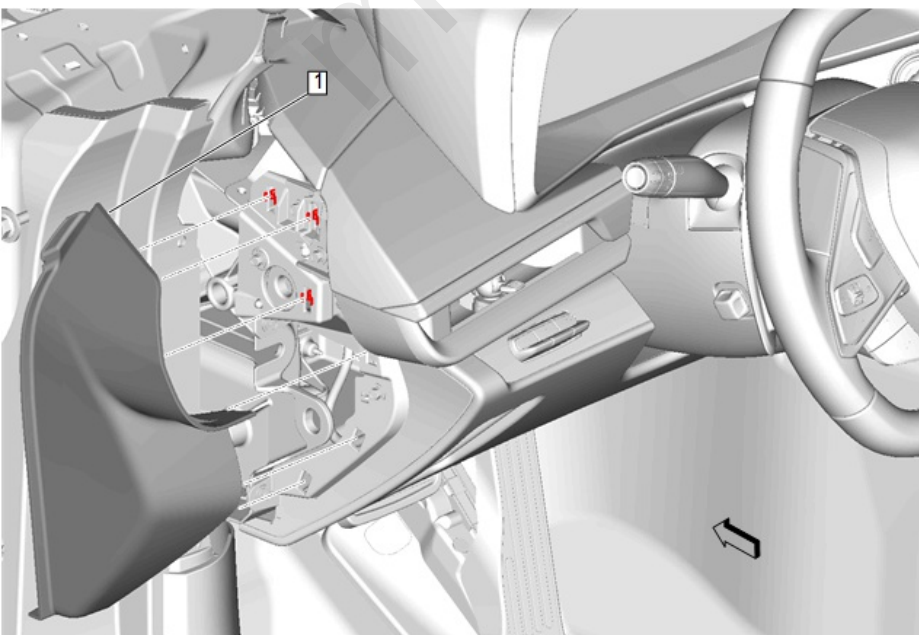


3. [Click here for full size](#)
4. Remove the left instrument panel outer trim cover (1).Instrument Panel Outer Trim Cover Replacement

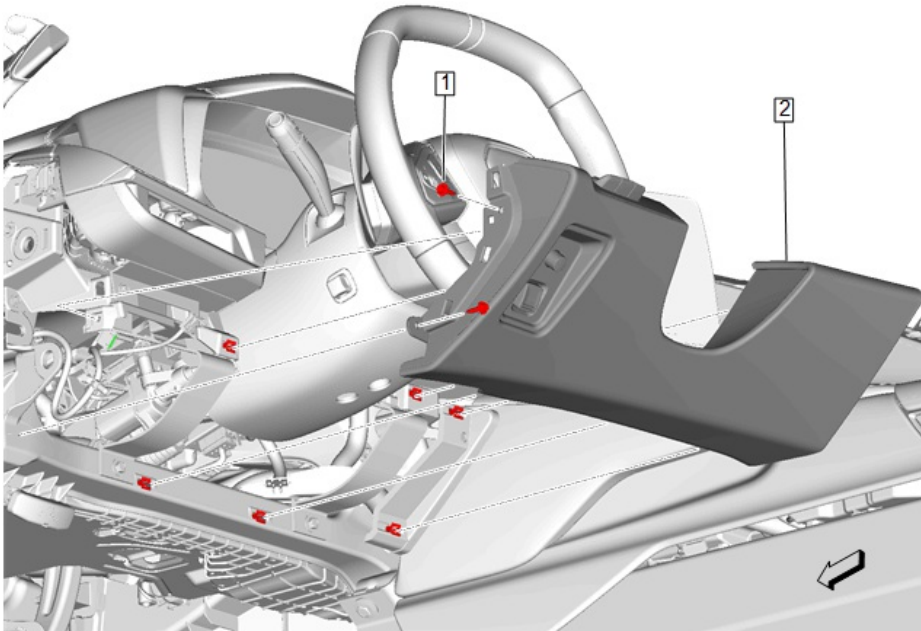


5.
[Click here for full size](#)

6. Instrument Panel Knee Bolster (2) >> Remove - Instrument Panel Knee Bolster Replacement

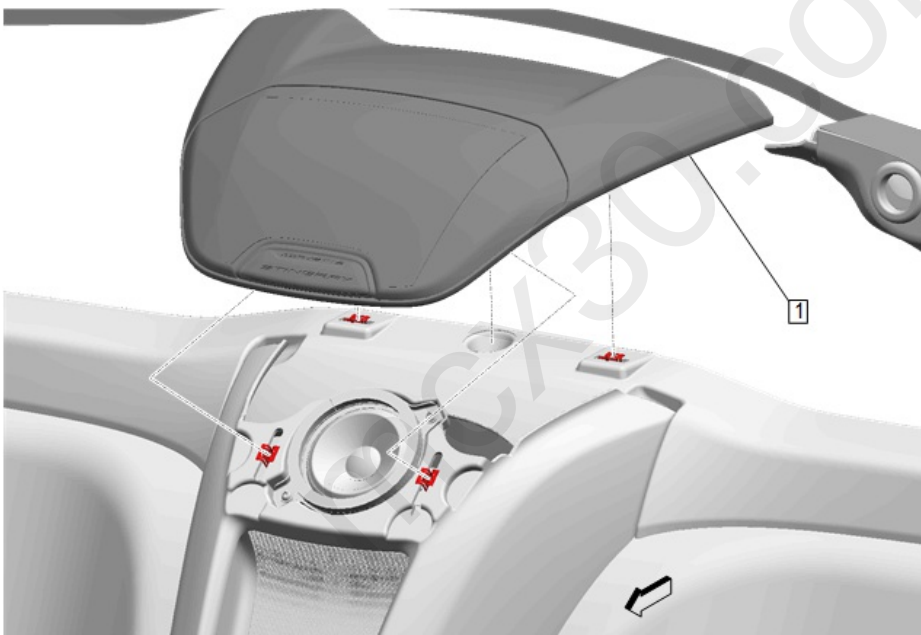


7.
[Click here for full size](#)

8. Radio Rear Quarter Trim Panel Speaker Grille (1) >> Remove - Radio Rear Quarter Trim Panel Speaker Grille Replacement

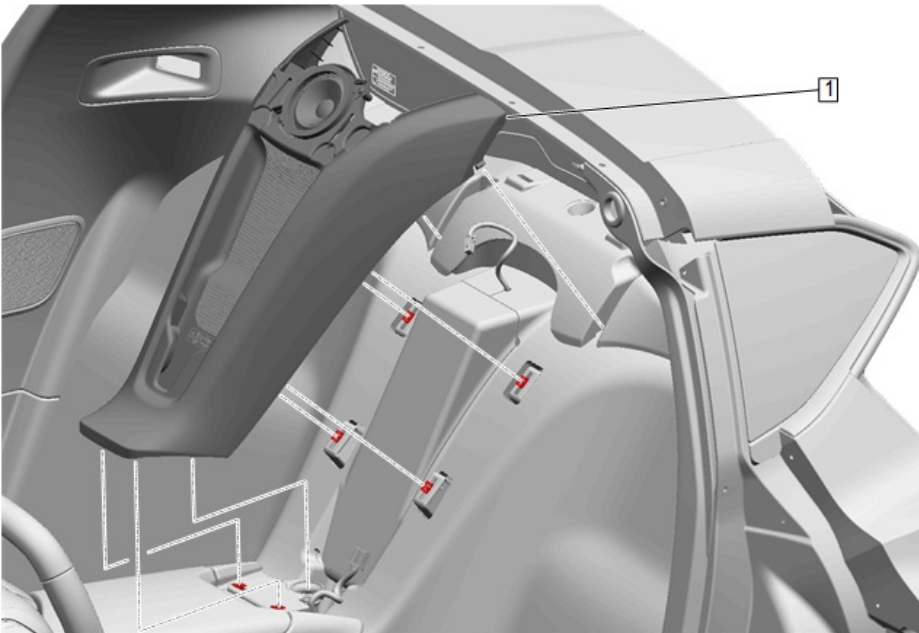


9.
[Click here for full size](#)

10. Rear Compartment Closeout Panel (1) >> Remove - Rear Compartment Closeout Panel Replacement

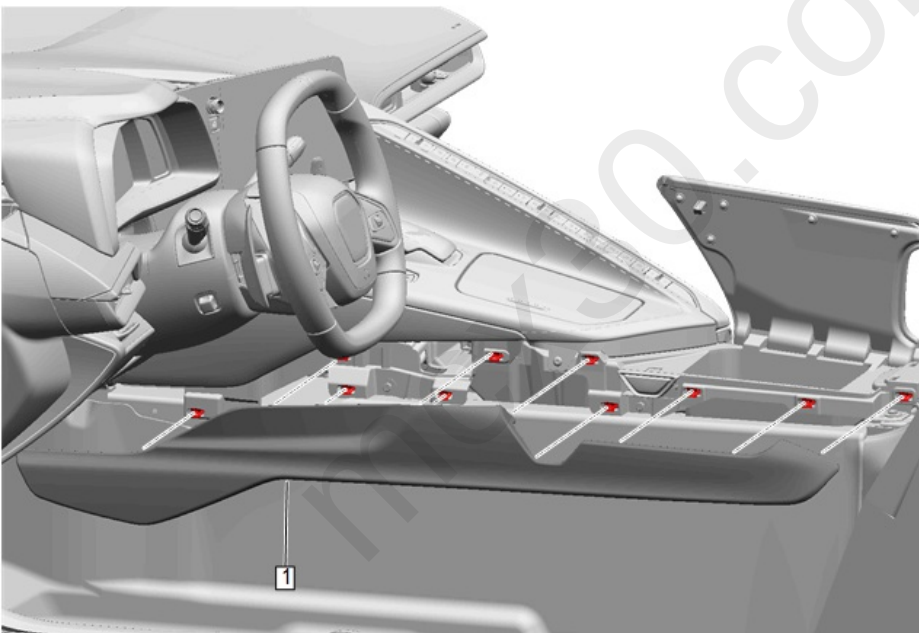


11.
[Click here for full size](#)


12. Front Floor Rear Console Side Trim Panel - Left Side (1) >> Remove - Front Floor Rear Console Side Trim Panel Replacement - Left Side

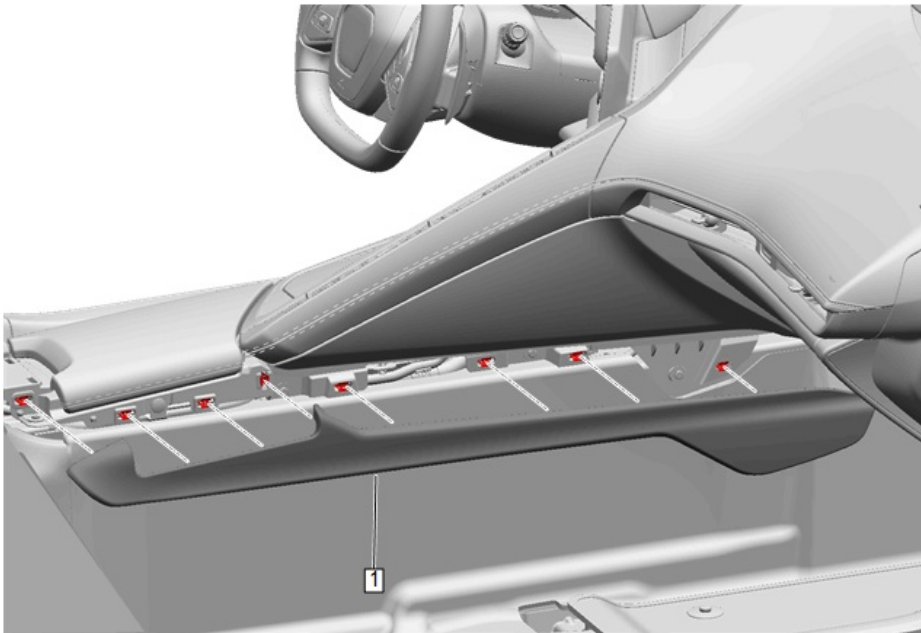

13. [Click here for full size](#)
14. Front Floor Rear Console Side Trim Panel - Right Side (1) >> Remove - Front Floor Rear Console Side Trim Panel Replacement - Right Side

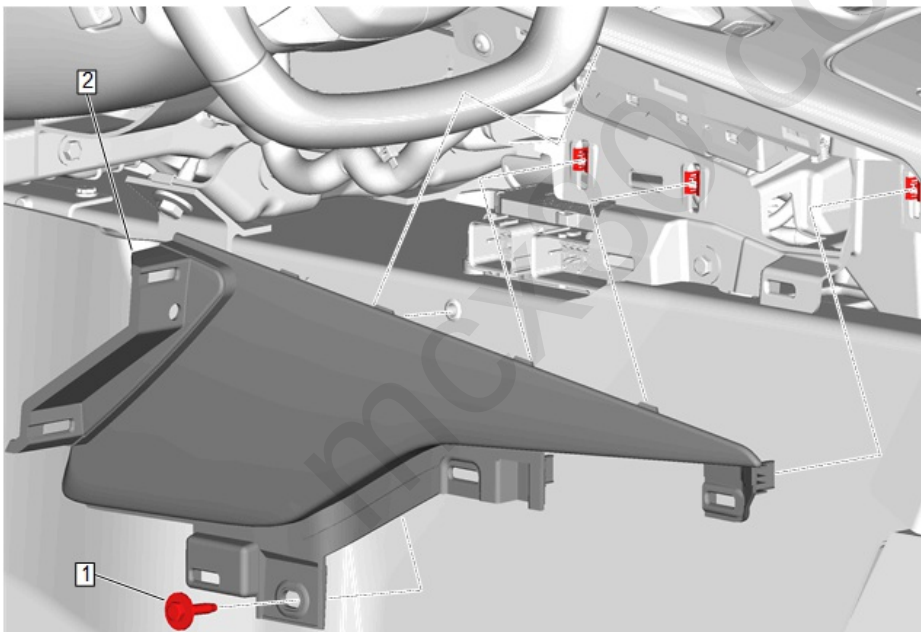


15. [Click here for full size](#)
16. Front Floor Console Applique - Left Side (2) >> Remove - Front Floor Console Applique Replacement - Left Side

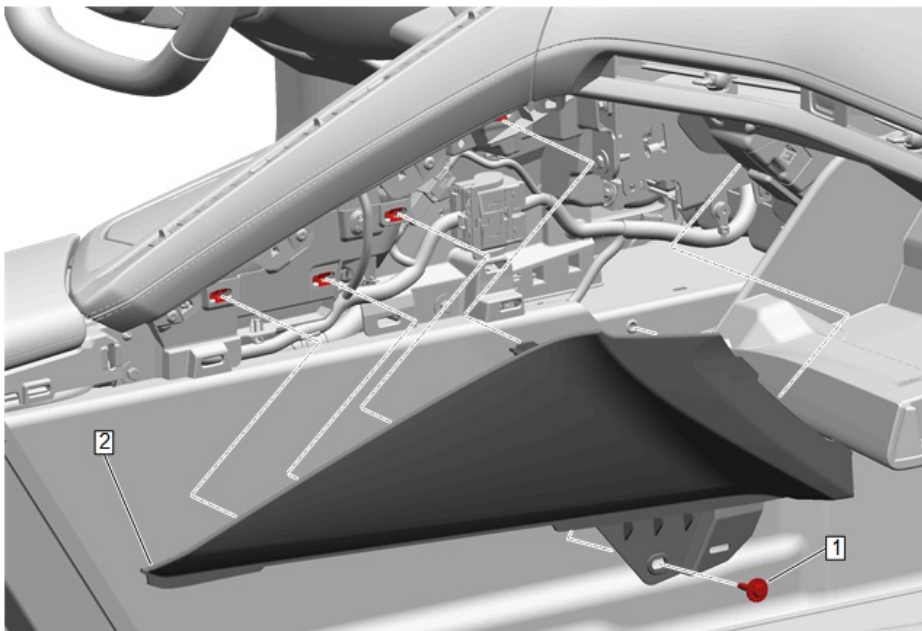


17.
[Click here for full size](#)

18. Front Floor Console Extension Panel (2) >> Remove - Front Floor Console Extension Panel Replacement

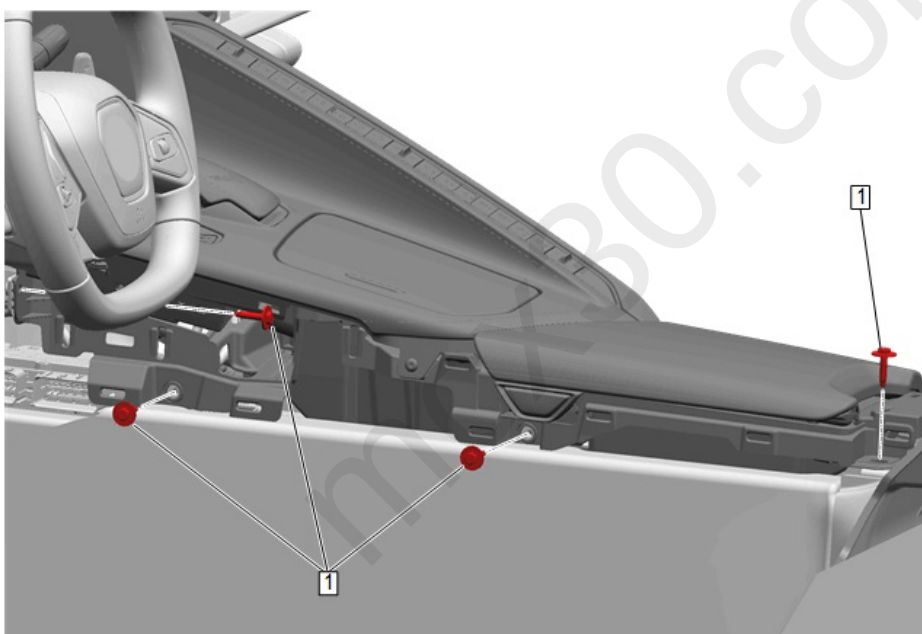


19.
[Click here for full size](#)

20. Front Floor Console Compartment Bolt (1) >> Remove [4x]

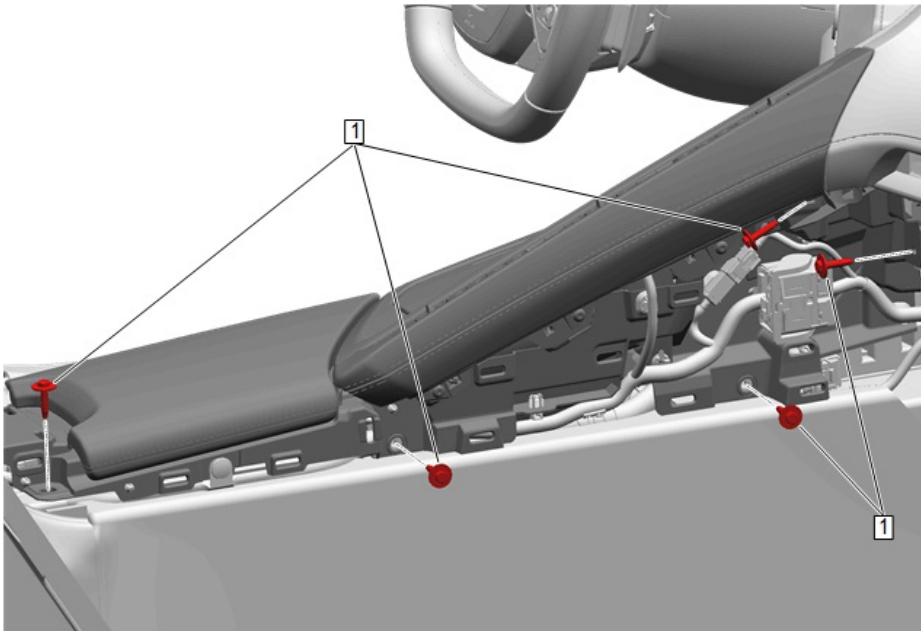

21. [Click here for full size](#)
22. Front Floor Console Compartment Bolt (1) >> Remove [5x]

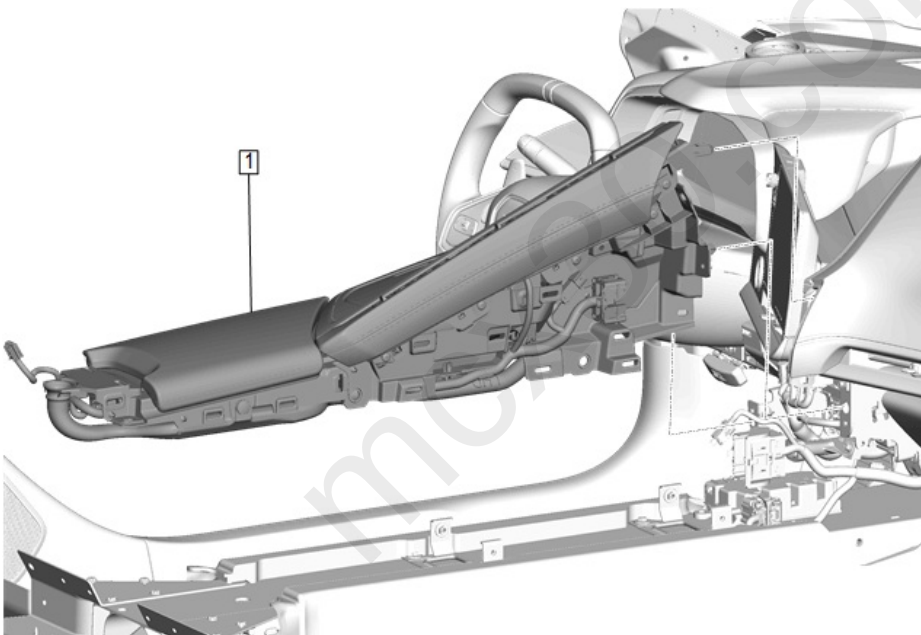

23. [Click here for full size](#)
24. Disconnect the electrical connectors.
25. Front Floor Console Compartment (1) >> Remove
26. [Click here for full size](#)
27. Open the armrest cover.
28. [Click here for full size](#)
29. Front Floor Console Armrest Bumper (1) >> Remove [5x]
30. Front Floor Console Armrest Bolt (2) >> Remove [5x]
31. [Click here for full size](#)
32. Using a suitable trim tool, remove the cover.


33. Front Floor Console Armrest Hinge Cover (1) >> Remove
34. [Click here for full size](#)
35. Make note of the placements of the front floor console compartment door spring (1) and front floor console armrest dampener (2) to the armrest and compartment. This will aid you with the installation of those components.
36. [Click here for full size](#)
37. Warning:

The armrest hinge springs are under pressure. Remove the pivot pin carefully in order to avoid bodily injury.
38. Using a suitable pair of pliers, remove the front floor console armrest pivot pin (1).
39. [Click here for full size](#)
40. Front Floor Console Armrest (1) >> Remove
41. Front Floor Console Armrest Dampener (2) >> Remove
42. Front Floor Console Compartment Door Spring (3) >> Remove
43. [Click here for full size](#)
44. Front Floor Console Armrest Bolt @ Front Floor Console Armrest Latch (1) >> Remove [3x]
45. Front Floor Console Armrest Latch (2) >> Remove

Installation Procedure

1. [Click here for full size](#)
2. Front Floor Console Armrest Latch (2) >> Install
3. Caution:

Refer to Fastener Caution.
4. Front Floor Console Armrest Bolt @ Front Floor Console Armrest Latch (1) >> Install and tighten [3x]1.5N-m (13 lb in)
5. [Click here for full size](#)
6. Front Floor Console Compartment Door Spring (1) >> Install
7. Front Floor Console Armrest Dampener (2) >> Install
8. Front Floor Console Armrest (3) >> Install
9. [Click here for full size](#)
10. Front Floor Console Armrest Pivot Pin (1) >> Install
11. [Click here for full size](#)
12. Front Floor Console Armrest Hinge Cover (1) >> Install
13. [Click here for full size](#)
14. Move the front floor console armrest and front floor console armrest hinge cover (1) together so the assembly is at the $\tilde{A}, \tilde{A}^{1/4}$ open position. The front floor console armrest hinge cover (1) cannot snap together until it is in this position.
15. [Click here for full size](#)
16. Front Floor Console Armrest Bolt (2) >> Install and tighten [5x]0.5N-m (4> lb in)
17. Front Floor Console Armrest Bumper (1) >> Install and tighten [5x]
18. [Click here for full size](#)
19. Close the armrest cover.

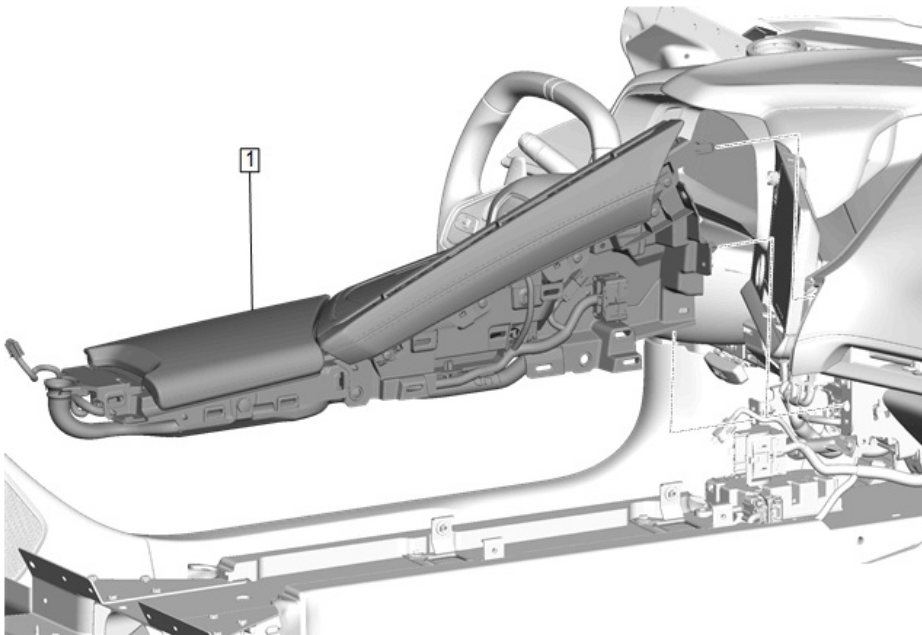


20. [Click here for full size](#)

21. Note:

Before installing guide the upper tab into the instrument panel.


22. Front Floor Console Compartment (1) >> Install

23. Connect the electrical connectors.

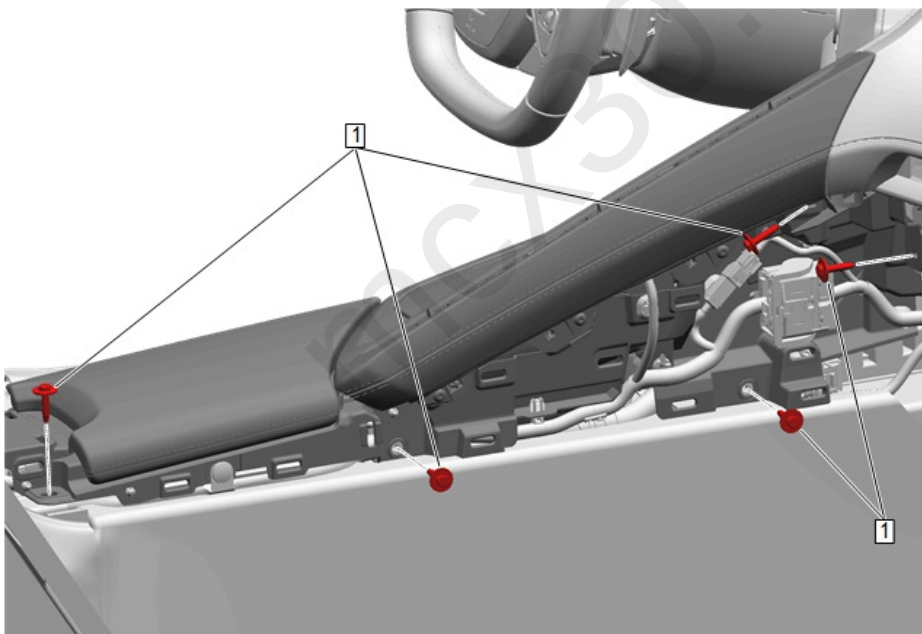


24. [Click here for full size](#)

25. Front Floor Console Compartment Bolt (1) >> Install and tighten [5x]7>N-m (62 lb in)

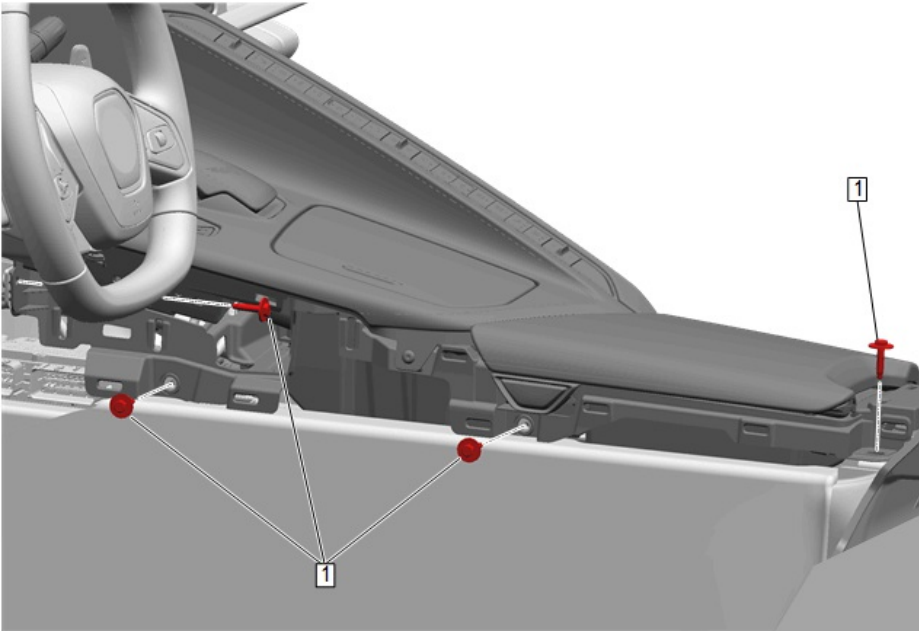


26.
[Click here for full size](#)

27. Front Floor Console Compartment Bolt (1) >> Install and tighten [4x]7>N-m (62 lb in)

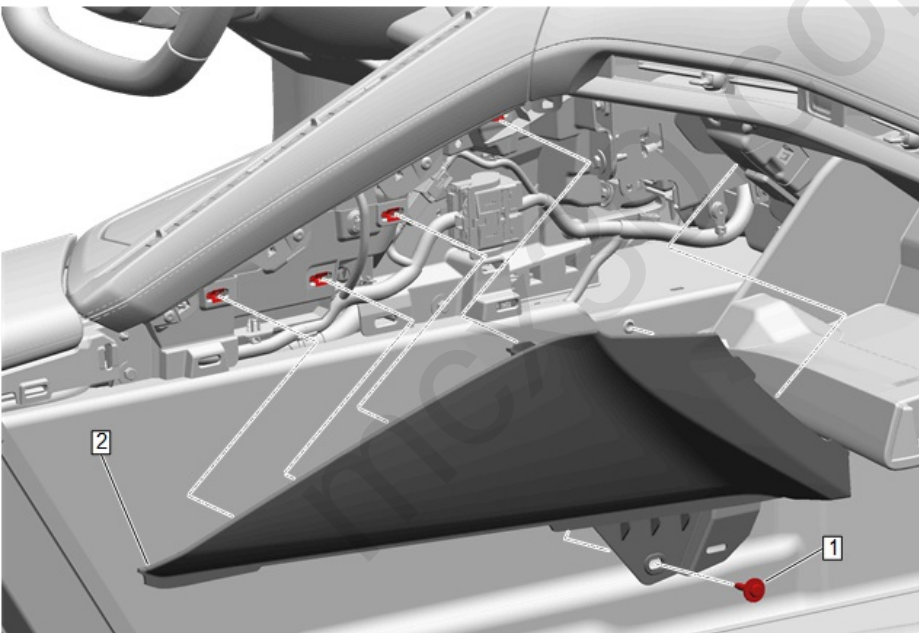


28.
[Click here for full size](#)

29. Front Floor Console Extension Panel (2) >> Install - Front Floor Console Extension Panel Replacement

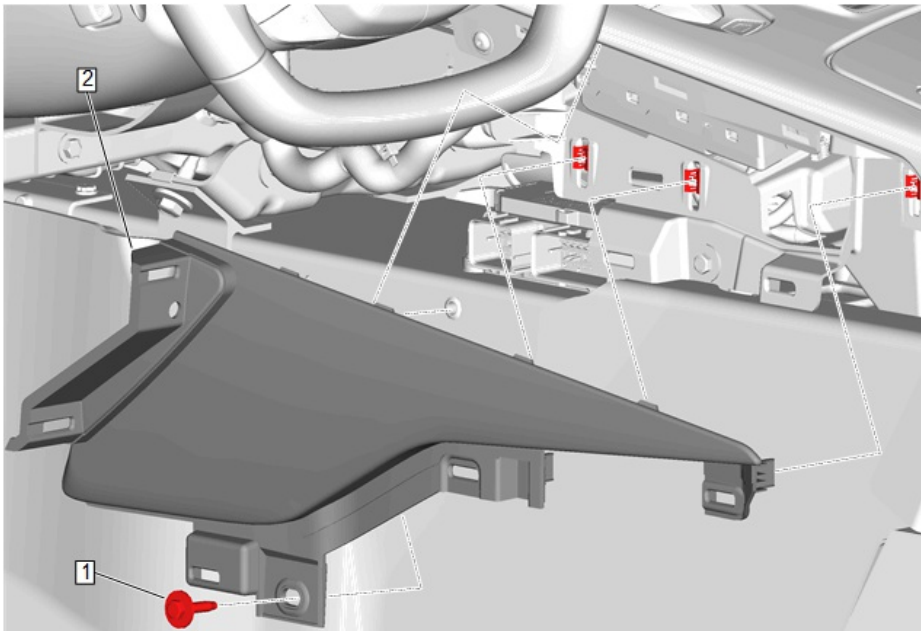


30.
[Click here for full size](#)

31. Front Floor Console Applique - Left Side (2) >> Install - Front Floor Console Applique Replacement - Left Side

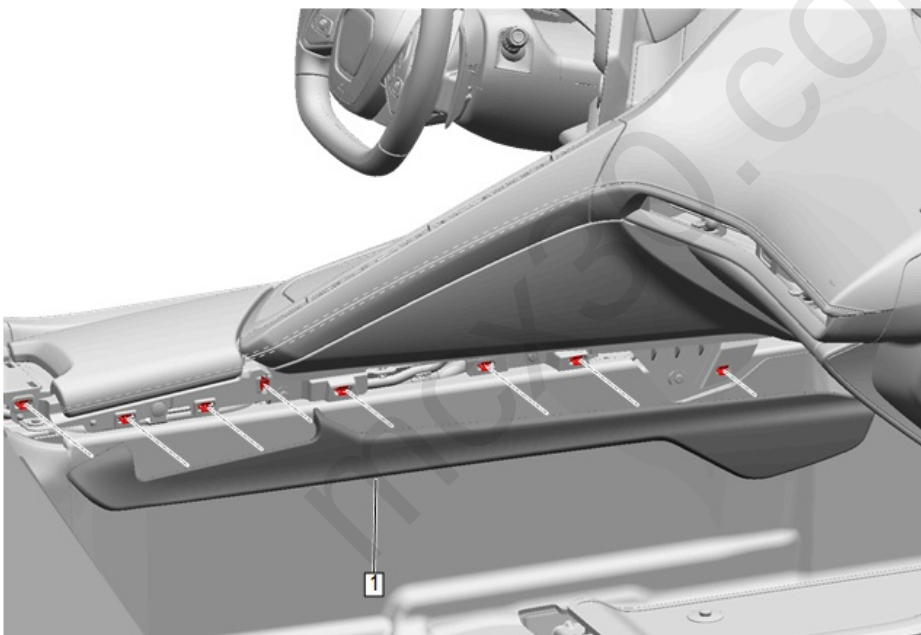

32.
[Click here for full size](#)

33. Front Floor Rear Console Side Trim Panel - Right Side (1) >> Install - Front Floor Rear Console Side Trim Panel Replacement - Right Side

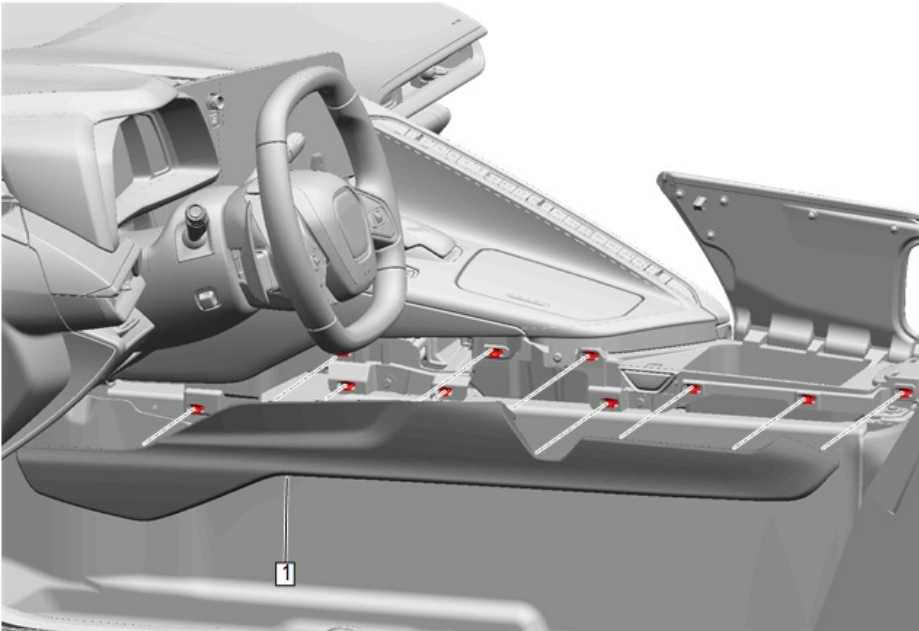


34.
[Click here for full size](#)

35. Front Floor Rear Console Side Trim Panel - Left Side (1) >> Install - Front Floor Rear Console Side Trim Panel Replacement - Left Side




36.
[Click here for full size](#)

37. Rear Compartment Closeout Panel (1) >> Install - Rear Compartment Closeout Panel Replacement

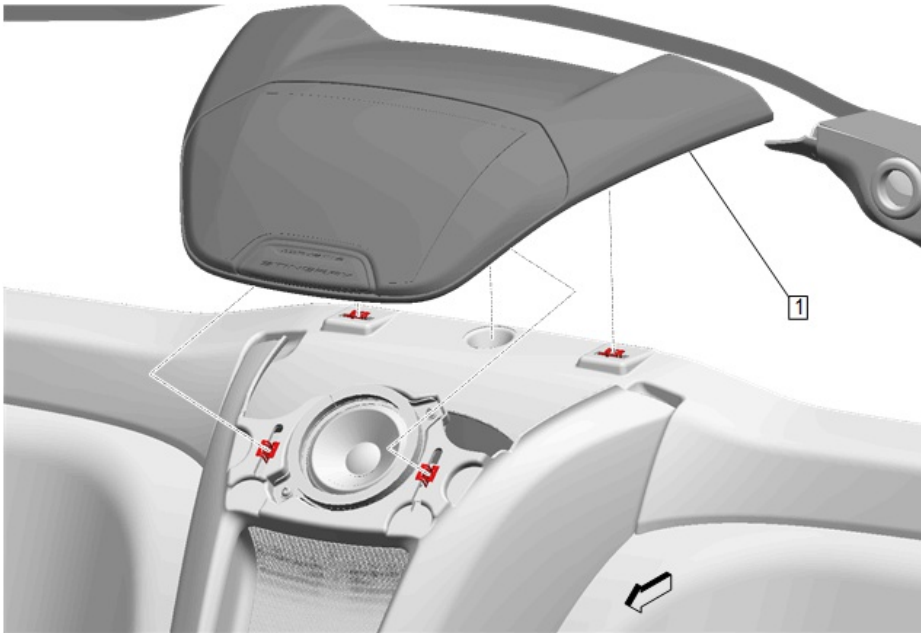


38.
[Click here for full size](#)

39. Radio Rear Quarter Trim Panel Speaker Grille (1) >> Install - Radio Rear Quarter Trim Panel Speaker Grille Replacement

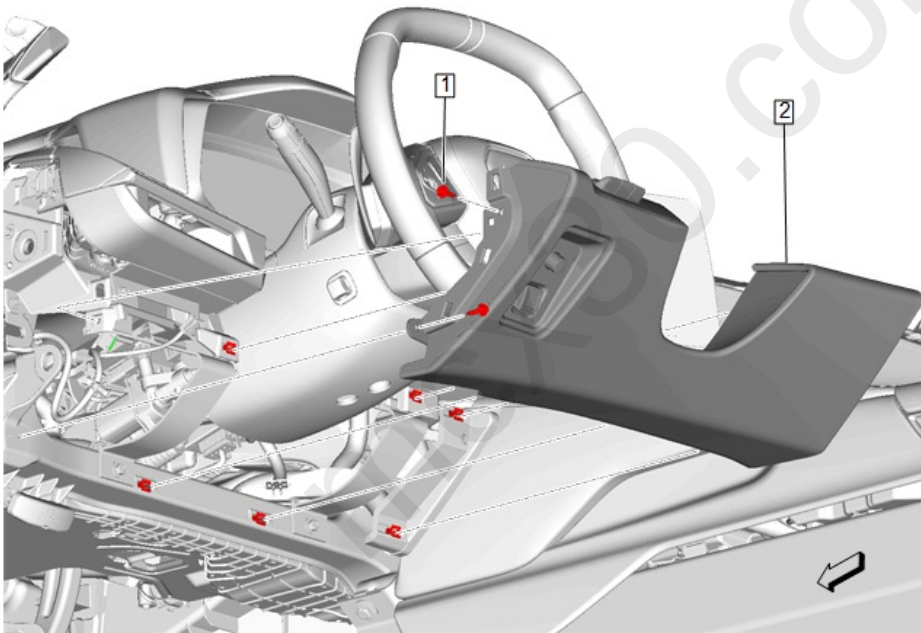


40.
[Click here for full size](#)

41. Instrument Panel Knee Bolster (2) >> Install - Instrument Panel Knee Bolster Replacement

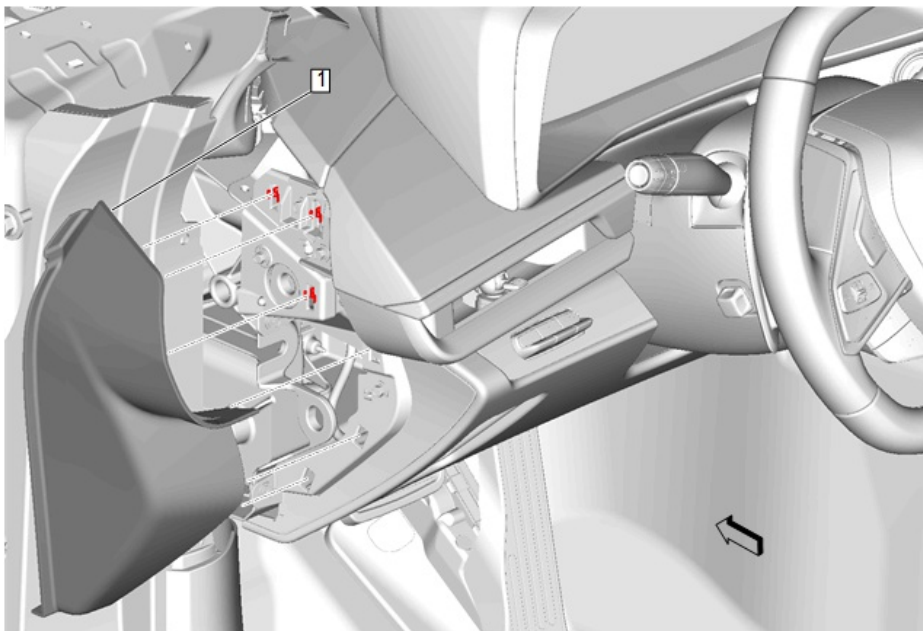

42.
[Click here for full size](#)

43. Install the left instrument panel outer trim cover (1).Instrument Panel Outer Trim Cover Replacement

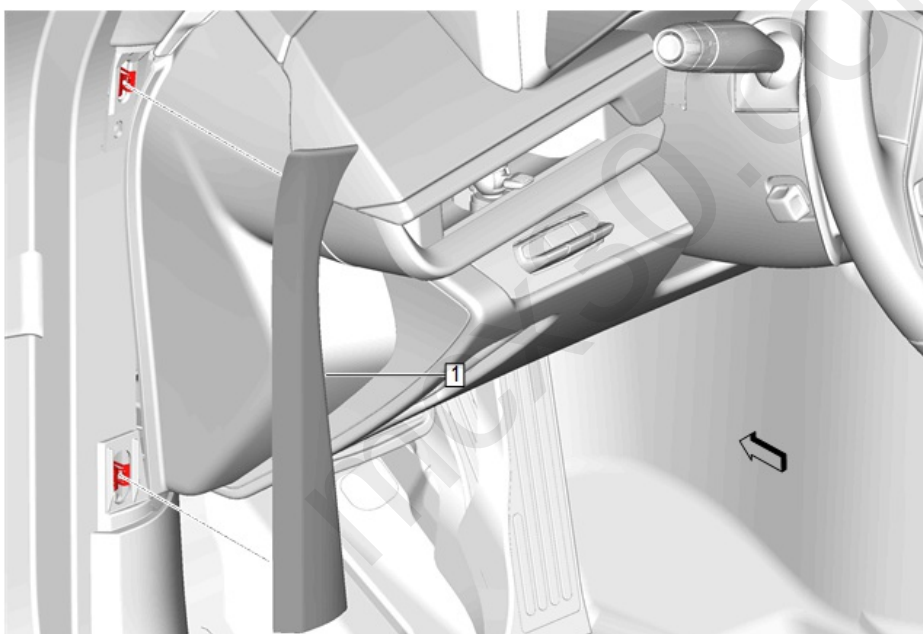

44.
[Click here for full size](#)

45. Install the left body hinge pillar garnish molding (1).Body Hinge Pillar Garnish Molding Replacement