


# 2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

1. Body Hardware and Trim
2. Instrument Panel and Console Trim
3. Repair Instructions
- 4.

## Instrument Panel Tie Bar Replacement

### Removal Procedure

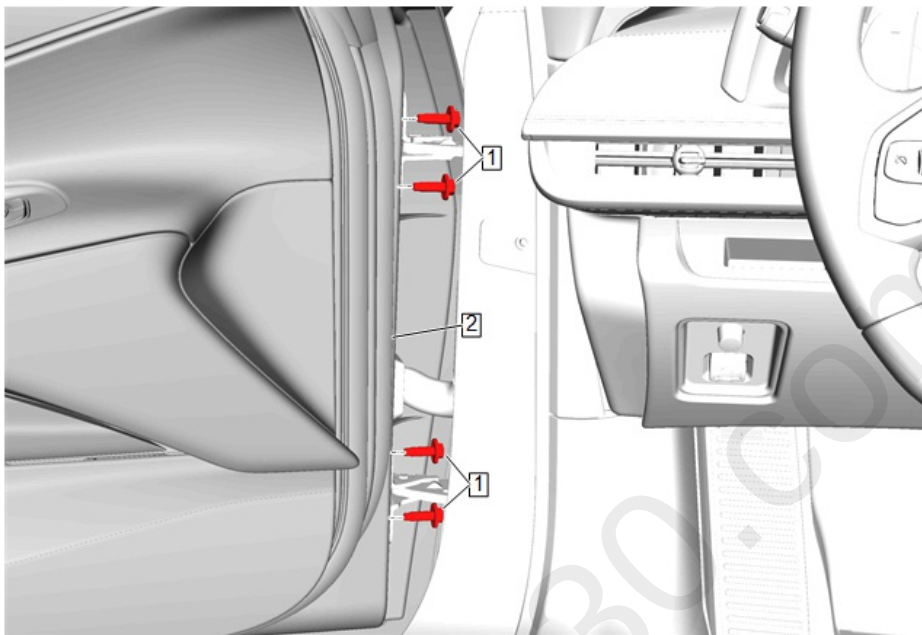


1. [Click here for full size](#)
2. Remove the left front side door (2) only. Front Side Door Replacement



3.  
[Click here for full size](#)

4. Remove the left and right front seats (2). Front Seat Removal and Installation

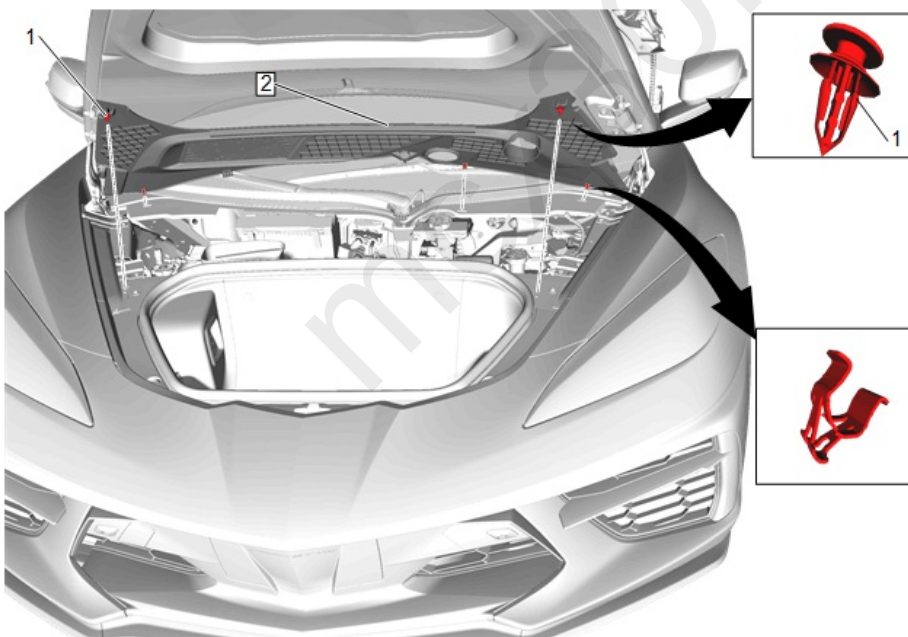

5.  
[Click here for full size](#)

6. Front Compartment Rear Access Cover (2) >>> Remove - Front Compartment Rear Access Cover Replacement

7. Recover the refrigerant. Refrigerant Recovery and Recharging


8. Drain the cooling system. Cooling System Draining and Filling



9.  
[Click here for full size](#)


10. Front Compartment Front Panel (1) >> Remove - Front Compartment Front Panel Replacement

11. Disconnect the negative battery cable. Battery Negative Cable Disconnection and Connection

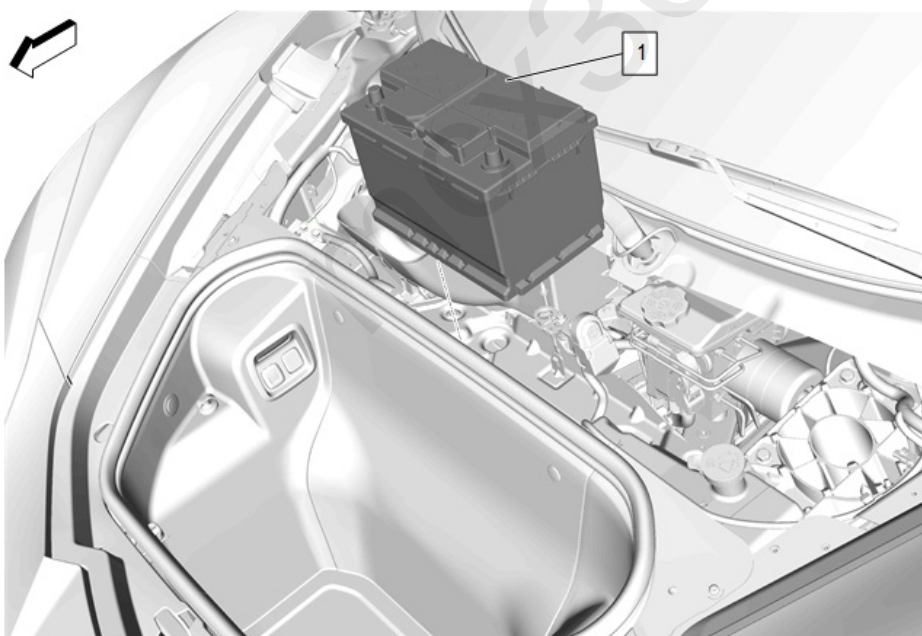


12.  
[Click here for full size](#)

13. Battery (1) >> Remove - Battery Replacement

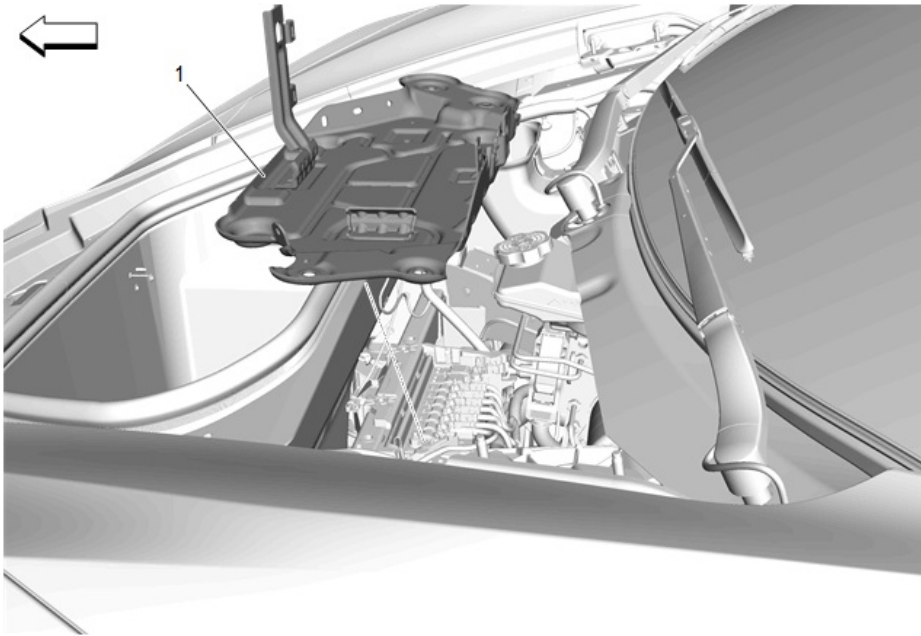

14.  
[Click here for full size](#)

15. Battery Tray (1) >> Remove - Battery Tray Replacement

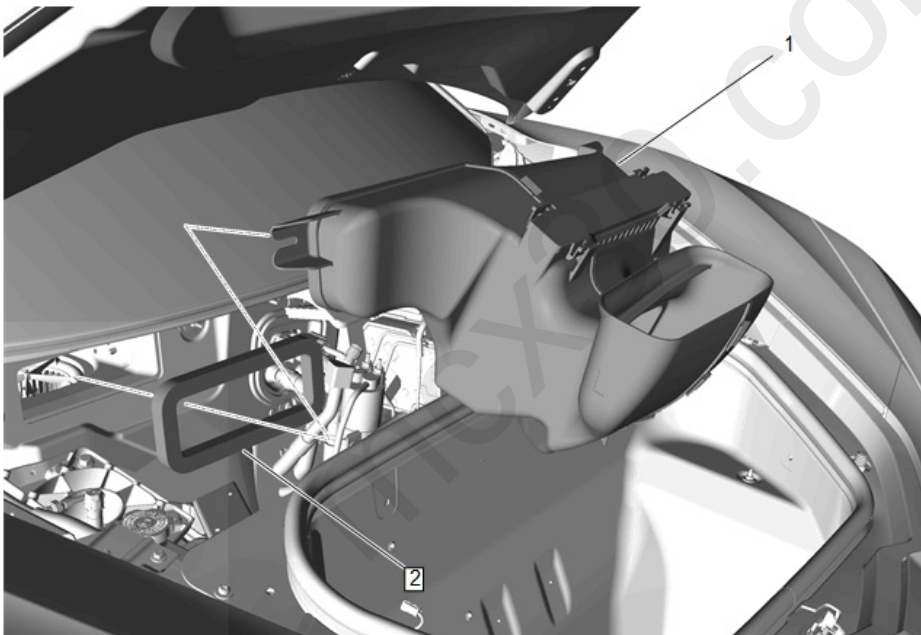

16.  
[Click here for full size](#)

17. Air Inlet Housing Front Panel (1) >> Remove - Air Inlet Housing Front Panel Replacement


18. [Click here for full size](#)

19. Air Conditioning Condenser and Evaporator Hose Fitting Nut (1) >>> Remove

20. Air Conditioning Evaporator Thermal Expansion Valve Stud (2) >> Remove


21. Radiator Inlet Hose @ Heater Core Inlet Tube >> Remove - Radiator Inlet Hose Replacement - Radiator Inlet Pipe to A/C Tube

22. Heater Outlet Hose @ Heater Core Outlet Tube >> Remove - Heater Outlet Hose Replacement

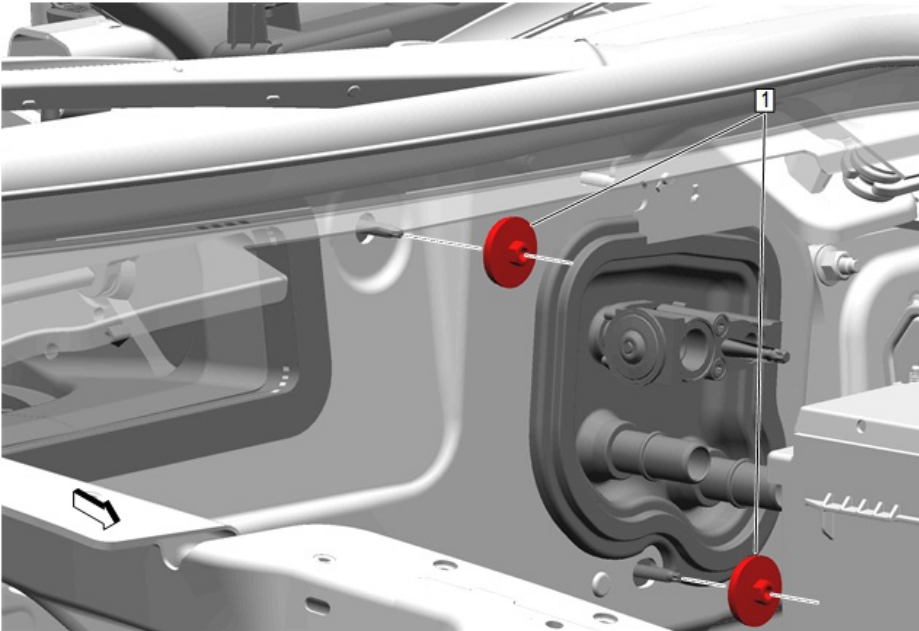


23.  
[Click here for full size](#)

24. Heater and Blower Module Nut (1) >>> Remove [2x]

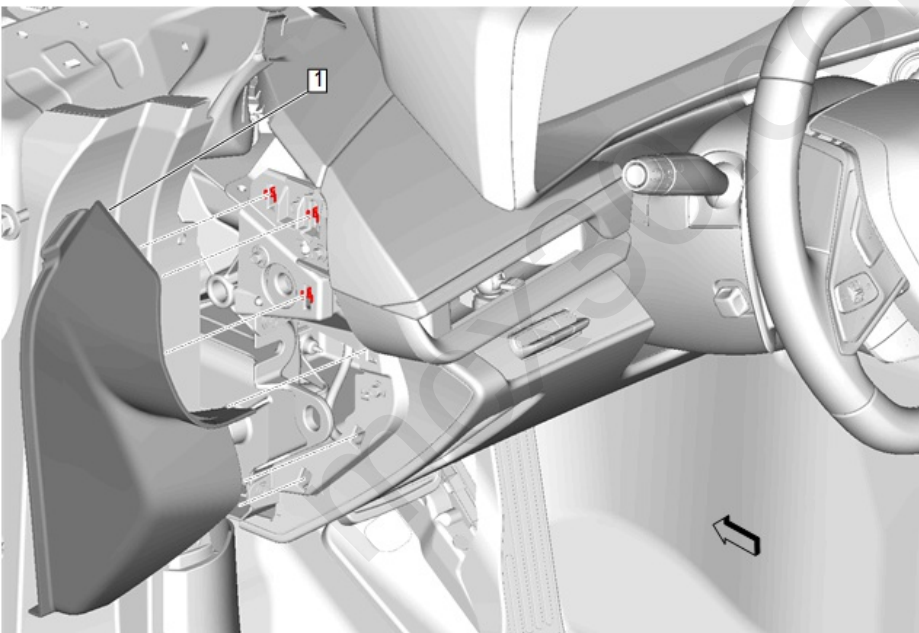


25.  
[Click here for full size](#)

26. Remove the left and right instrument panel outer trim cover (1). Instrument Panel Outer Trim Cover Replacement

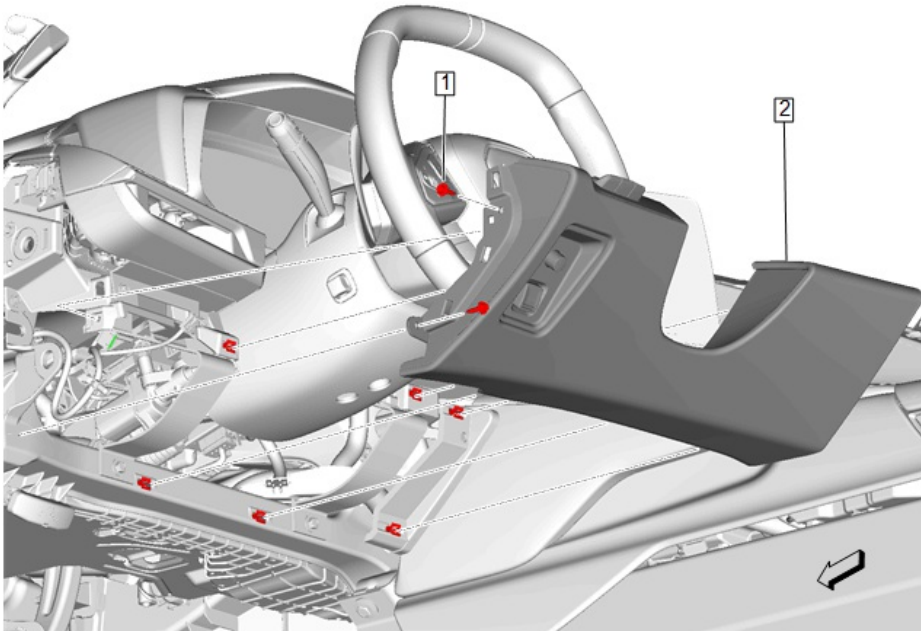


27.  
[Click here for full size](#)

28. Instrument Panel Knee Bolster (2) >> Remove - Instrument Panel Knee Bolster Replacement

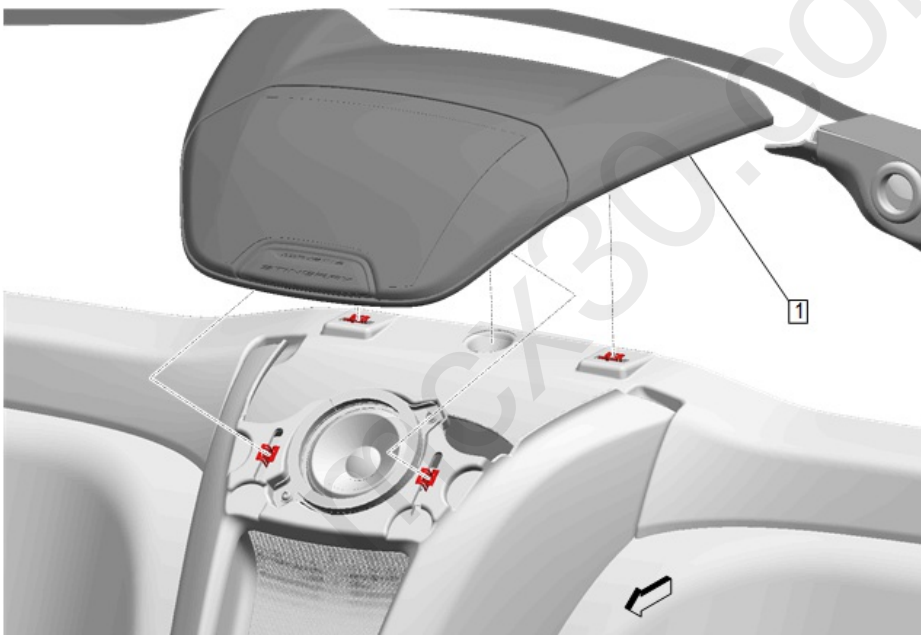


29.  
[Click here for full size](#)

30. Radio Rear Quarter Trim Panel Speaker Grille (1) >> Remove - Radio Rear Quarter Trim Panel Speaker Grille Replacement

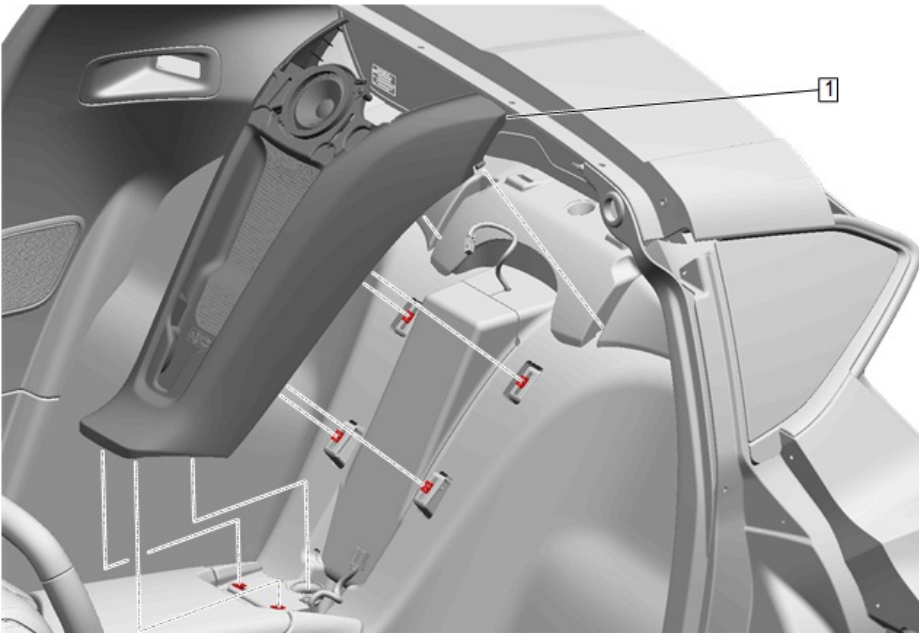


31.  
[Click here for full size](#)

32. [Rear Compartment Closeout Panel \(1\) >>> Remove - Rear Compartment Closeout Panel Replacement](#)

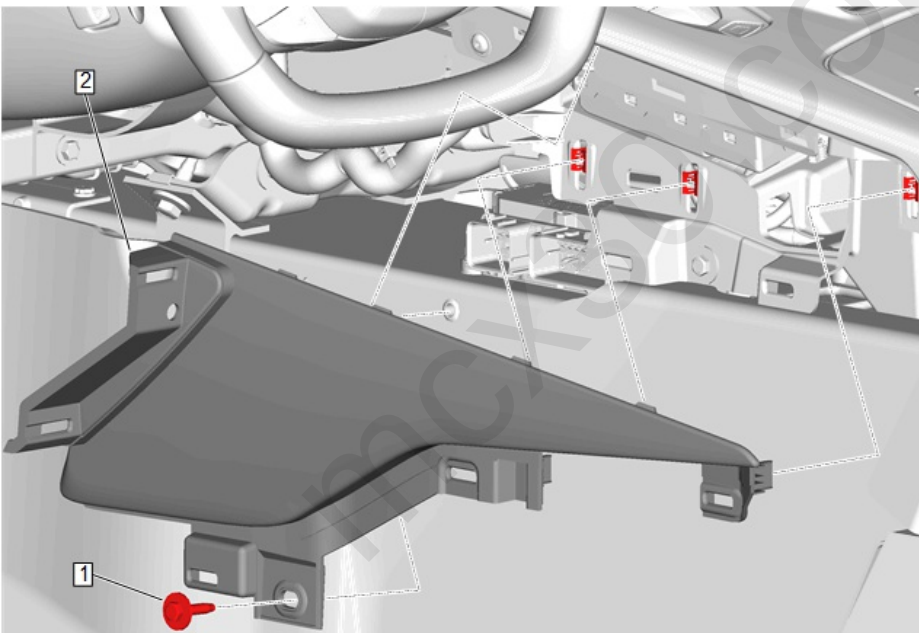


33.  
[Click here for full size](#)

34. [Front Floor Console Applique - Left Side \(2\) >>> Remove - Front Floor Console Applique Replacement - Left Side](#)

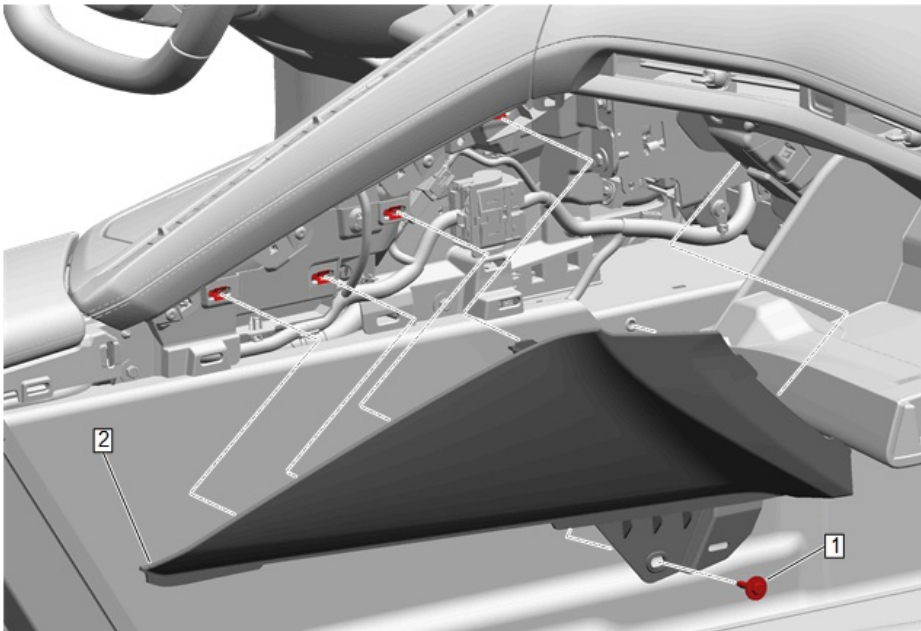


35.  
[Click here for full size](#)

36. Front Floor Console Extension Panel (2) >>> Remove - Front Floor Console Extension Panel Replacement

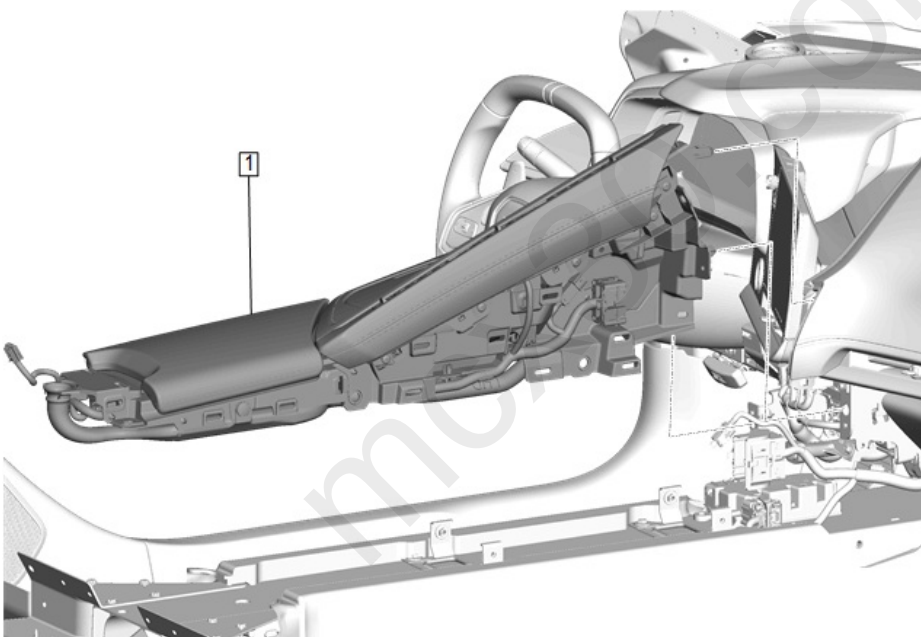


37.  
[Click here for full size](#)

38. Front Floor Console Compartment (1) >>> Remove - Front Floor Console Compartment Replacement

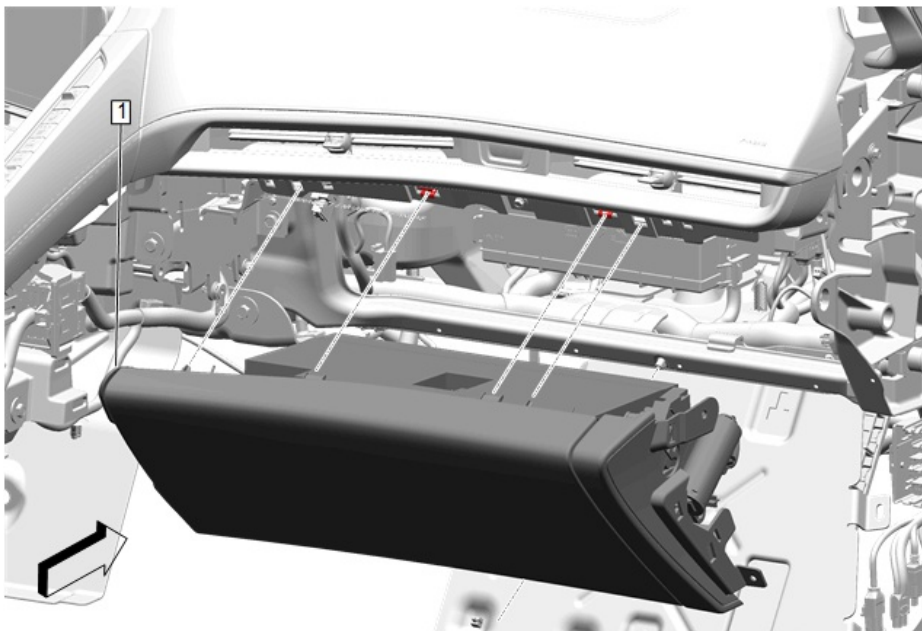


39.  
[Click here for full size](#)

40. Instrument Panel Compartment (1) >> Remove - Instrument Panel Compartment Replacement

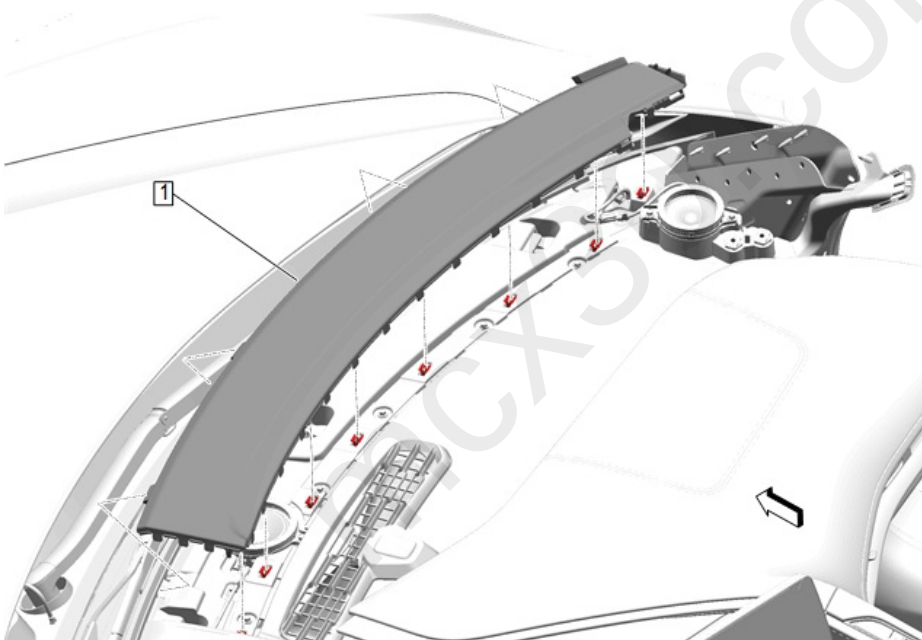


41.  
[Click here for full size](#)

42. Radio Front Center Speaker Grille (1) >> Remove - Radio Front Center Speaker Grille Replacement

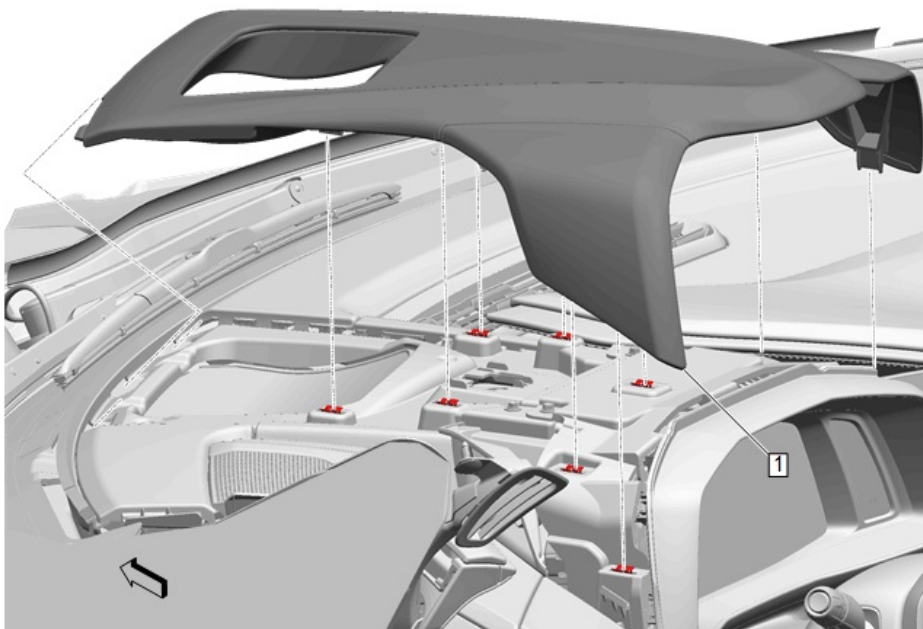


43.  
[Click here for full size](#)

44. Instrument Panel Instrument Cluster Hood (1) >>> Remove - Instrument Panel Instrument Cluster Hood Replacement

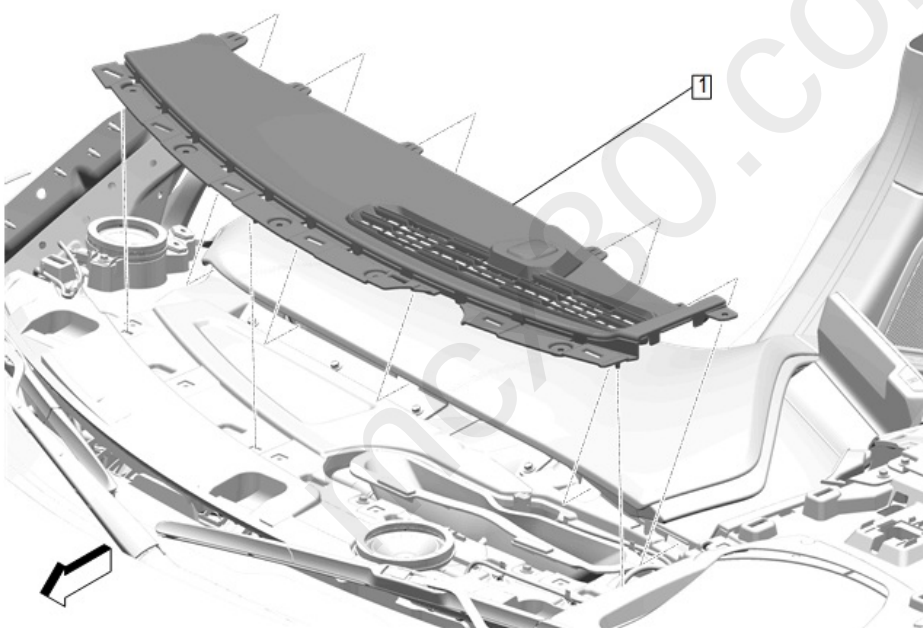


45.  
[Click here for full size](#)

46. Instrument Panel Extension (1) >>> Remove - Instrument Panel Extension Replacement

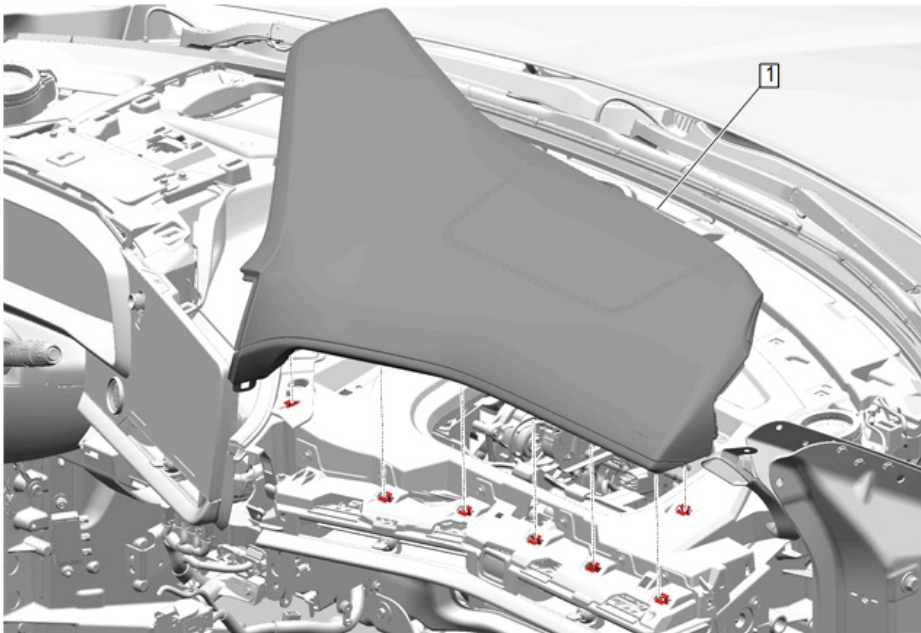


47.  
[Click here for full size](#)

48. Instrument Panel Upper Trim Panel (1) >>> Remove - Instrument Panel Upper Trim Panel Replacement

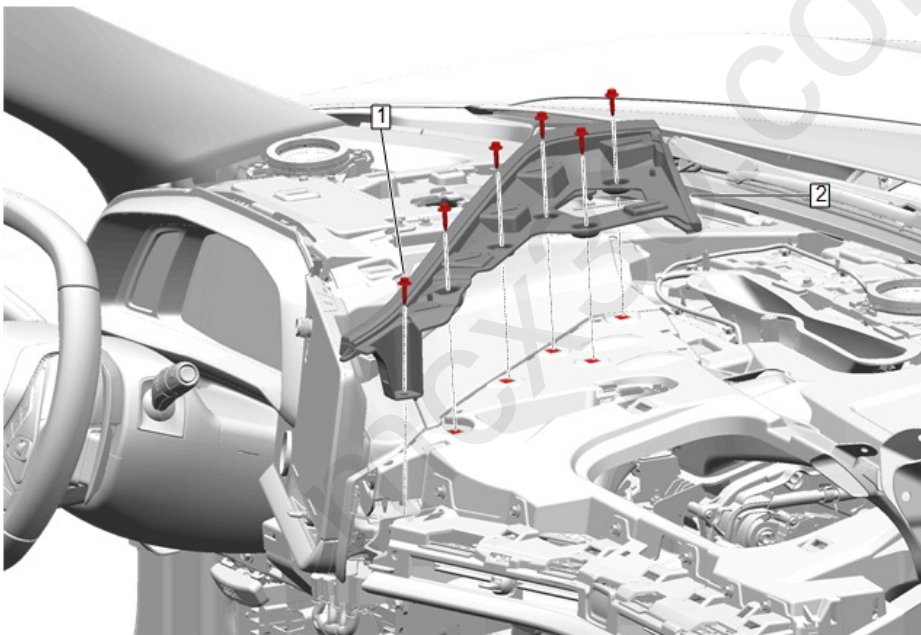


49.  
[Click here for full size](#)


50. Instrument Panel Trim Pad (2) >>> Remove - Instrument Panel Trim Pad Replacement

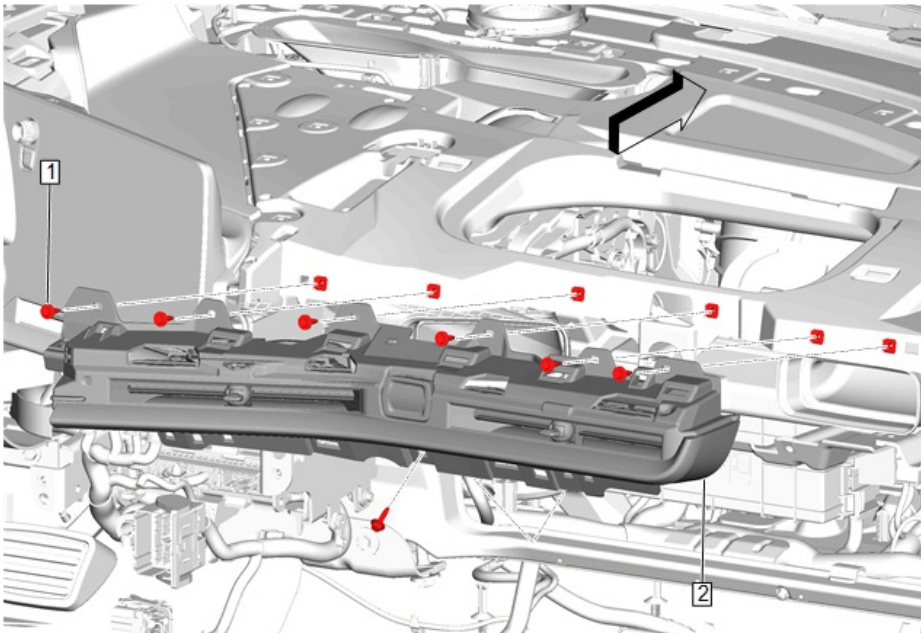

51. [Click here for full size](#)
52. Instrument Panel Air Outlet Bezel - Right Side (2) >> Remove - Instrument Panel Air Outlet Bezel Replacement - Right Side

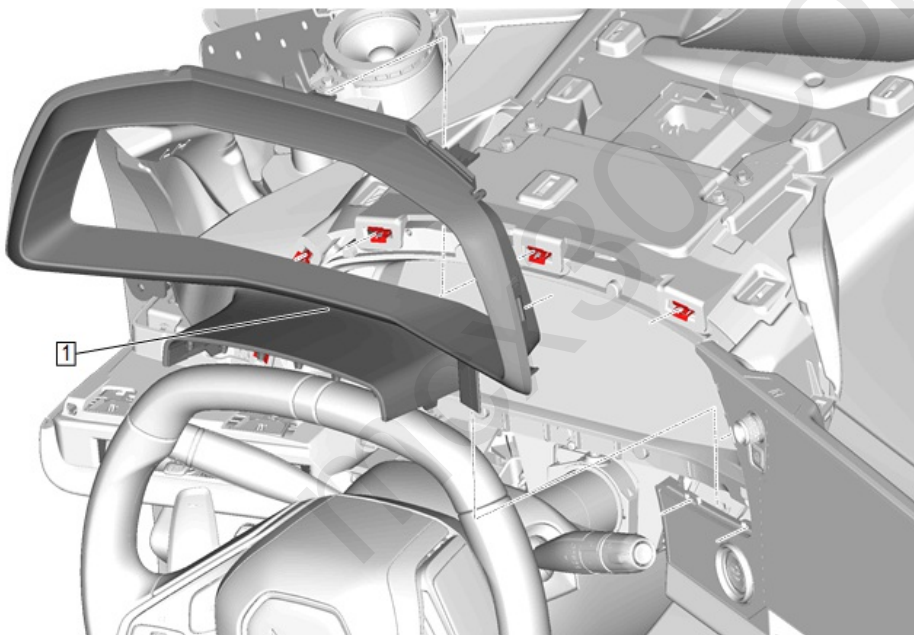


53. [Click here for full size](#)
54. Instrument Panel Cluster Trim Plate (1) >> Remove - Instrument Panel Cluster Trim Plate Replacement

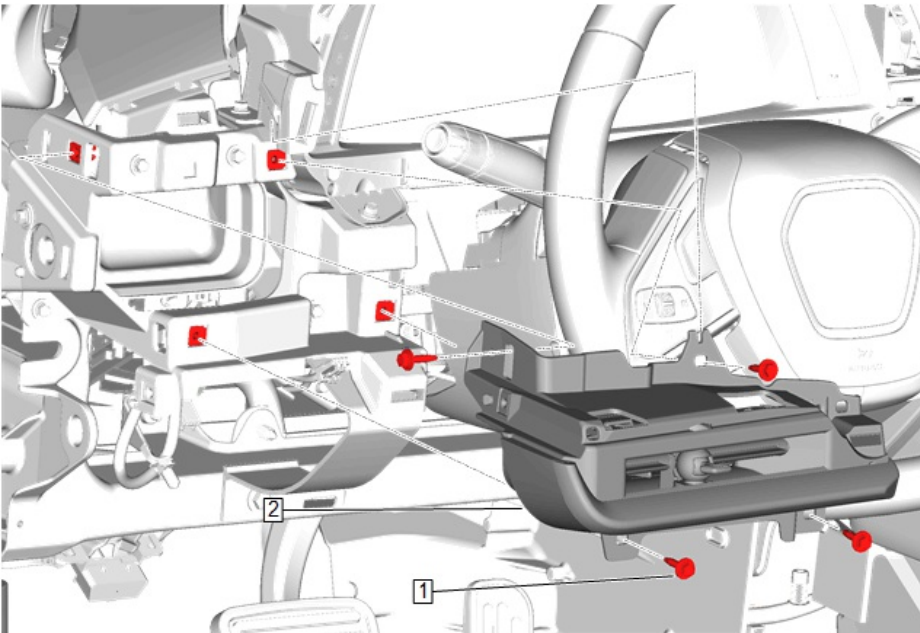


55.  
[Click here for full size](#)

56. Instrument Panel Air Outlet Bezel - Left Side (2) >> Remove - Instrument Panel Air Outlet Bezel Replacement - Left Side

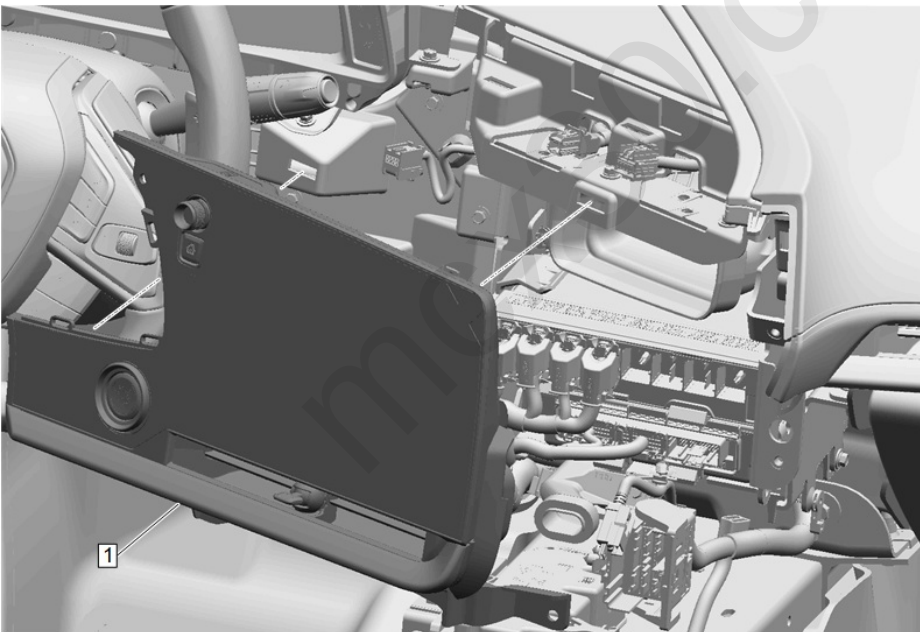


57.  
[Click here for full size](#)

58. Radio Control (1) >> Remove - Radio Control Replacement

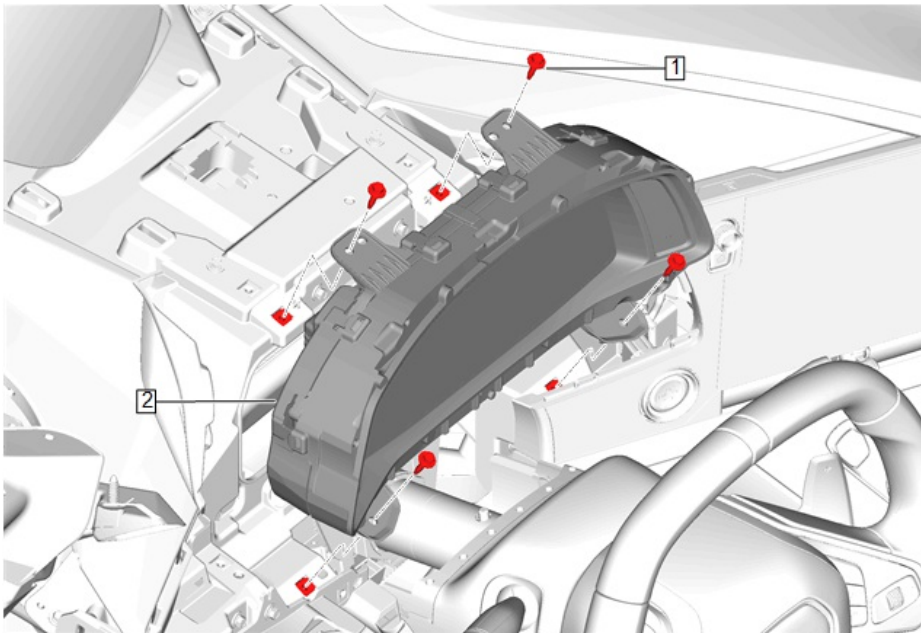


59.  
[Click here for full size](#)

60. Instrument Cluster (2) >> Remove - Instrument Cluster Replacement

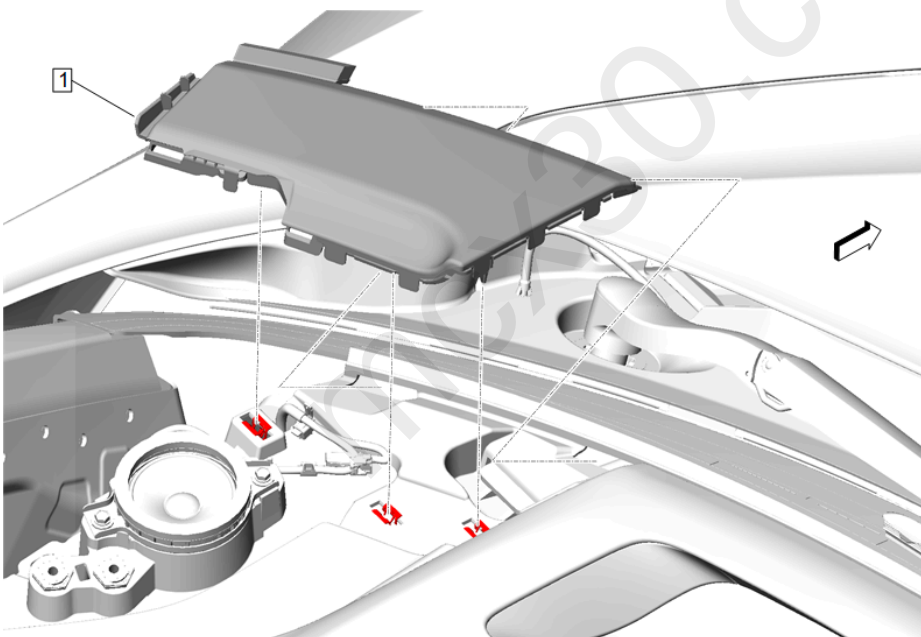


61.  
[Click here for full size](#)

62. Instrument Panel Upper Trim Panel Cover (1) >> Remove - Instrument Panel Upper Trim Panel Cover Replacement

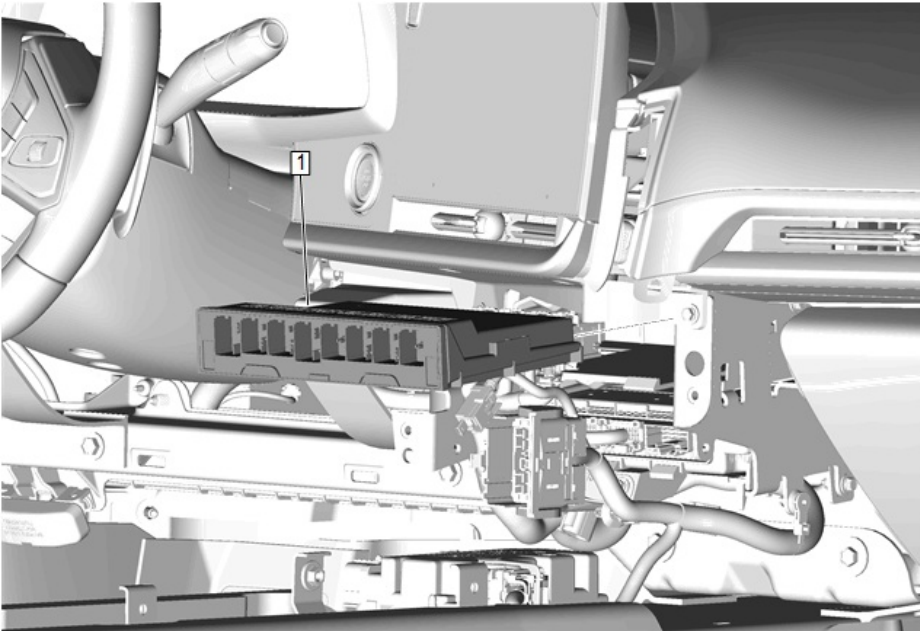


63.  
[Click here for full size](#)

64. Body Control Module (1) >> Remove - Body Control Module Replacement

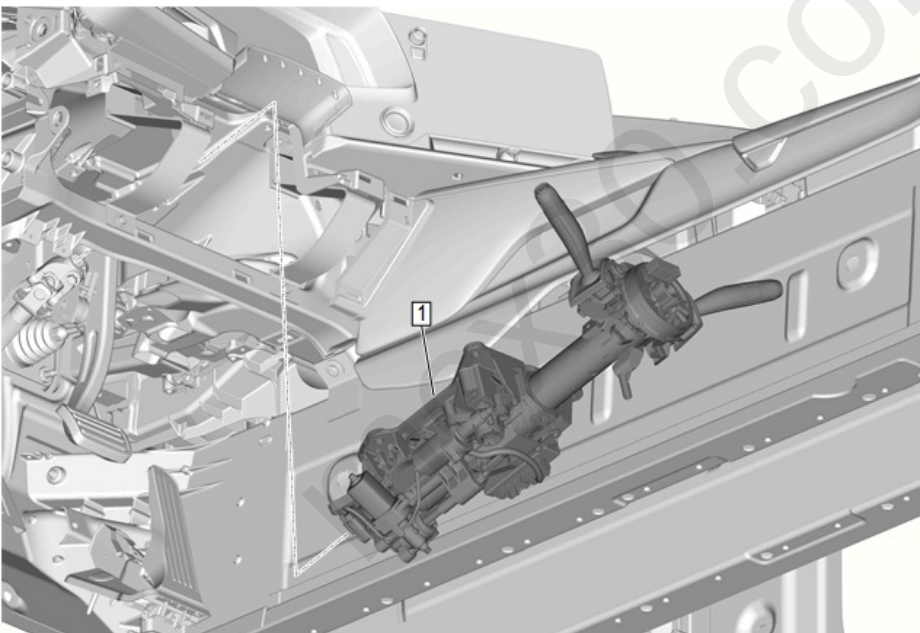


65.  
[Click here for full size](#)


66. Steering Column (1) >> Remove - Steering Column Replacement

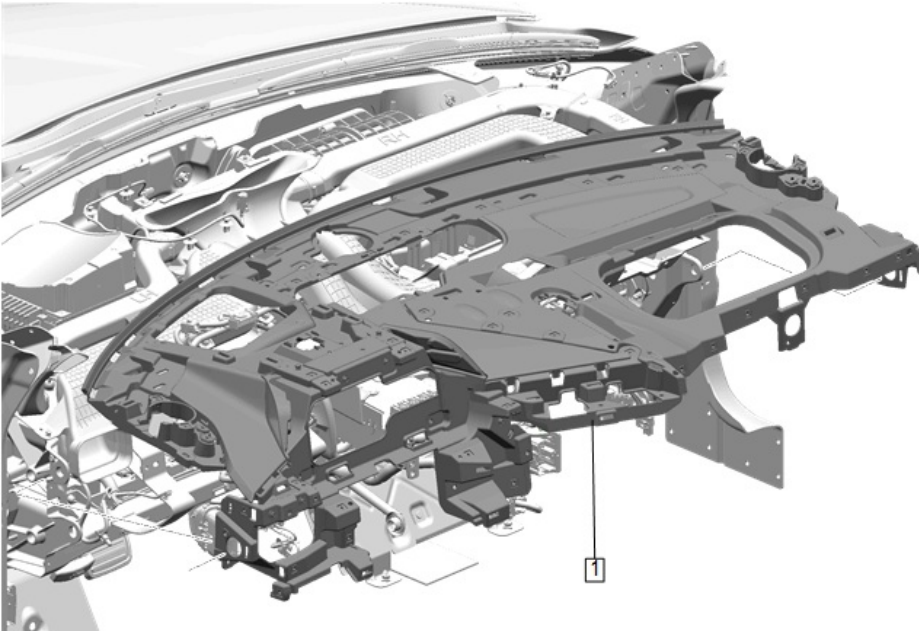

67. [Click here for full size](#)
68. Instrument Panel Carrier (1) >> Remove - Instrument Panel Carrier Replacement
69. With the aid of an assistant, remove the instrument panel carrier assembly from the vehicle. (1)

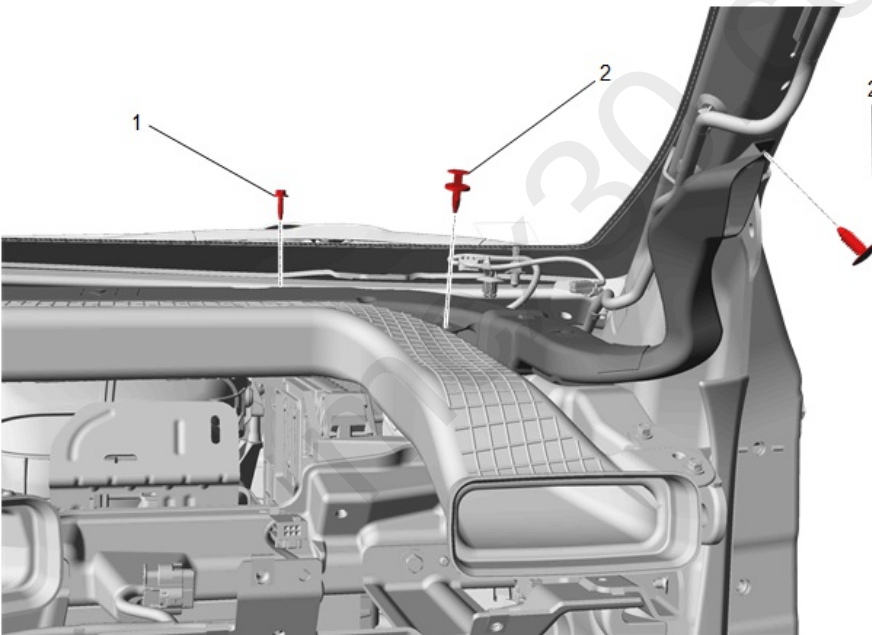

70. [Click here for full size](#)
71. Side Window Defogger Outlet Duct Bolt (1) >> Remove
72. Side Window Defogger Outlet Duct Retainer (2) >> Remove [2x]

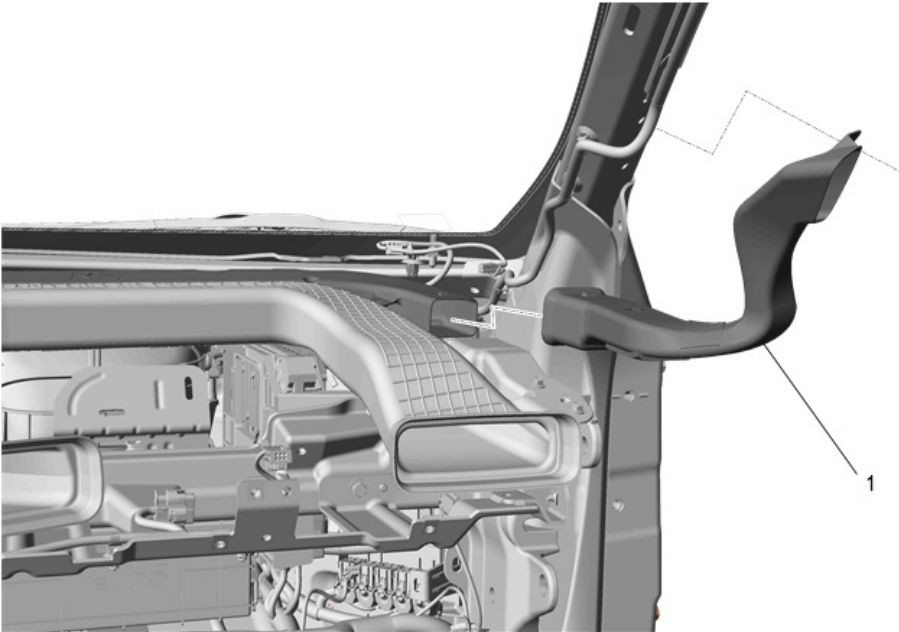


73.

[Click here for full size](#)

74. Side Window Defogger Outlet Outer Duct - Right Side (1) >> Remove

75. [Click here for full size](#)


76. Instrument Panel Wiring Harness Retainer (1) @ Side Window Defogger Outlet Outer Duct - Right Side >> Remove

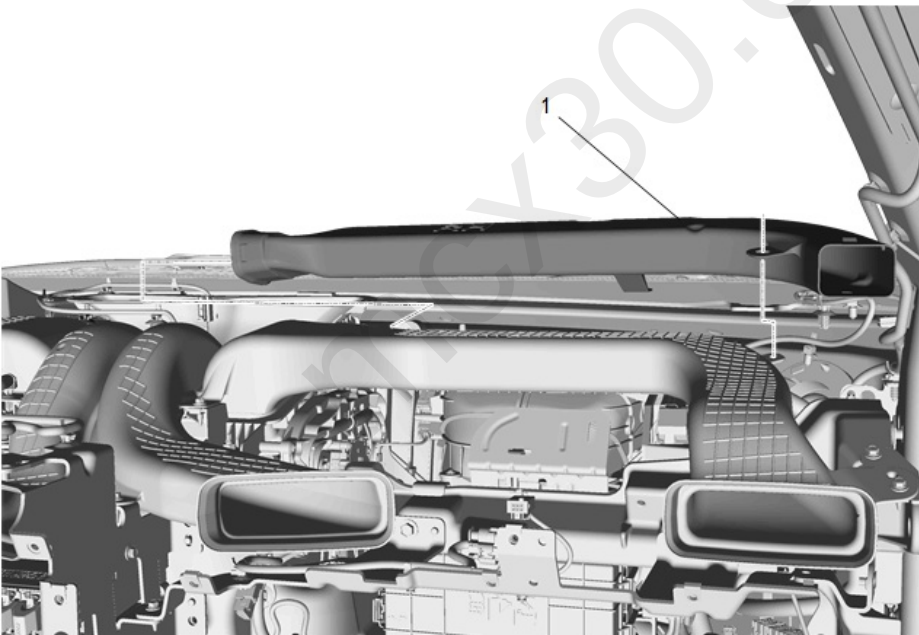

77.


[Click here for full size](#)

78. Side Window Defogger Outlet Outer Duct - Right Side (1) >> Remove

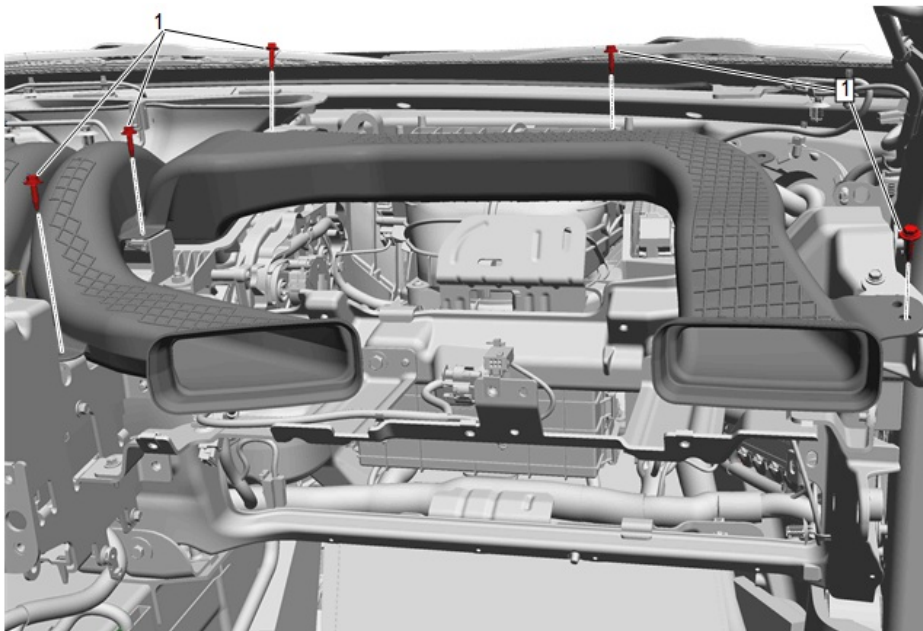


79.  
[Click here for full size](#)

80. Instrument Panel Outer Air Outlet Duct Bolt (1) >> Remove [5x]

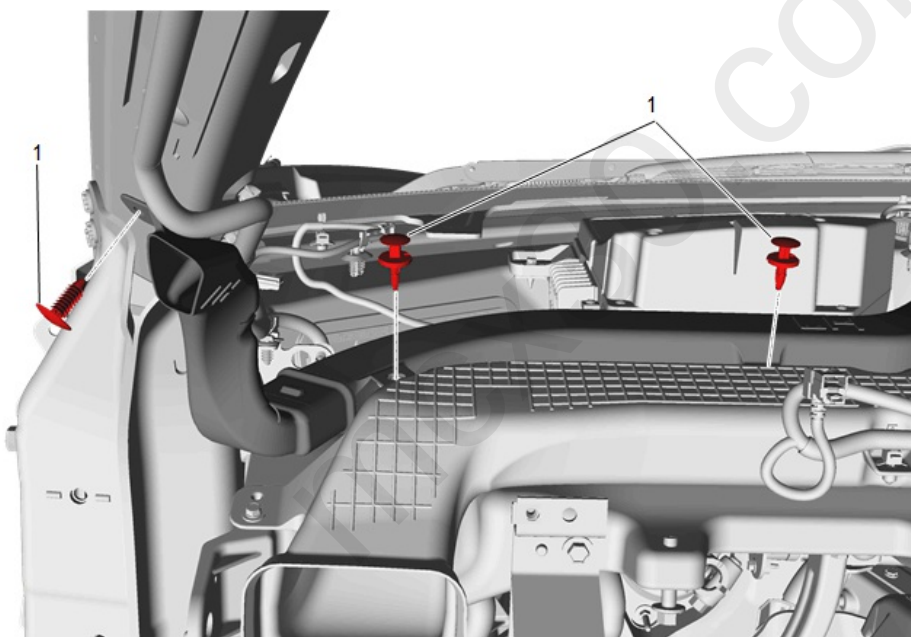


81.  
[Click here for full size](#)

82. Side Window Defogger Outlet Duct Retainer (1) >> Remove [3x]

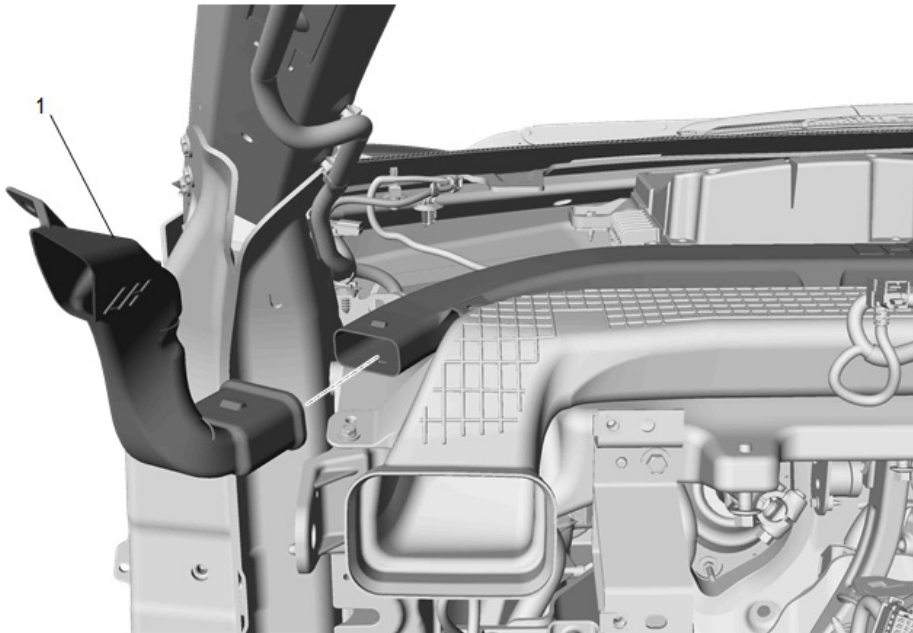


83.  
[Click here for full size](#)

84. Side Window Defogger Outlet Duct - Left Side (1) >> Remove

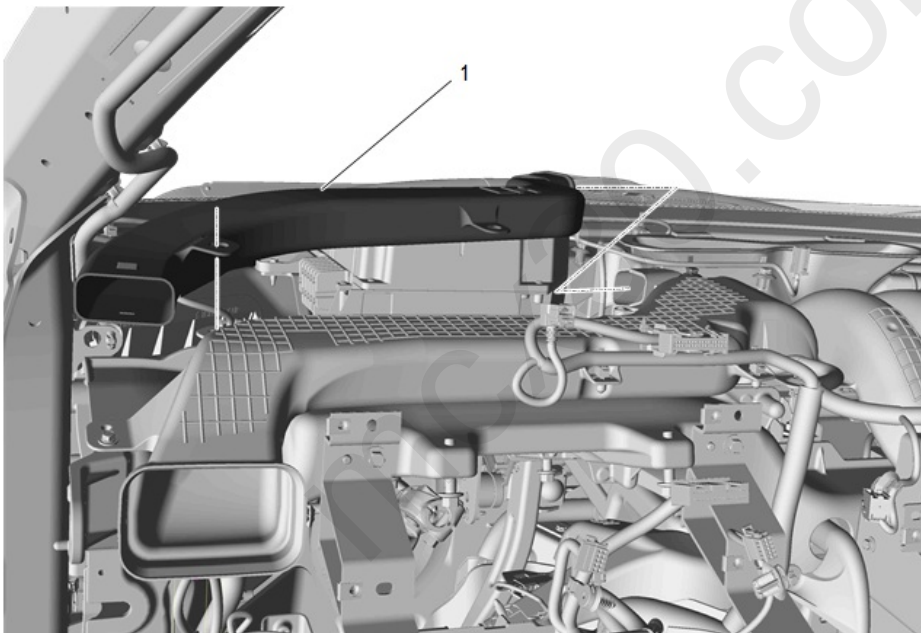


85.  
[Click here for full size](#)


86. Side Window Defogger Outlet Duct - Left Side (1) >> Remove

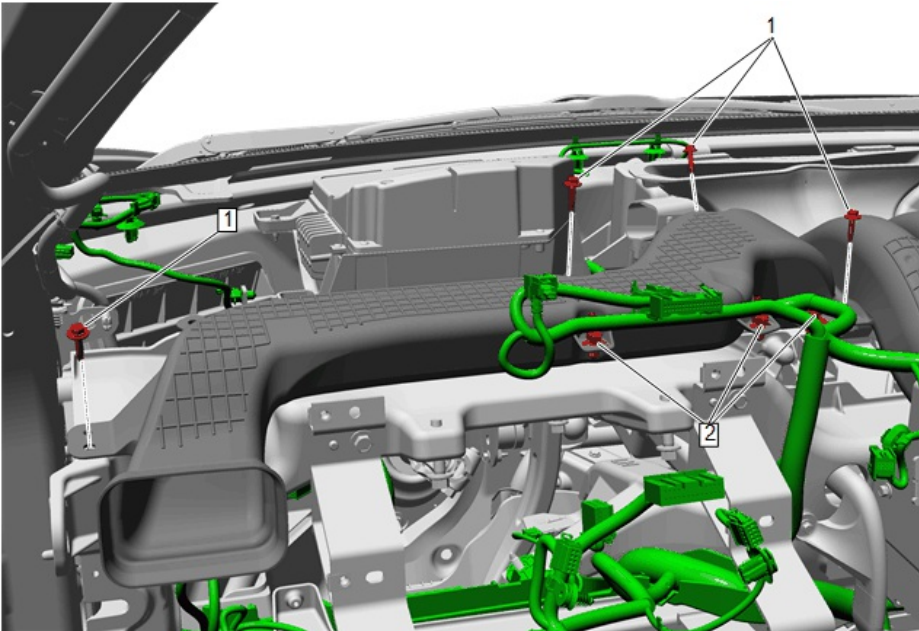

87. [Click here for full size](#)
88. Instrument Panel Outer Air Outlet Duct Bolt (1) >> Remove [4x]
89. Wiring Harness Retainer (2) @ Instrument Panel Outer Air Outlet Duct >> Remove [3x]

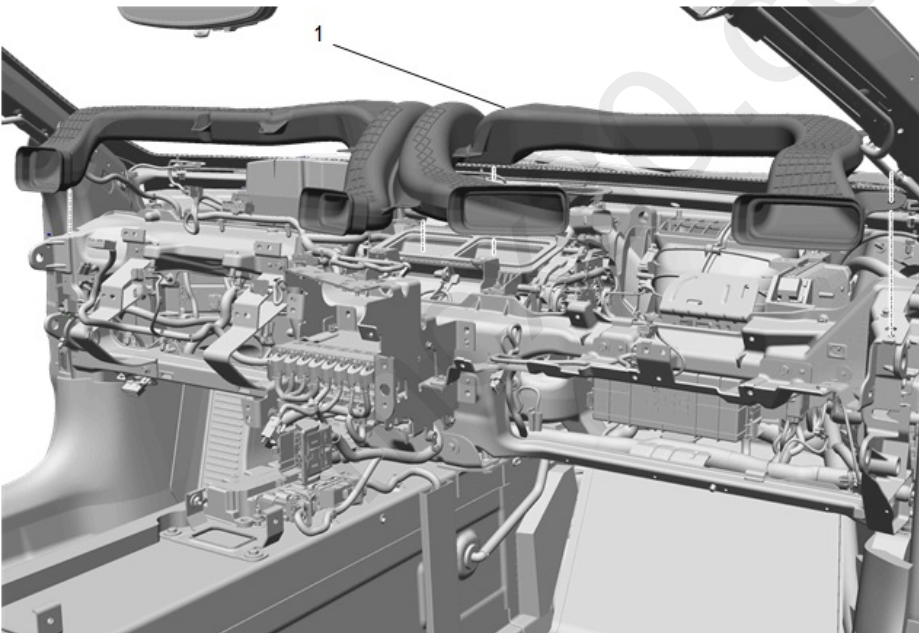


90. [Click here for full size](#)
91. Instrument Panel Outer Air Outlet Duct (1) >> Remove

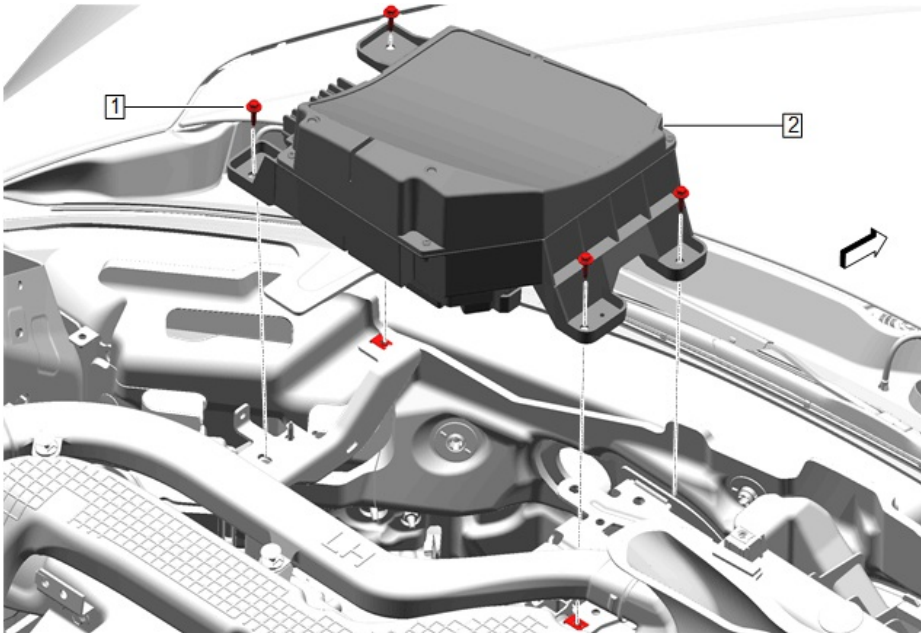


92.  
[Click here for full size](#)

93. Head-Up Display (2) >> Remove - Head-Up Display Replacement

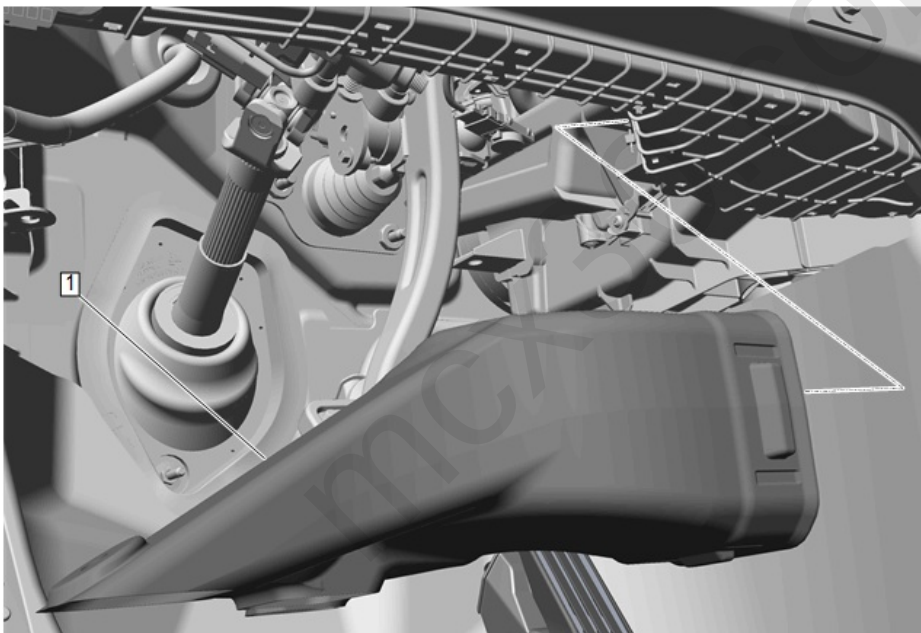


94.  
[Click here for full size](#)

95. Floor Front Air Outlet Duct - Left Side (1) >> Remove - Floor Front Air Outlet Duct Replacement - Left Side

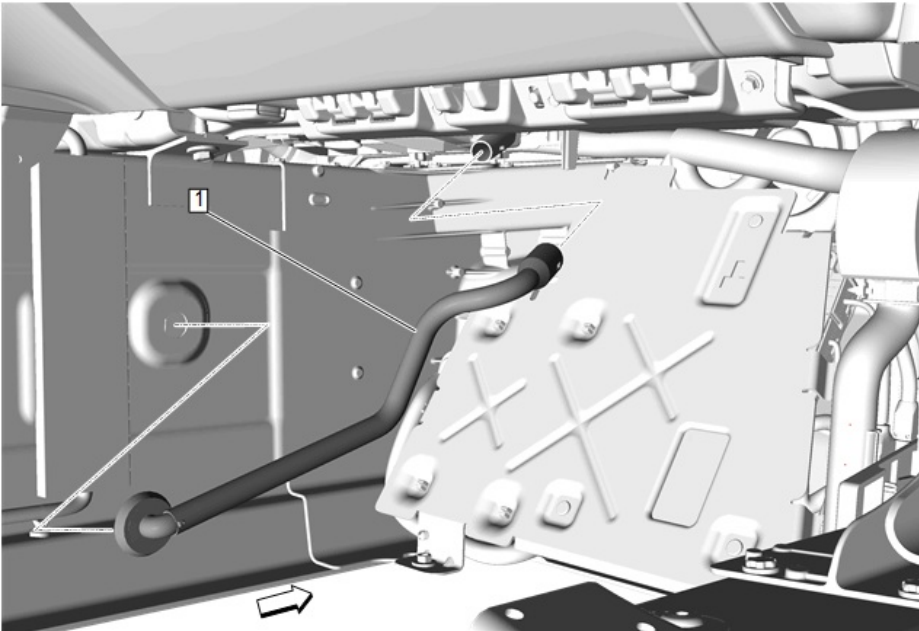


96.  
[Click here for full size](#)

97. Air Conditioning Evaporator Case Drain Tube (1) >> Remove - Air Conditioning Evaporator Case Drain Tube Replacement

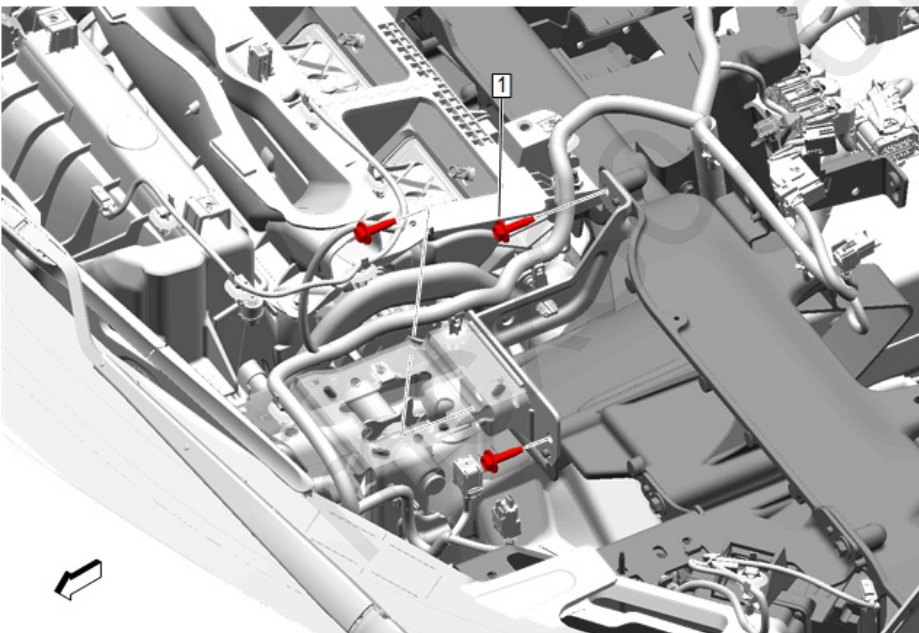


98.  
[Click here for full size](#)

99. Brake and Accelerator and Clutch Pedal Bracket Bolt (1) >> Remove [3x]

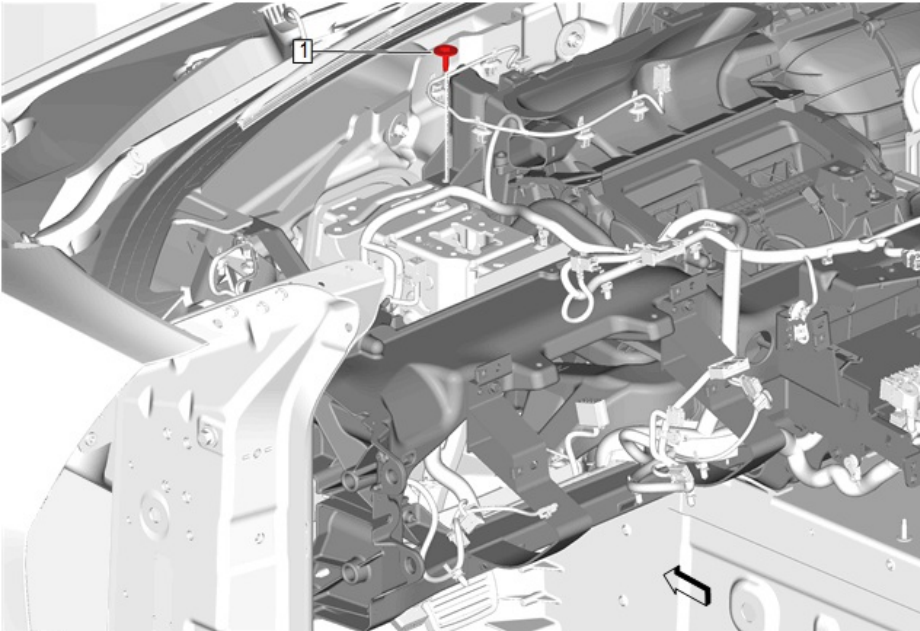


100.  
[Click here for full size](#)

101. Heater and Air Conditioning Evaporator and Blower Module Bolt (1) >> Remove

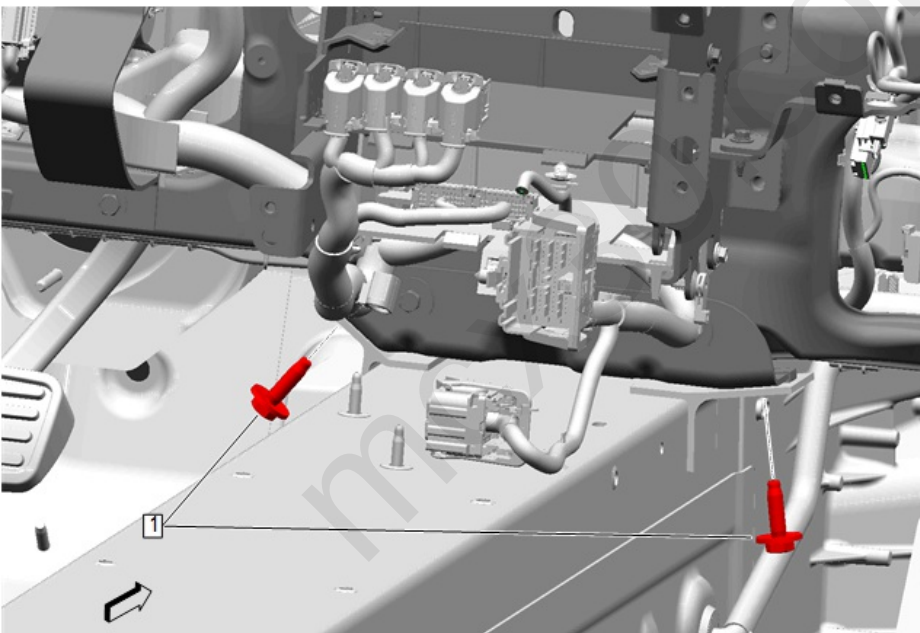

102.  
[Click here for full size](#)

103. Instrument Panel Center Lower Bracket Bolt (1) >> Remove [2x]

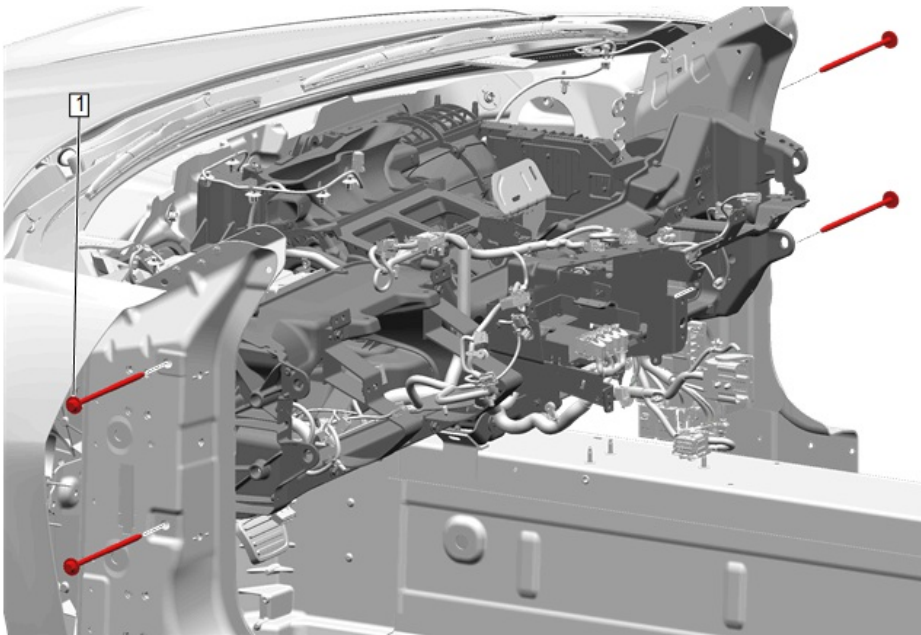


104. [Click here for full size](#)

105. Note:

When removing the right side instrument panel tie bar bolts, slide bolts out far enough to clear the tie bar, and leave the bolts in the cavity. The bolts do not have to be removed from the vehicle.

106. Instrument Panel Tie Bar Bolt (1) >> Remove [4x]

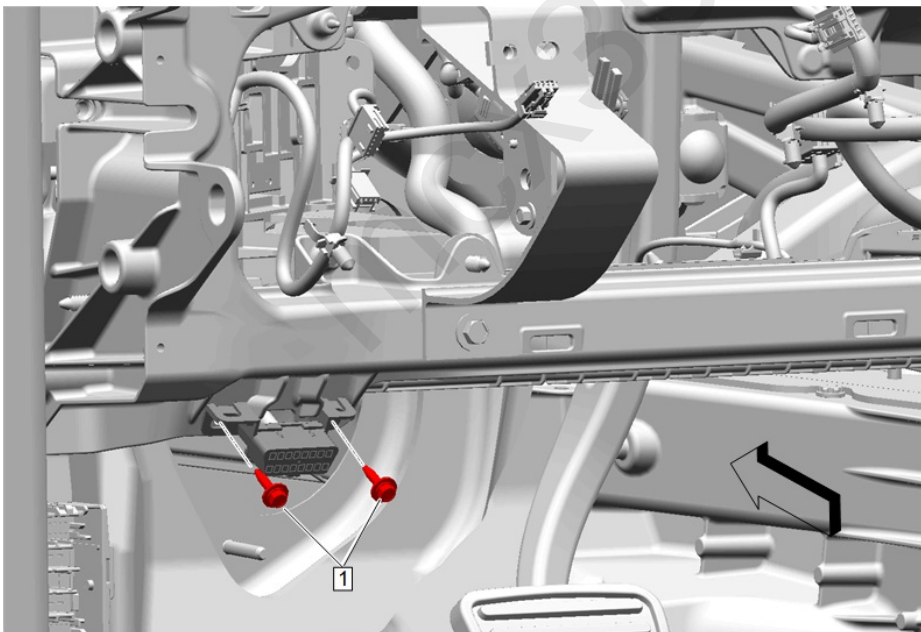


107. [Click here for full size](#)


108. Data Link Connector Bolt (1) >> Remove [2x]

109. Data Link Connector >> Remove


110. Disconnect and reposition harness as necessary.

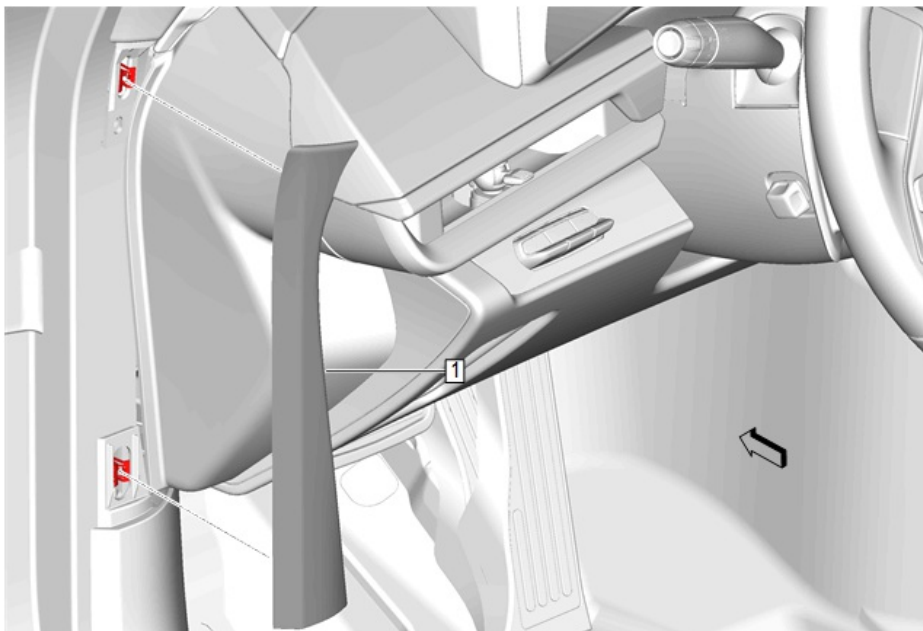

111. [Click here for full size](#)
112. Use a flat-bladed plastic trim tool in order to release the body hinge pillar garnish molding (1) clips.
113. Remove the left and right side body hinge pillar garnish moldings (1).

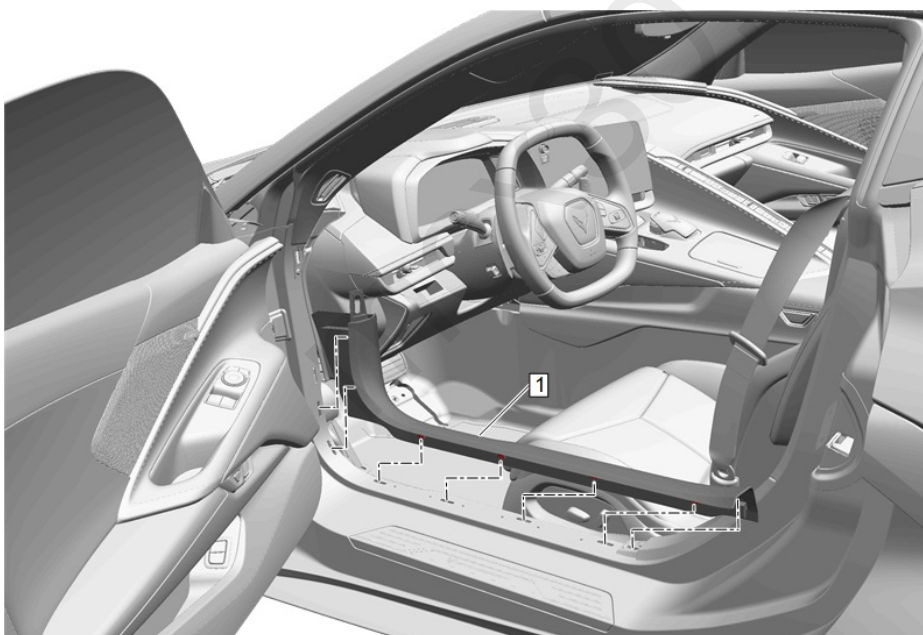


114. [Click here for full size](#)
115. Use a flat-bladed plastic trim tool in order to release the front side door sill garnish molding (1) clips.
116. Remove the left and right side front side door sill garnish moldings (1).

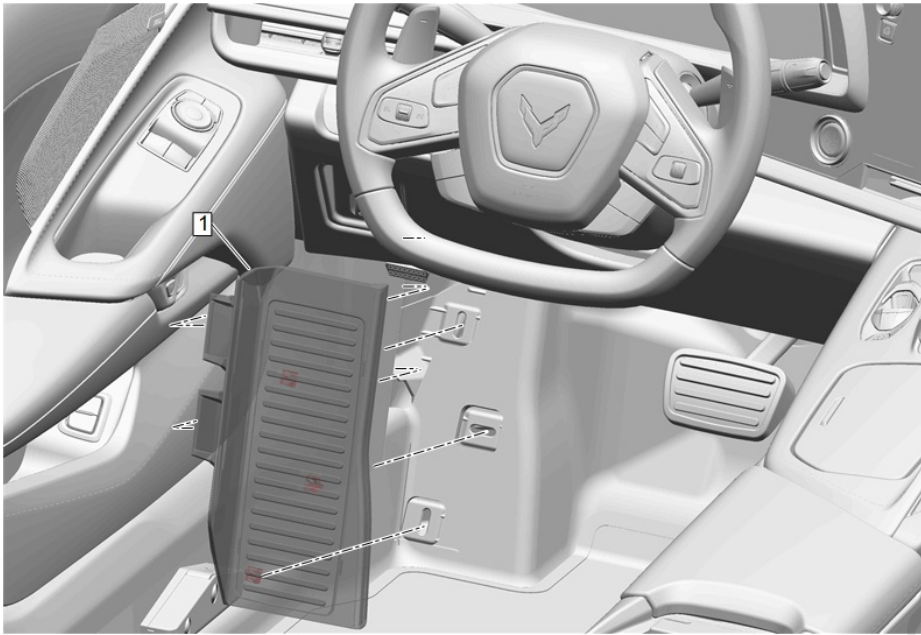


117. [Click here for full size](#)
118. Use a flat-bladed plastic trim tool in order to release the driver footrest (1) from the driver footrest bracket.
119. Driver Footrest (1) >> Remove
120. [Click here for full size](#)
121. Instrument Panel Wiring Harness Ground Bolt (1) >> Remove [2x]
122. Ground terminal (2) >> Remove [2x]
123. Electrical Connector (3) >> Disconnect [6x]
124. [Click here for full size](#)
125. Electrical Connector (1) @ Restraints Control Module >> Disconnect
126. Wiring Harness Retainer (2) >> Remove
127. Electrical Connector (3) @ Serial Data Gateway Module >> Disconnect
128. [Click here for full size](#)
129. Instrument Panel Wiring Harness Ground Bolt (1) >> Remove [2x]
130. Ground terminal (2) >> Remove [2x]
131. Electrical Connector (3) >> Disconnect [6x]
132. [Click here for full size](#)
133. Disconnect the brake pedal position sensor electrical connector (1).
134. Wiring Harness Retainer (2) >> Remove [5x]



135. [Click here for full size](#)
136. Remove the instrument panel tie bar and heater and air conditioning evaporator and blower module (1) together with the aid of an assistant.
137. Place the instrument panel tie bar and heater and air conditioning evaporator and blower module (1) on a clean work surface.
138. Note the location and routing of the instrument panel wiring harness prior to removal to ensure proper installation.

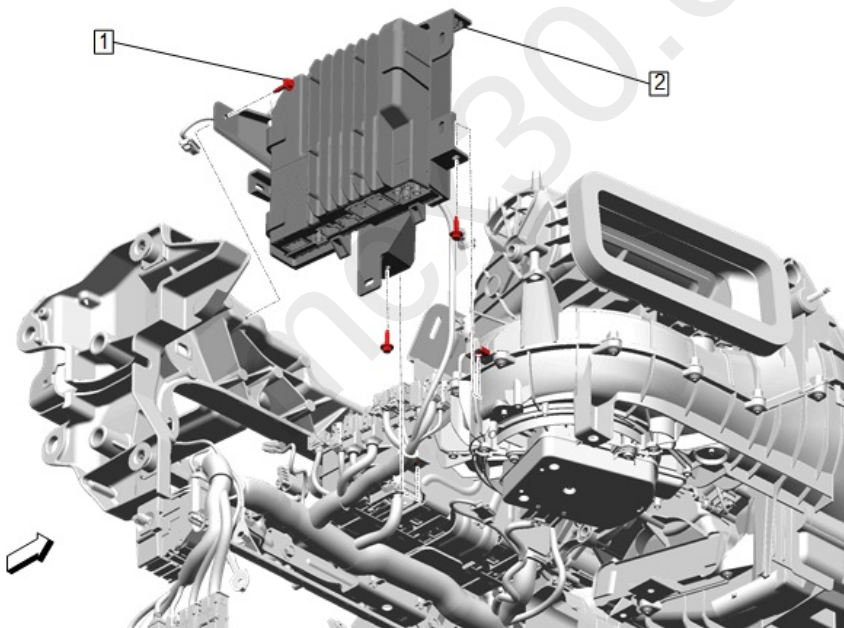


139. [Click here for full size](#)
140. Radio Bracket Bolt (1) >> Remove [3x]
141. Radio Bracket (2) >> Remove
142. [Click here for full size](#)
143. Instrument Panel Wiring Harness Clip (1) >> Remove

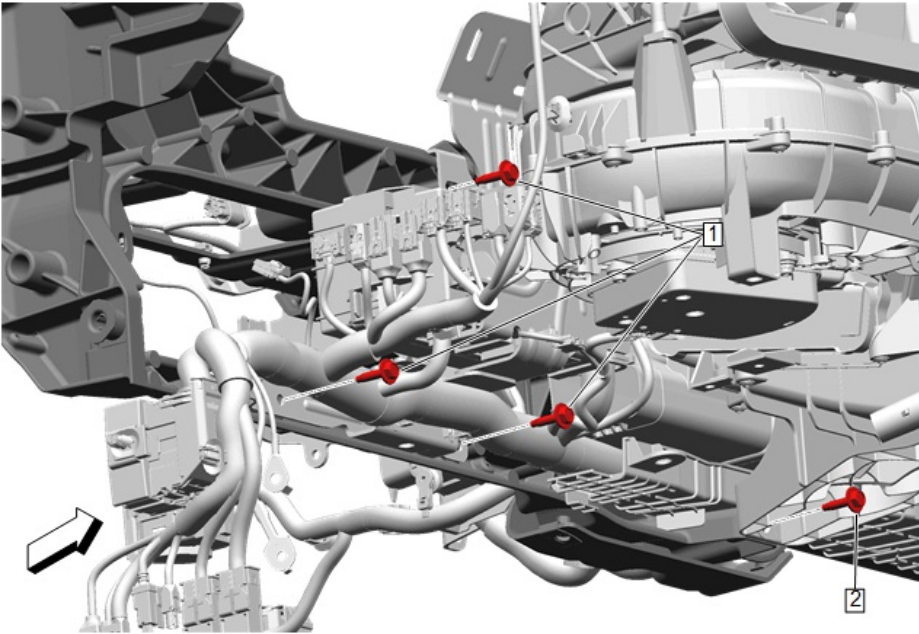

144.  
[Click here for full size](#)

145. Body Wiring Harness Fuse Block Bracket Bolt (1) >> Remove [3x]

146. Air Distributor Case Bolt (2) >> Remove

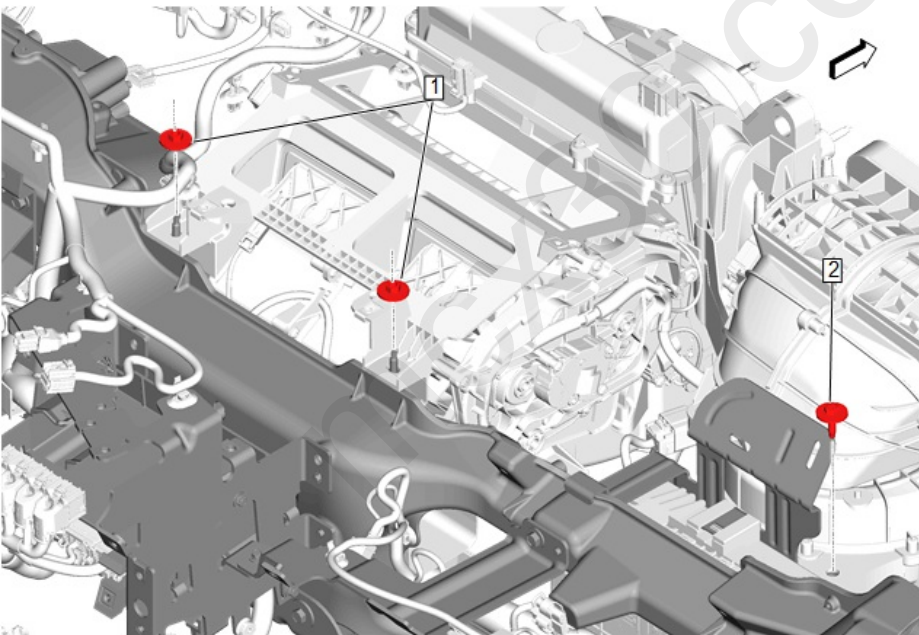


147.  
[Click here for full size](#)

148. Heater and Air Conditioning Evaporator and Blower Module Nut (1) >> Remove [2x]

149. Heater and Air Conditioning Evaporator and Blower Module Bolt (2) >> Remove


150. Disconnect the electrical connectors.

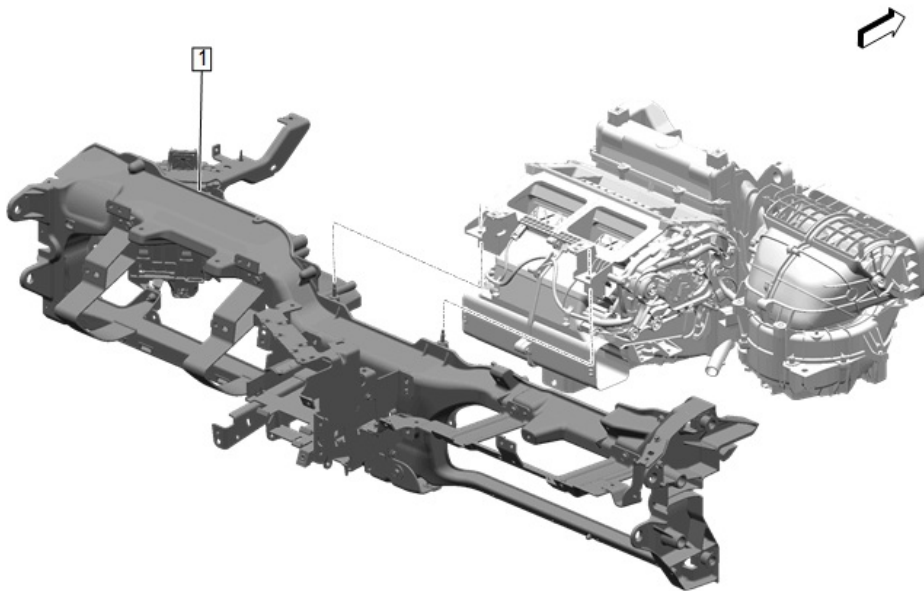


- 151. [Click here for full size](#)
- 152. Instrument Panel Tie Bar (1) >> Remove
- 153. [Click here for full size](#)
- 154. Air Conditioning Sealing Washer - Large (1) >> Remove and DISCARD
- 155. Air Conditioning Sealing Washer - Small (2) >> Remove and DISCARD

### Installation Procedure

- 1. [Click here for full size](#)
- 2. Air Conditioning Sealing Washer - Large (1) >> Install NEW
- 3. Air Conditioning Sealing Washer - Small (2) >> Install NEW

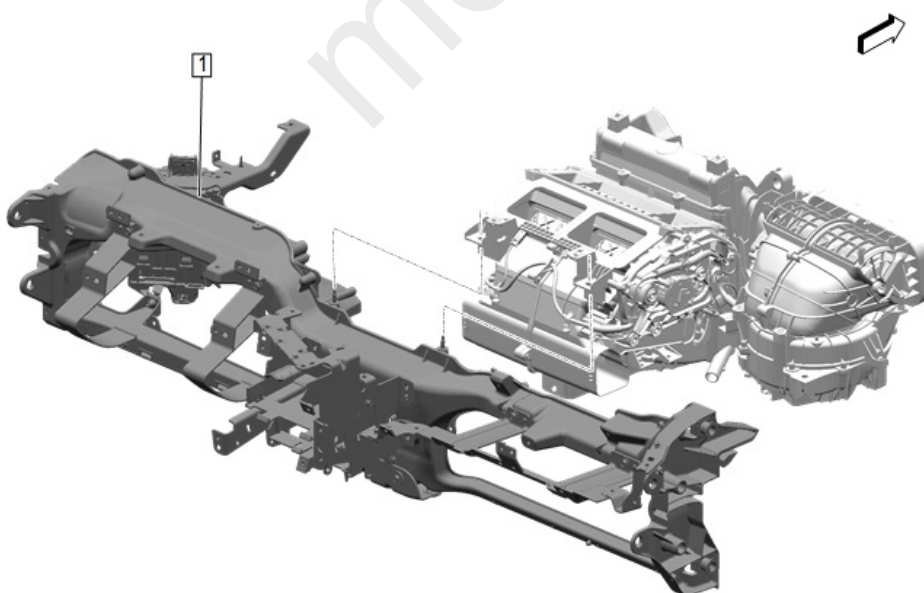

- 4. [Click here for full size](#)
- 5. Instrument Panel Tie Bar (1) >> Install
- 6. Position the wiring harness and connect the harness retainers.

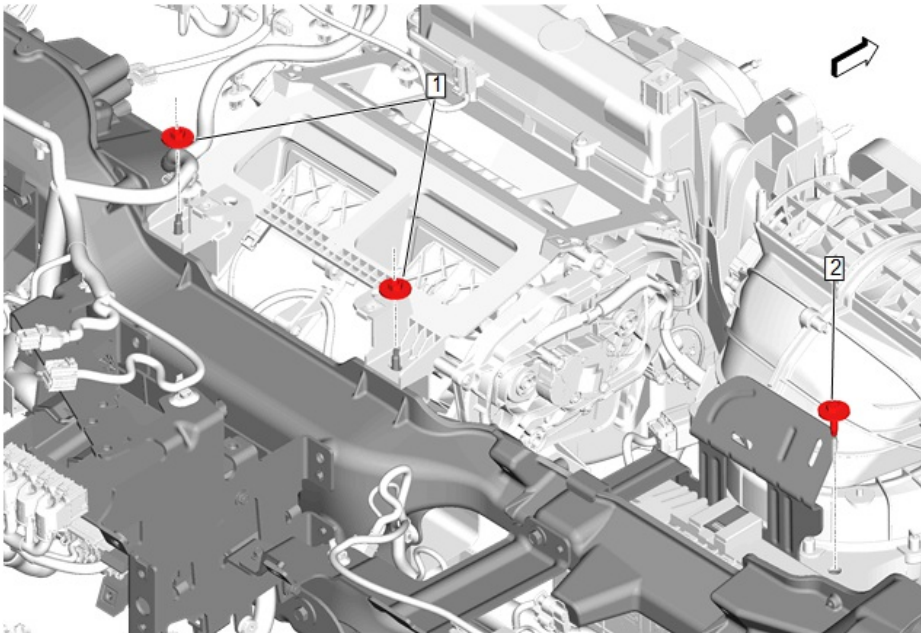


7. [Click here for full size](#)

8. **Caution:**


Refer to Fastener Caution.

9. Heater and Air Conditioning Evaporator and Blower Module Nut (1) >> Install and tighten [2x]7>N-m (62 lb in)
10. Heater and Air Conditioning Evaporator and Blower Module Bolt (2) >> Install and tighten 7>N-m (62 lb in)

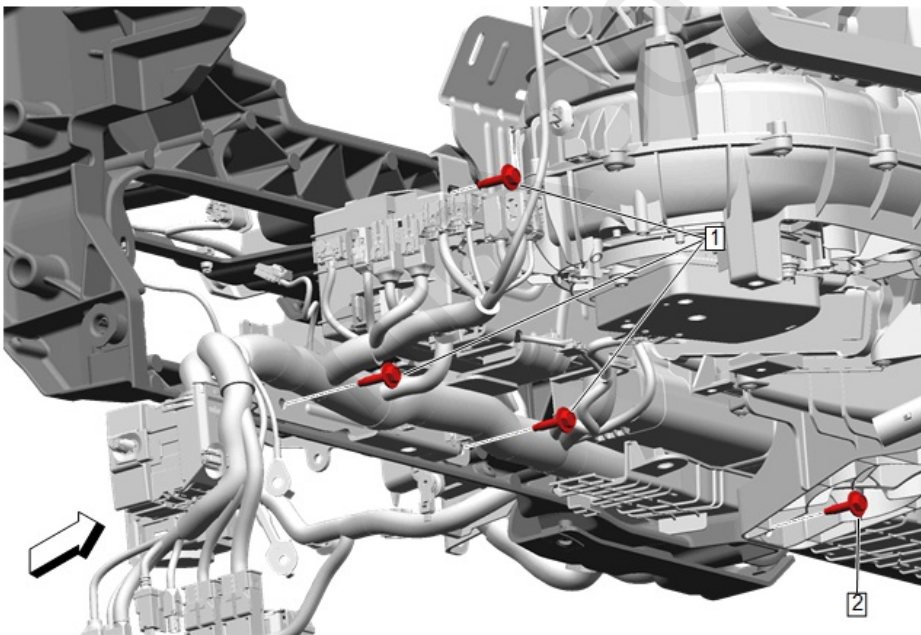

11. [Click here for full size](#)


12. Body Wiring Harness Fuse Block Bracket Bolt (1) >> Install and tighten [3x]12N-m (106thinsplb in)
13. Air Distributor Case Bolt (2) >> Install and tighten 12N-m (106thinsplb in)
14. [Click here for full size](#)
15. Instrument Panel Wiring Harness Clip (1) >> Install

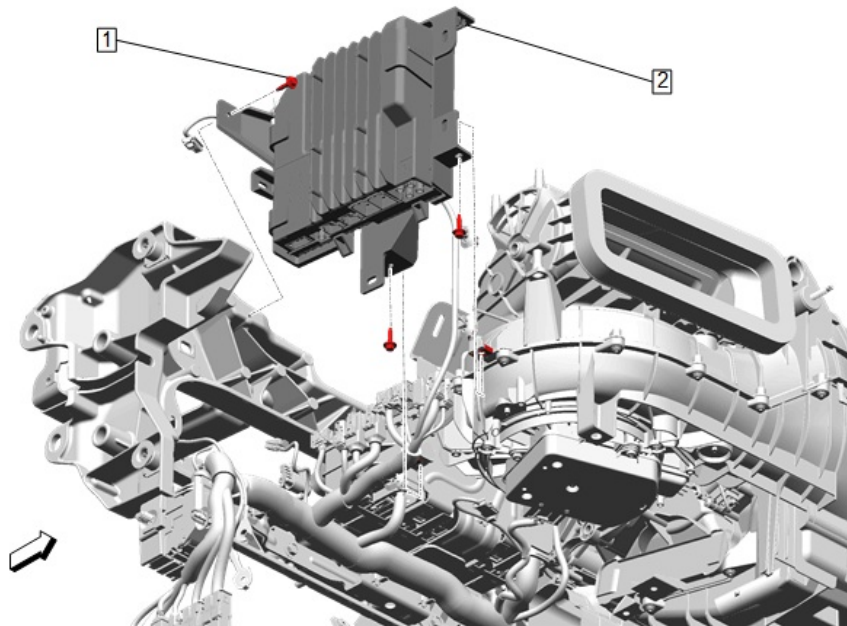


16. [Click here for full size](#)
17. Radio Bracket (2) >> Install
18. Radio Bracket Bolt (1) >> Install and tighten [3x]2.5N-m (22 lb in)



19. [Click here for full size](#)
20. Install the instrument panel tie bar and HVAC module (1) together with the aid of an assistant.

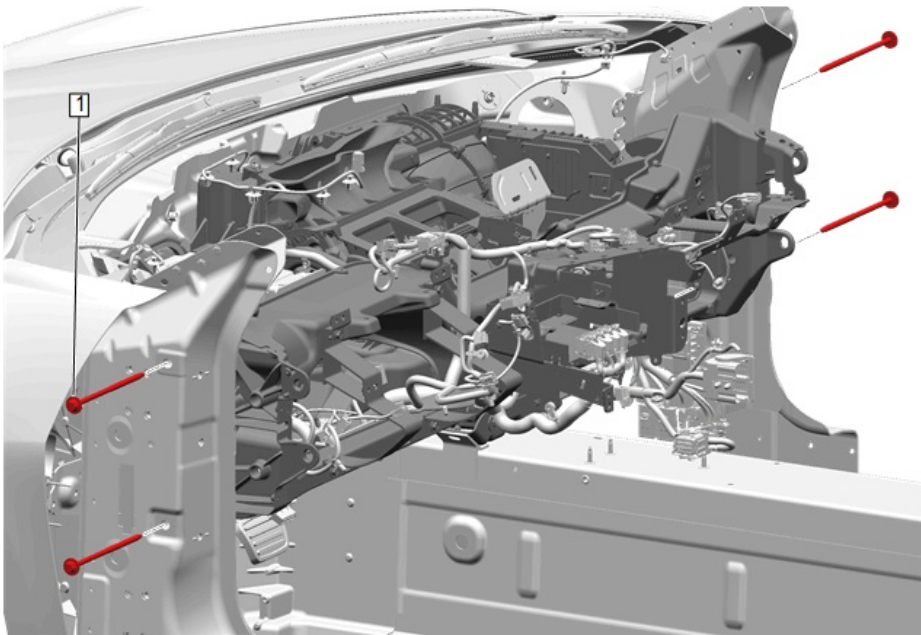


21. [Click here for full size](#)
22. Instrument Panel Tie Bar Bolt (1) >> Install and tighten [4x]22N-m (16 lb ft)
23. Data Link Connector >> Install
24. [Click here for full size](#)
25. Wiring Harness Retainer (2) >> Install [5x]
26. Connect the brake pedal position sensor electrical connector (1).
27. [Click here for full size](#)
28. Electrical Connector (3) >> Connect [6x]
29. Ground terminal (2) >> Install [2x]
30. Note:  
Refer to the procedure link for torque specification.
31. Instrument Panel Wiring Harness Ground Bolt (1) >> Install and tighten [2x] - Ground Repair
32. [Click here for full size](#)
33. Electrical Connector (3) @ Serial Data Gateway Module >> Connect
34. Wiring Harness Retainer (2) >> Install
35. Electrical Connector (1) @ Restraints Control Module >> Connect
36. [Click here for full size](#)
37. Electrical Connector (3) >> Connect [6x]
38. Ground terminal (2) >> Install [2x]
39. Note:  
Refer to the procedure link for torque specification.
40. Instrument Panel Wiring Harness Ground Bolt (1) >> Install and tighten [2x] - Ground Repair

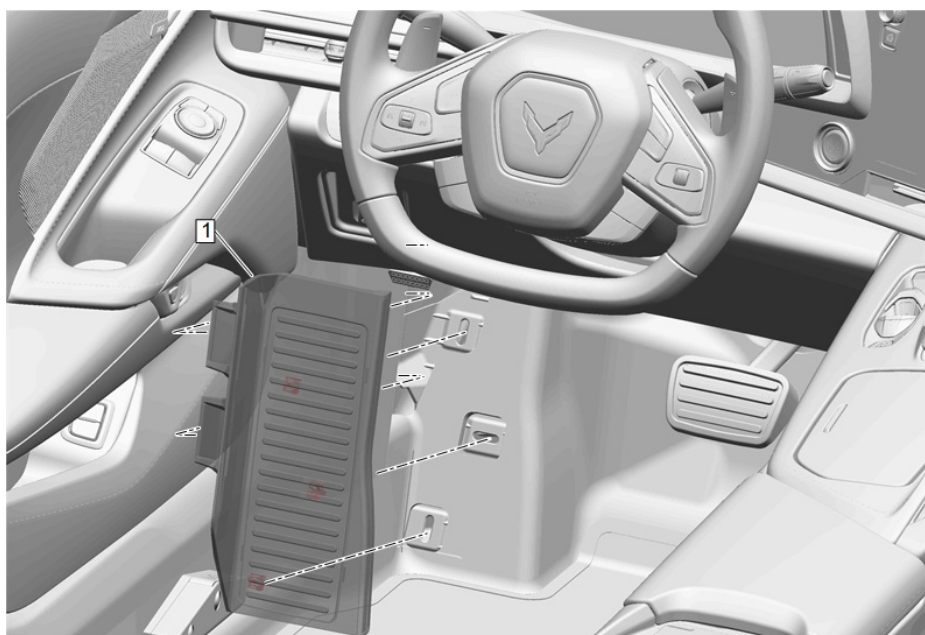


41.  
[Click here for full size](#)

42. Driver Footrest (1) >> Install

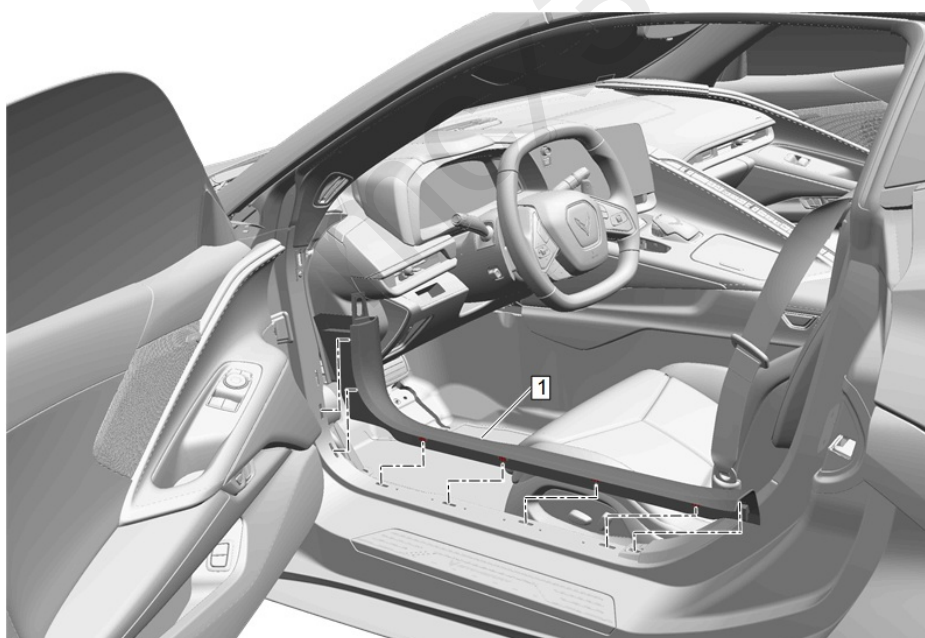


43.  
[Click here for full size](#)

44. Install the left and right side front side door sill garnish moldings (1).

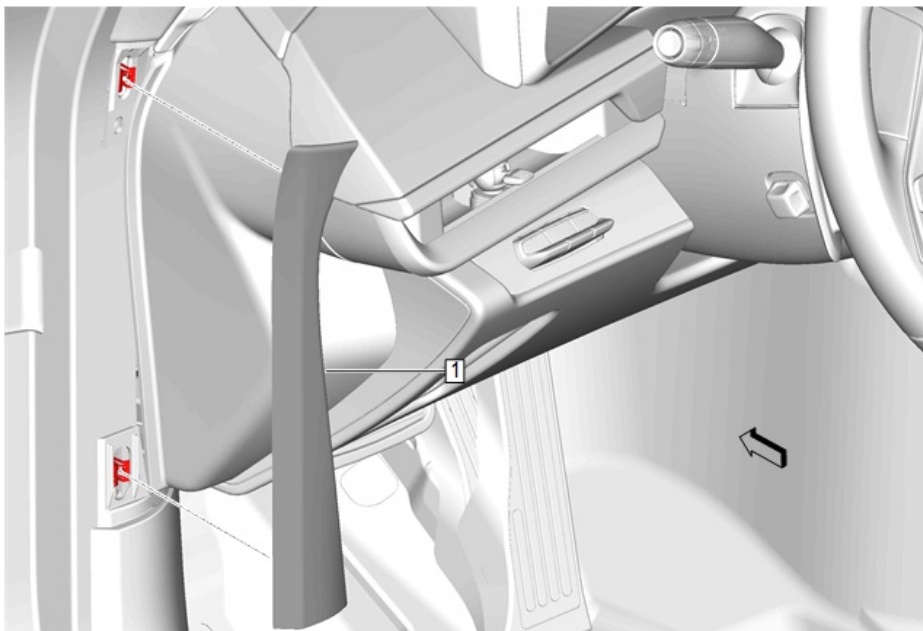


45.  
[Click here for full size](#)

46. Install the left and right side body hinge pillar garnish molding (1).

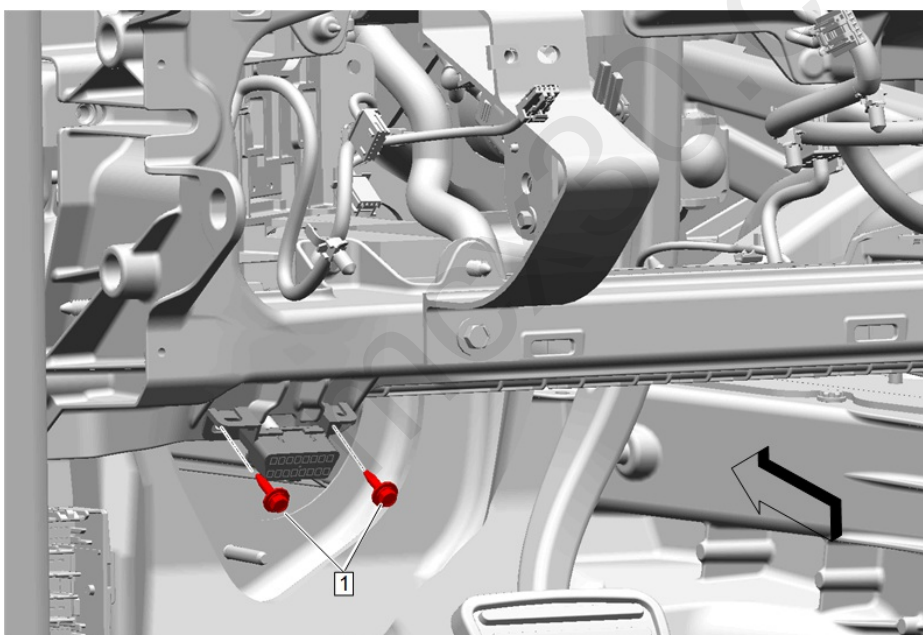


47.  
[Click here for full size](#)

48. Data Link Connector Bolt (1) >> Install and tighten [2x]2.5N-m (22 lb in)

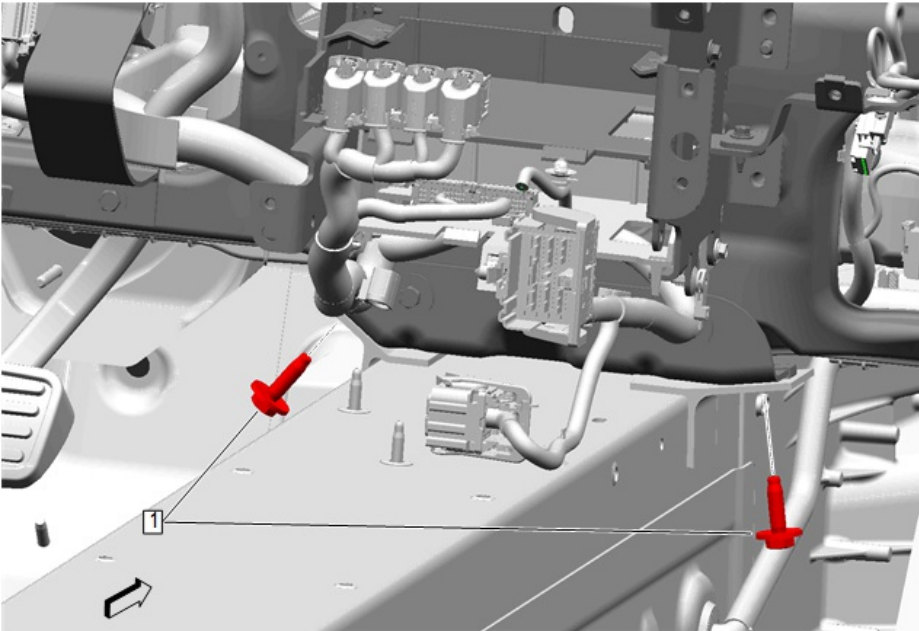


49.  
[Click here for full size](#)

50. Instrument Panel Center Lower Bracket Bolt (1) >> Install and tighten [2x]22N-m (16 lb ft)

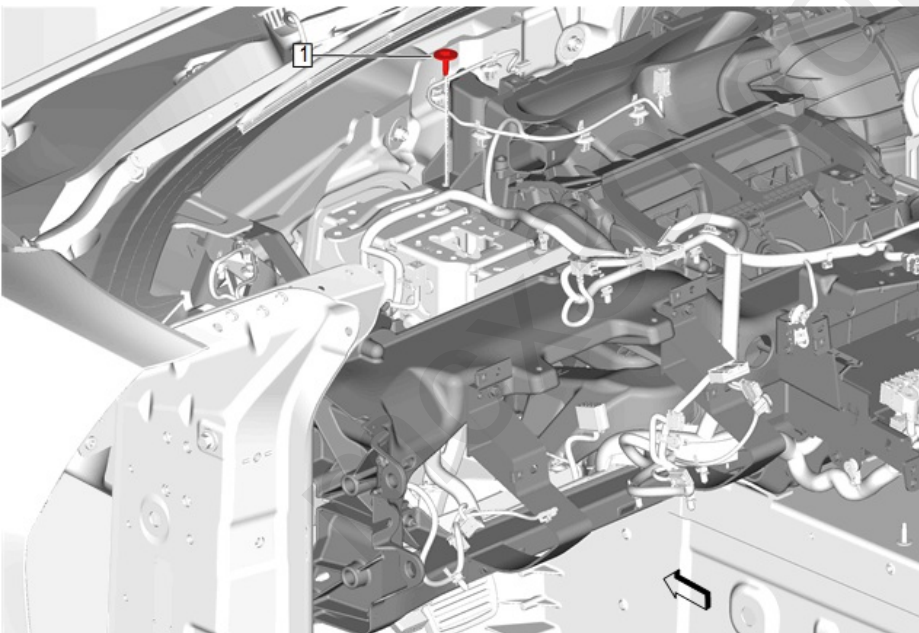


51.  
[Click here for full size](#)

52. Heater and Air Conditioning Evaporator and Blower Module Bolt (1) >> Install and tighten 7>N-m (62 lb in)

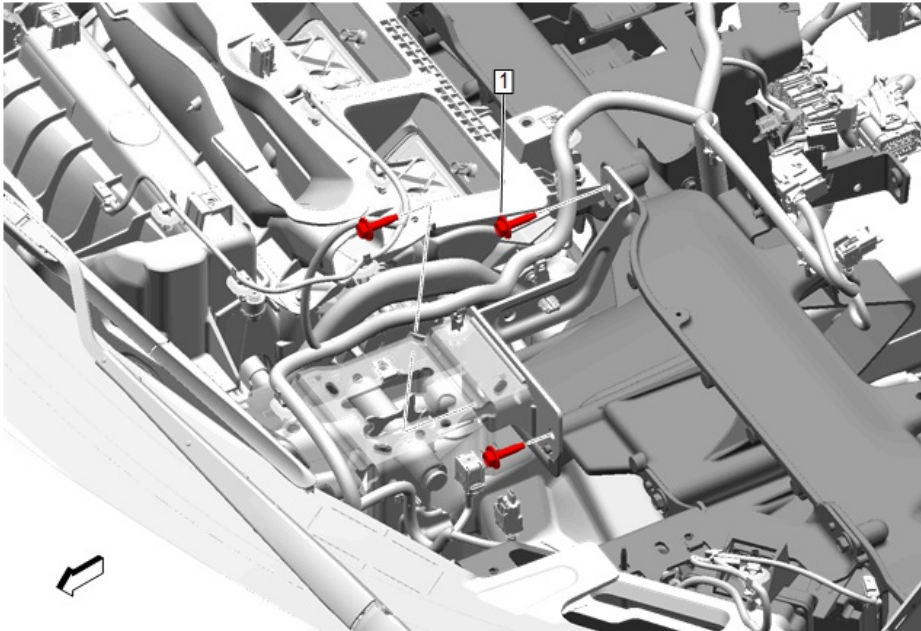


53.  
[Click here for full size](#)

54. Brake and Accelerator and Clutch Pedal Bracket Bolt (1) >> Install and tighten [3x]9>N-m (80 lb in)

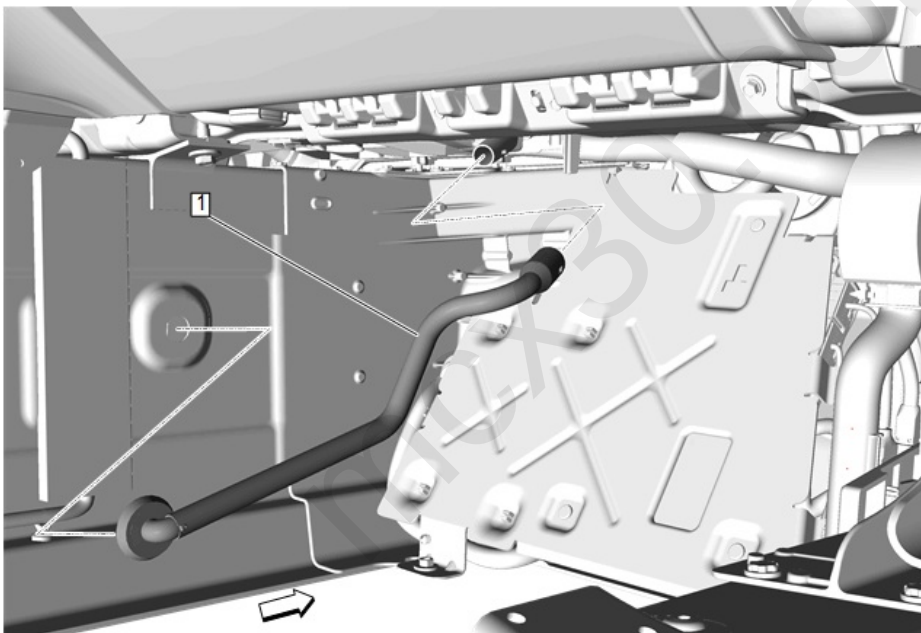


55.  
[Click here for full size](#)

56. Air Conditioning Evaporator Case Drain Tube (1) >> Install - Air Conditioning Evaporator Case Drain Tube Replacement

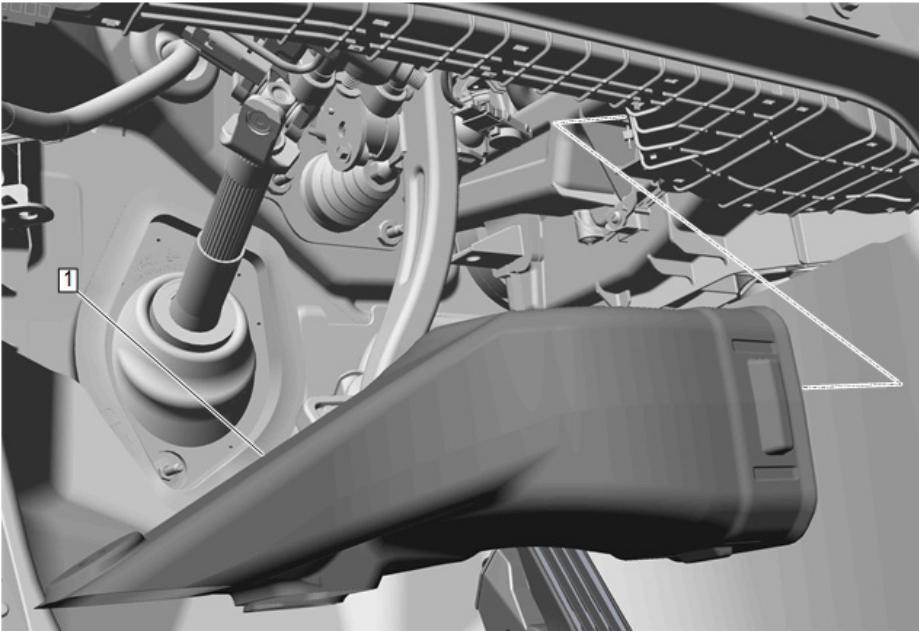


57.  
[Click here for full size](#)

58. Floor Front Air Outlet Duct - Left Side (1) >> Install - Floor Front Air Outlet Duct Replacement - Left Side

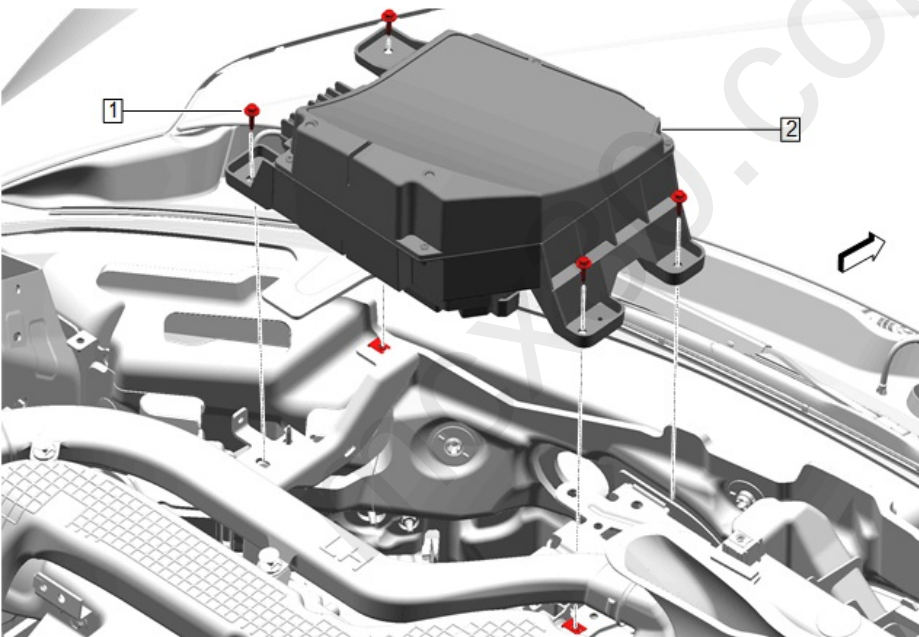


59.  
[Click here for full size](#)


60. Head-Up Display (2) >> Install - Head-Up Display Replacement

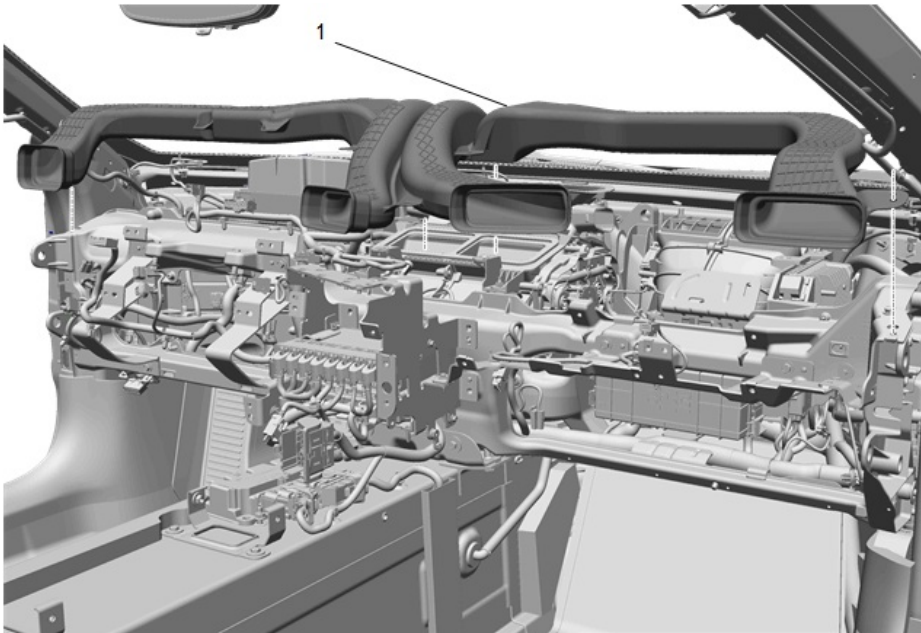

61. [Click here for full size](#)
62. Instrument Panel Outer Air Outlet Duct (1) >> Install

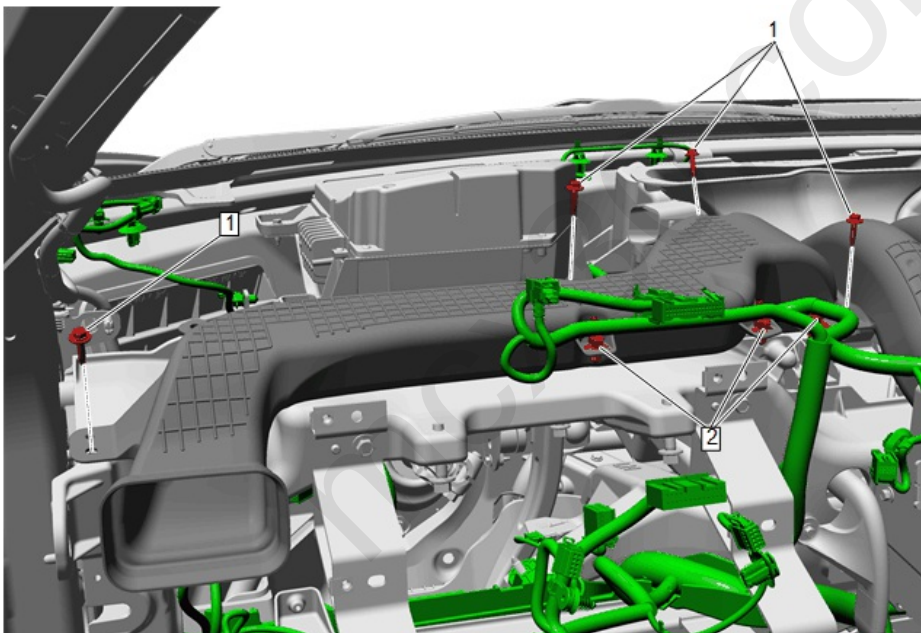


63. [Click here for full size](#)
64. Wiring Harness Retainer (2) @ Instrument Panel Outer Air Outlet Duct >> Install [3x]
65. Note:  
Refer to the procedure link for torque specification.
66. Instrument Panel Outer Air Outlet Duct Bolt (1) >> Install [4x] - Instrument Panel Outer Air Outlet Duct Replacement

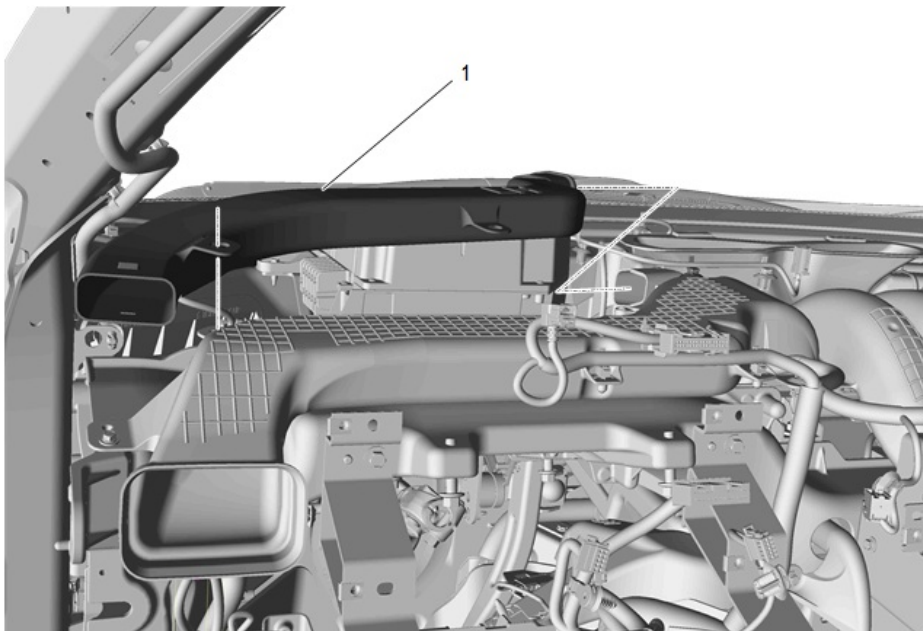


67.  
[Click here for full size](#)

68. Side Window Defogger Outlet Duct - Left Side (1) >> Install

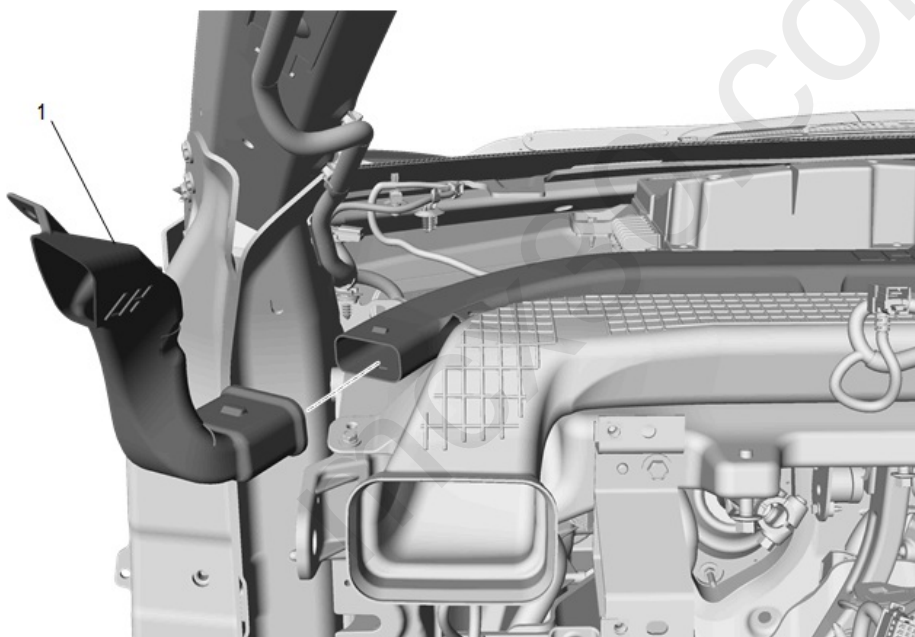


69.  
[Click here for full size](#)

70. Side Window Defogger Outlet Duct - Left Side (1) >> Install

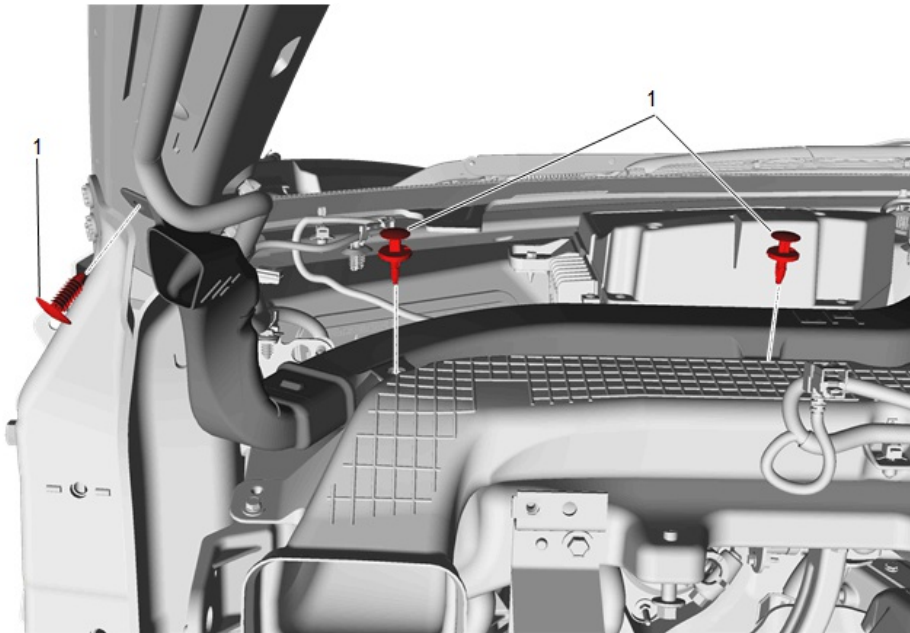

71.  
[Click here for full size](#)

72. Side Window Defogger Outlet Duct Retainer (1) >> Install [3x]

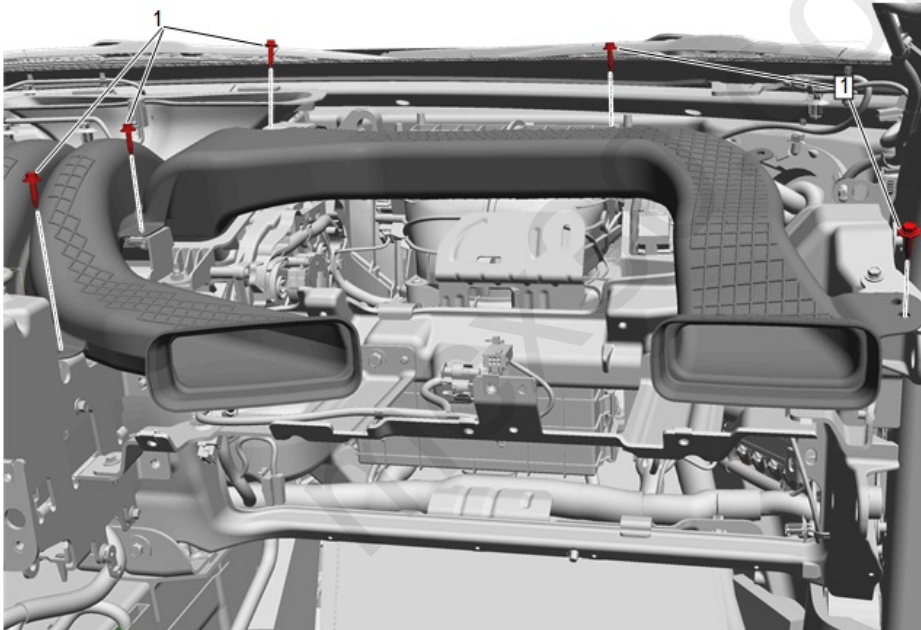


73.  
[Click here for full size](#)


74. Note:

Refer to the procedure link for torque specification.


75. Instrument Panel Outer Air Outlet Duct Bolt (1) >> Install [5x] - Instrument Panel Outer Air Outlet Duct Replacement

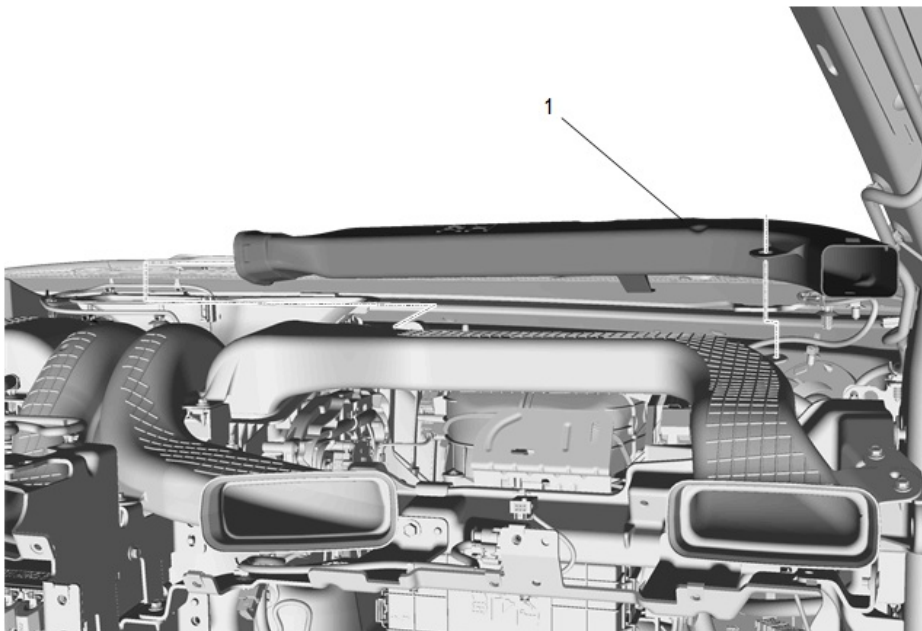


76. [Click here for full size](#)
77. Side Window Defogger Outlet Outer Duct - Right Side (1) >> Install
78. [Click here for full size](#)
79. Instrument Panel Wiring Harness Retainer (1) @ Side Window Defogger Outlet Outer Duct - Right Side >> Install

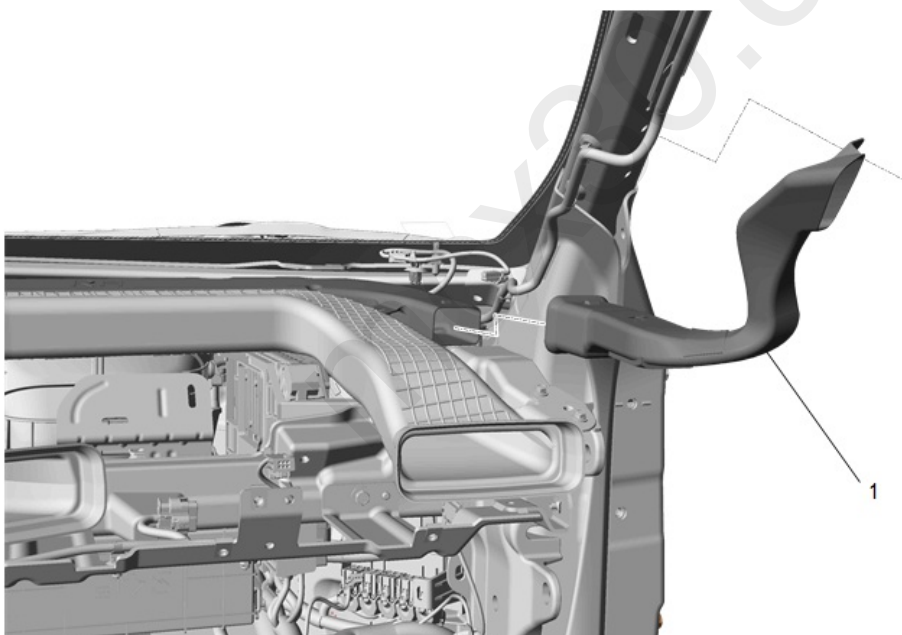


80. [Click here for full size](#)
81. Side Window Defogger Outlet Outer Duct - Right Side (1) >> Install

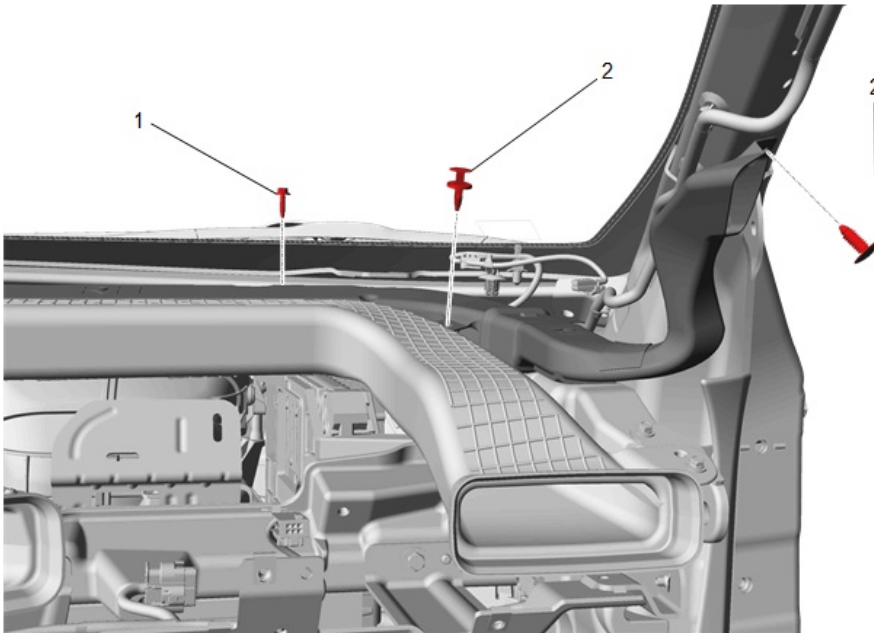

82. [Click here for full size](#)
83. Side Window Defogger Outlet Duct Retainer (2) >> Install [2x]
84. Note:  
Refer to the procedure link for torque specification.
85. Side Window Defogger Outlet Duct Bolt (1) >> Install - Side Window Defogger Outlet Duct Replacement - Right Side

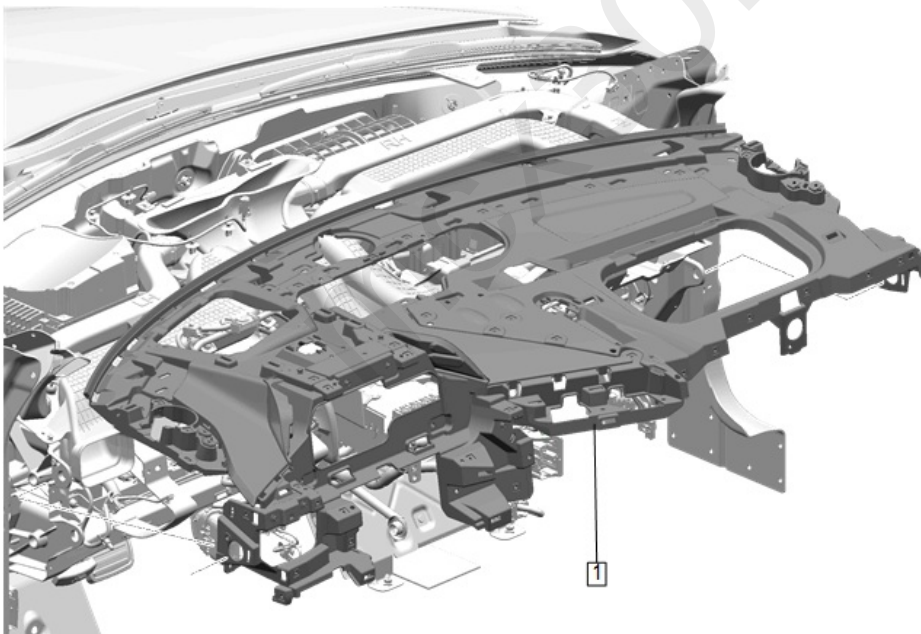


86. [Click here for full size](#)
87. Instrument Panel Carrier (1) >> Install - Instrument Panel Carrier Replacement

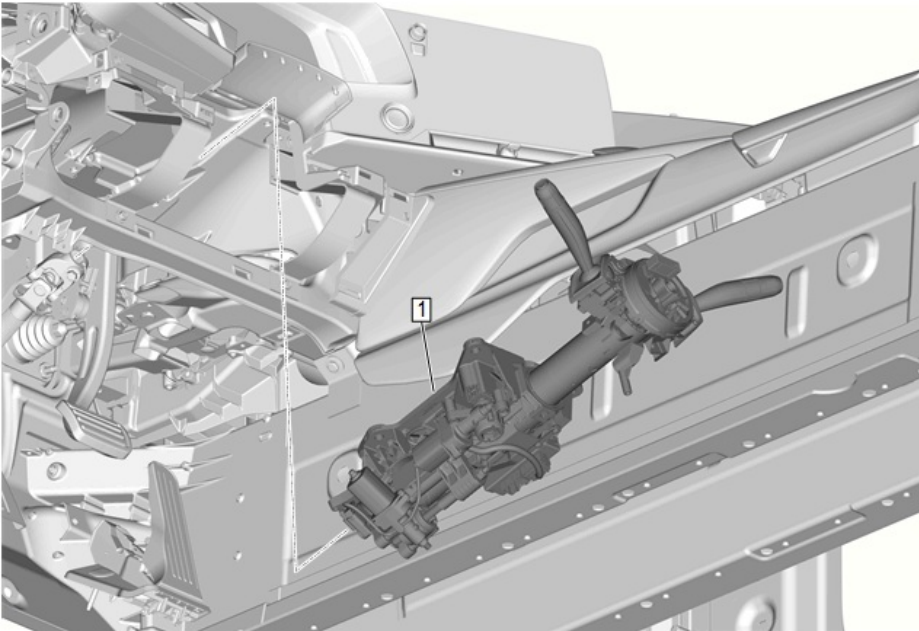


88.  
[Click here for full size](#)

89. Steering Column (1) >> Install - Steering Column Replacement

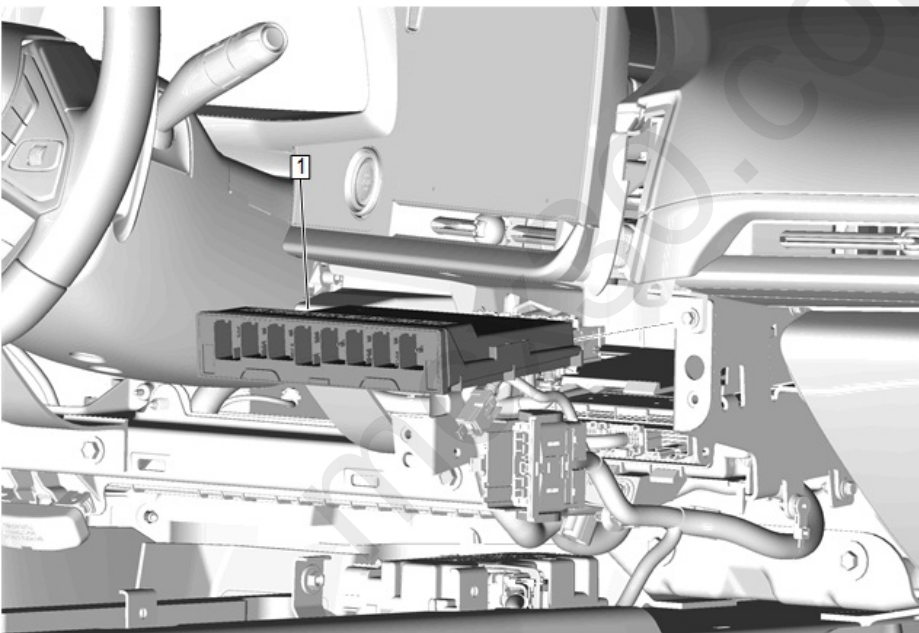


90.  
[Click here for full size](#)

91. Body Control Module (1) >> Install - Body Control Module Replacement

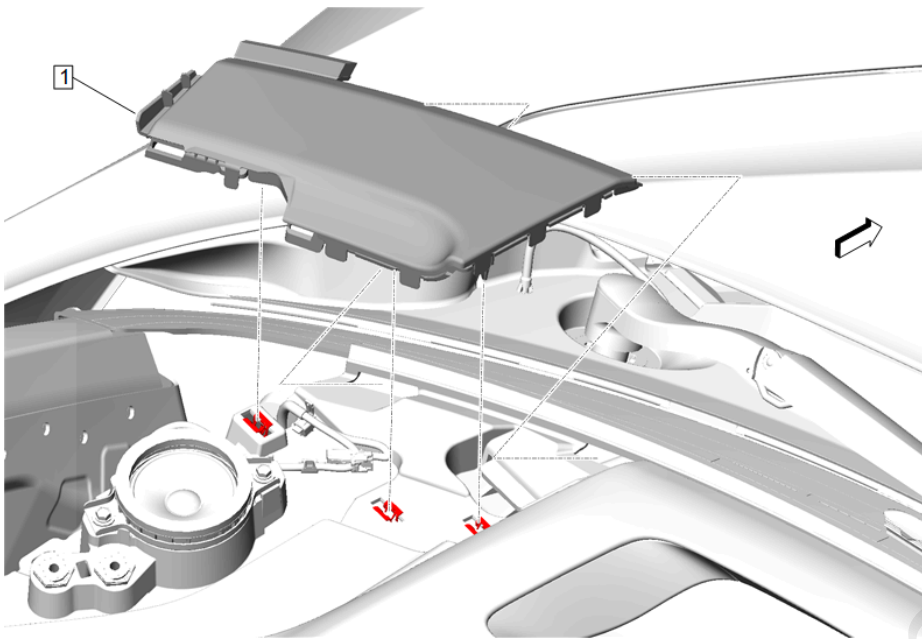


92.  
[Click here for full size](#)

93. Instrument Panel Upper Trim Panel Cover (1) >> Install - Instrument Panel Upper Trim Panel Cover Replacement

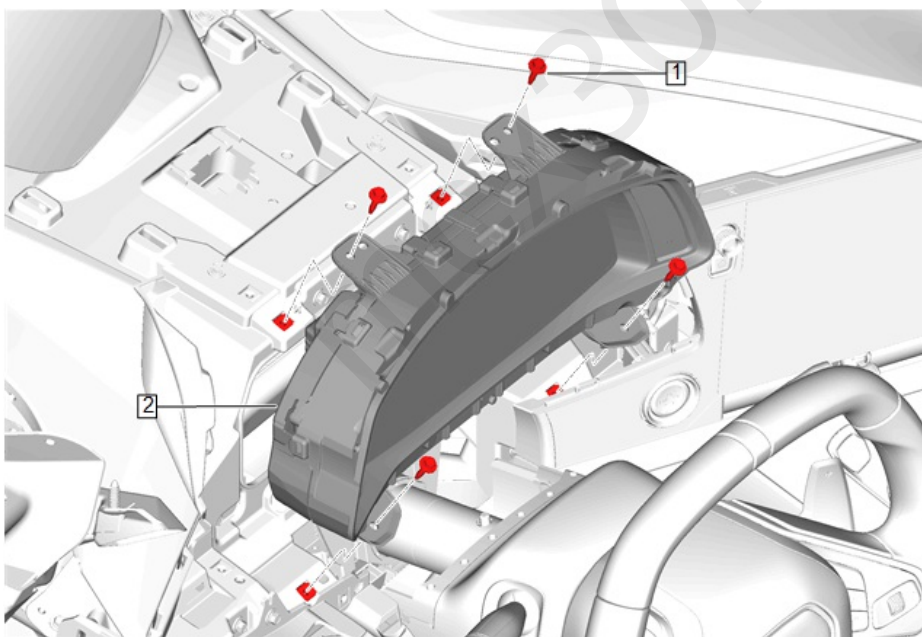


94.  
[Click here for full size](#)

95. Instrument Cluster (2) >> Install - Instrument Cluster Replacement

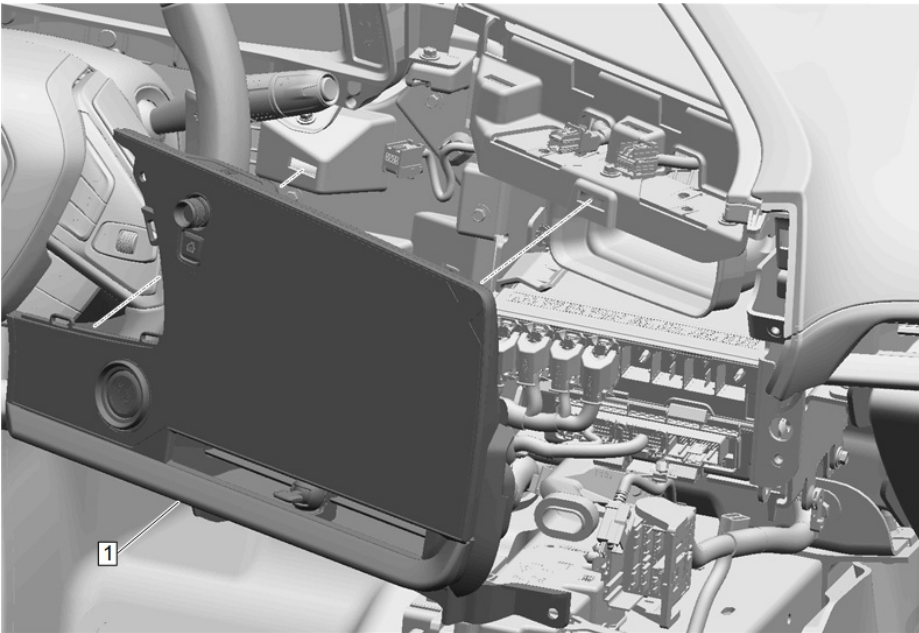


96.  
[Click here for full size](#)

97. Radio Control (1) >> Install - Radio Control Replacement

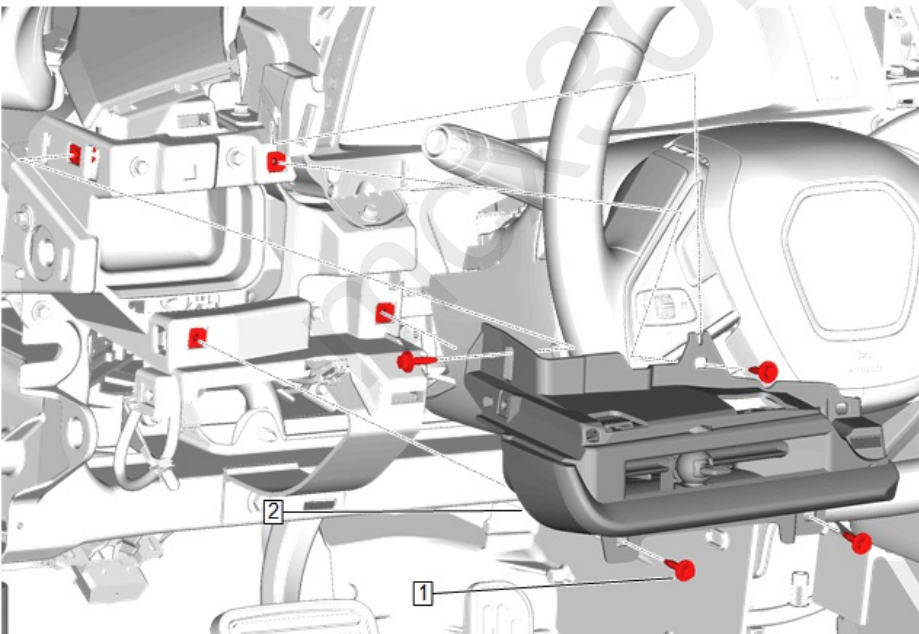


98.  
[Click here for full size](#)

99. Instrument Panel Air Outlet Bezel - Left Side (2) >> Install - Instrument Panel Air Outlet Bezel Replacement - Left Side

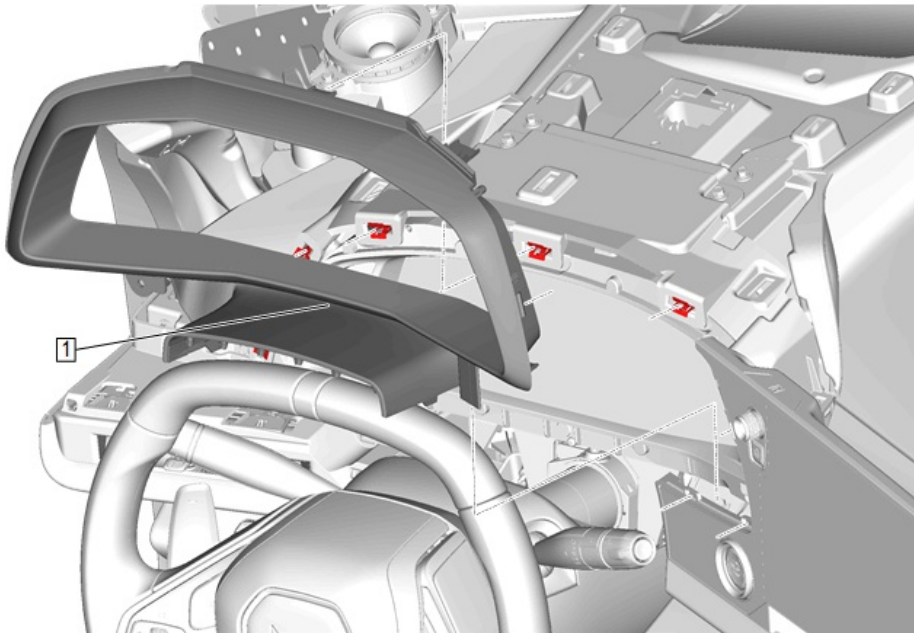


100.  
[Click here for full size](#)

101. Instrument Panel Cluster Trim Plate (1) >> Install - Instrument Panel Cluster Trim Plate Replacement

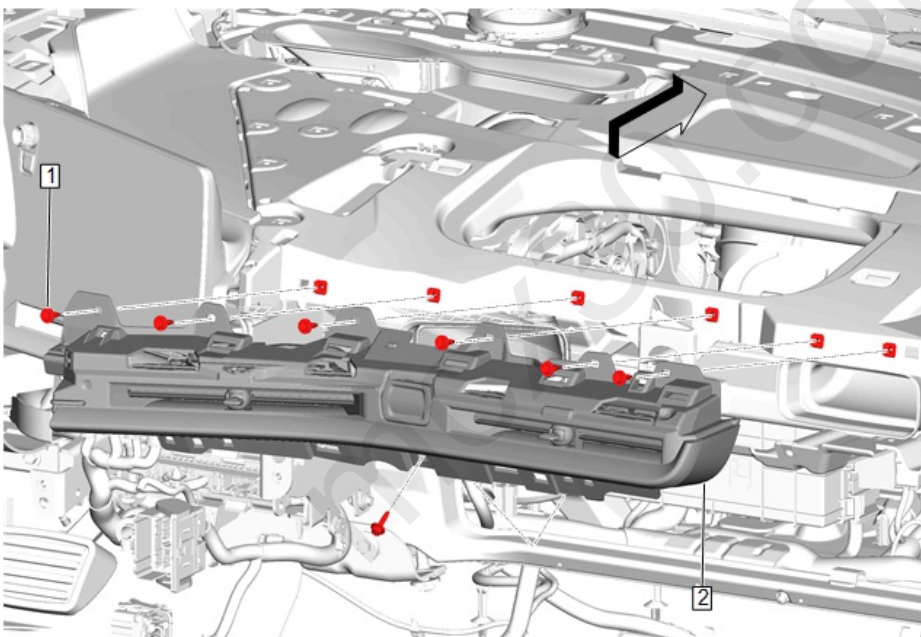


102.  
[Click here for full size](#)

103. Instrument Panel Air Outlet Bezel - Right Side (2) >> Install - Instrument Panel Air Outlet Bezel Replacement - Right Side

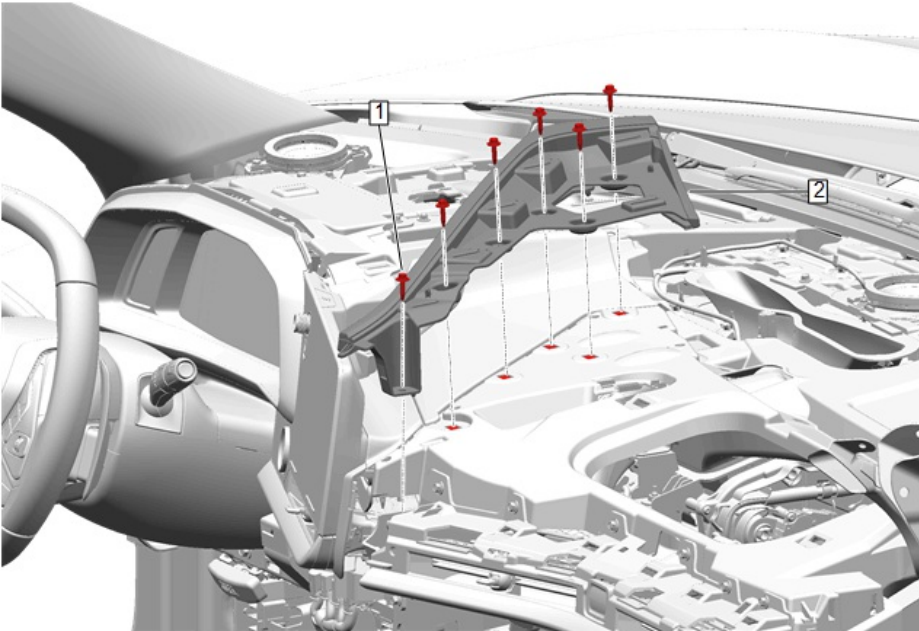


104.  
[Click here for full size](#)

105. Instrument Panel Trim Pad (2) >> Install - Instrument Panel Trim Pad Replacement

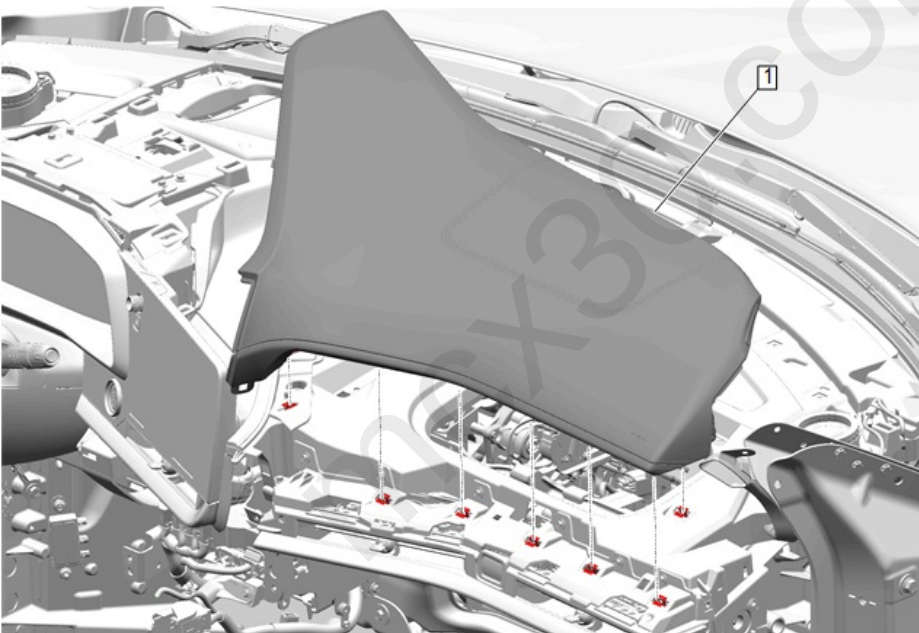


106.  
[Click here for full size](#)

107. Instrument Panel Upper Trim Panel (1) >> Install - Instrument Panel Upper Trim Panel Replacement

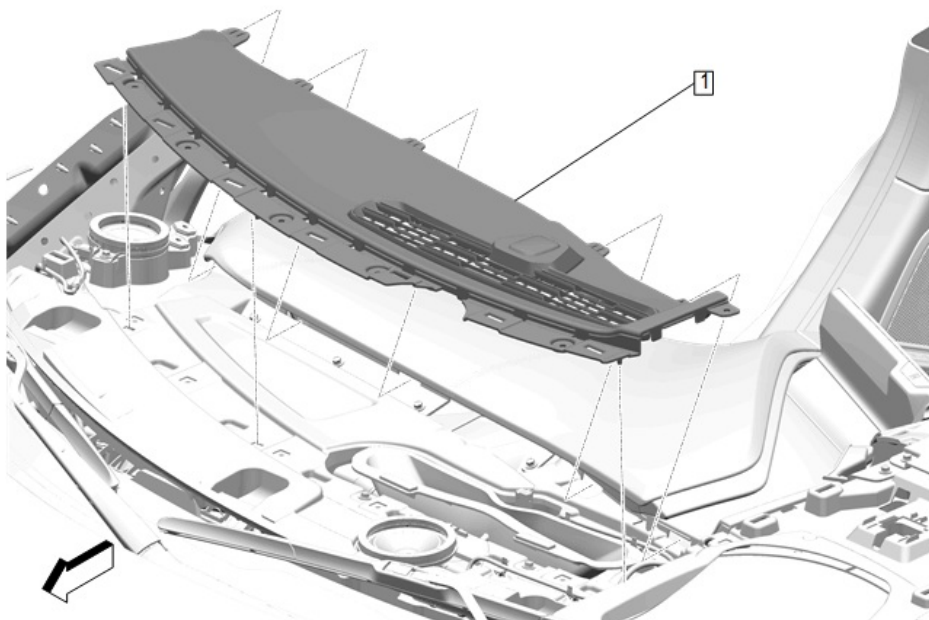


108.  
[Click here for full size](#)

109. Instrument Panel Extension (1) >> Install - Instrument Panel Extension Replacement

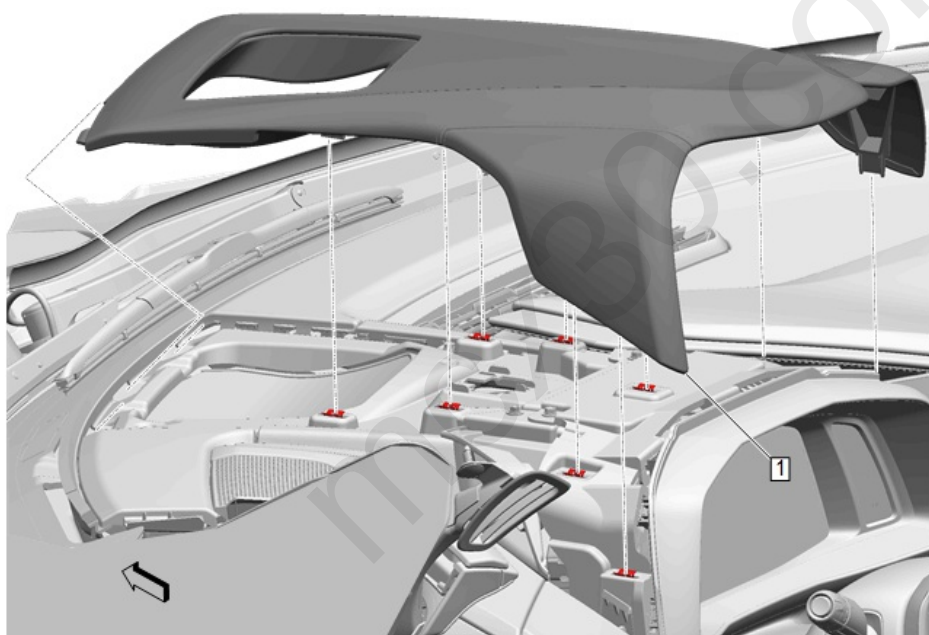


110.  
[Click here for full size](#)

111. Instrument Panel Instrument Cluster Hood (1) >> Install - Instrument Panel Instrument Cluster Hood Replacement

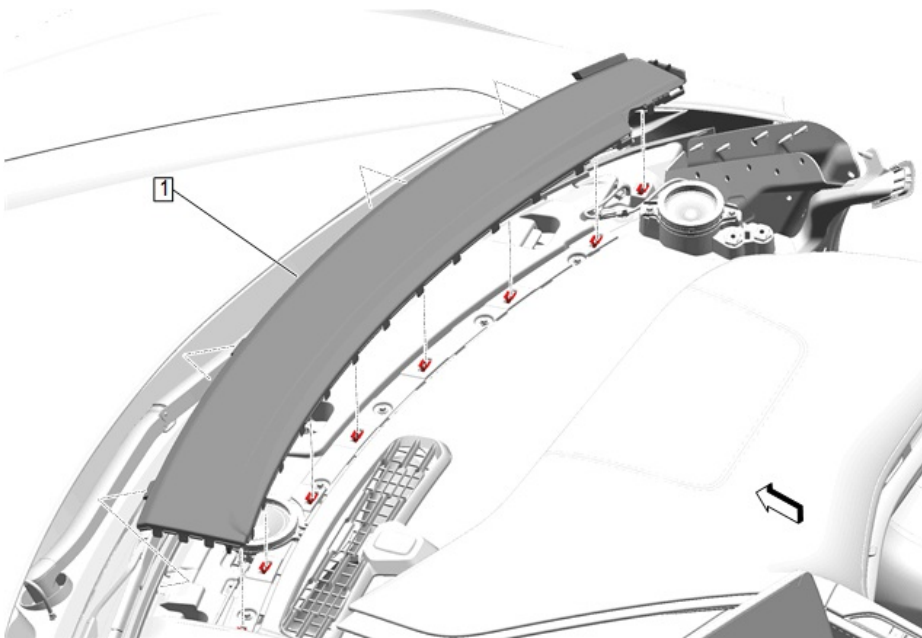


112.  
[Click here for full size](#)

113. Radio Front Center Speaker Grille (1) >> Install - Radio Front Center Speaker Grille Replacement

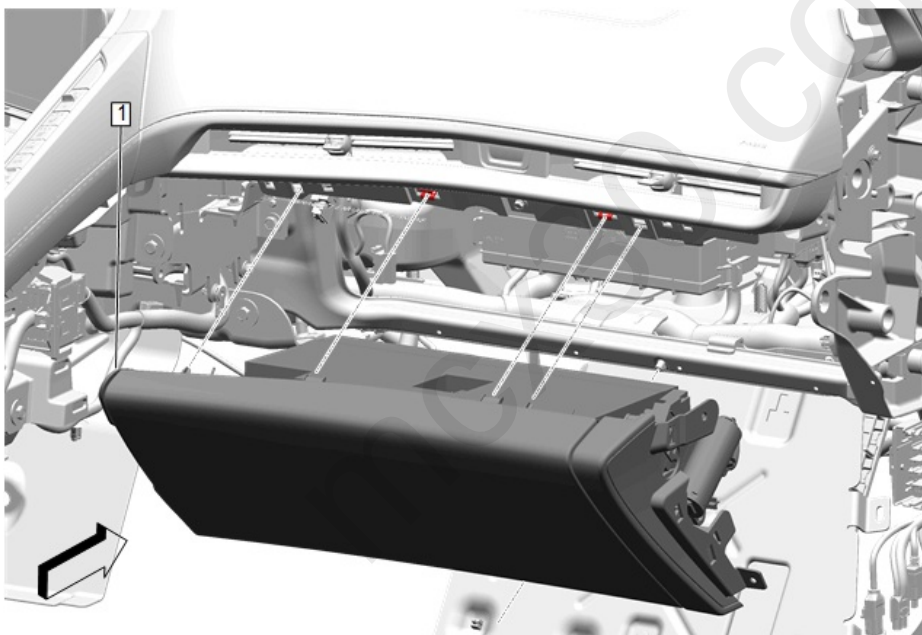


114.  
[Click here for full size](#)

115. Instrument Panel Compartment (1) >> Install - Instrument Panel Compartment Replacement

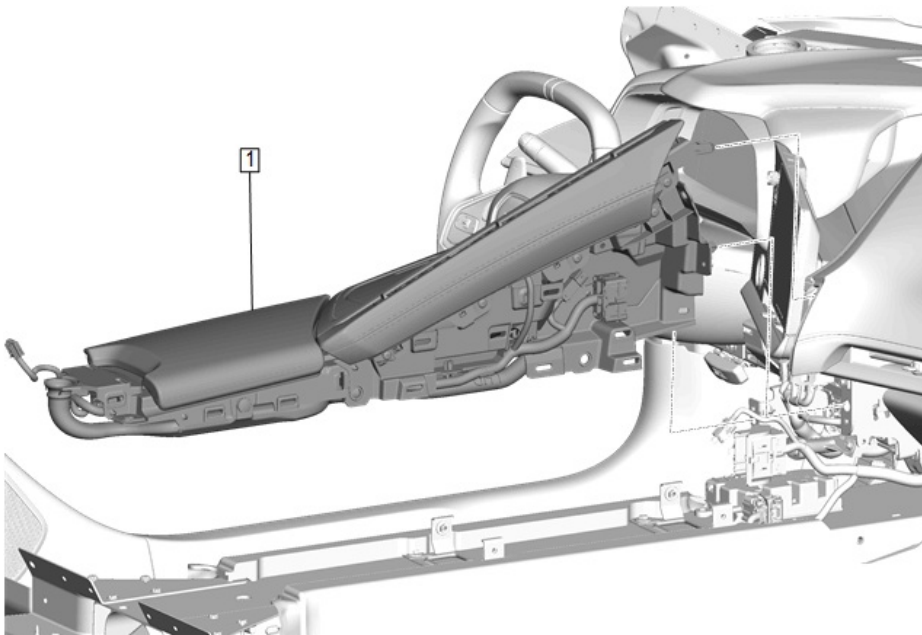


116.  
[Click here for full size](#)

117. Front Floor Console Compartment (1) >>> Install - Front Floor Console Compartment Replacement

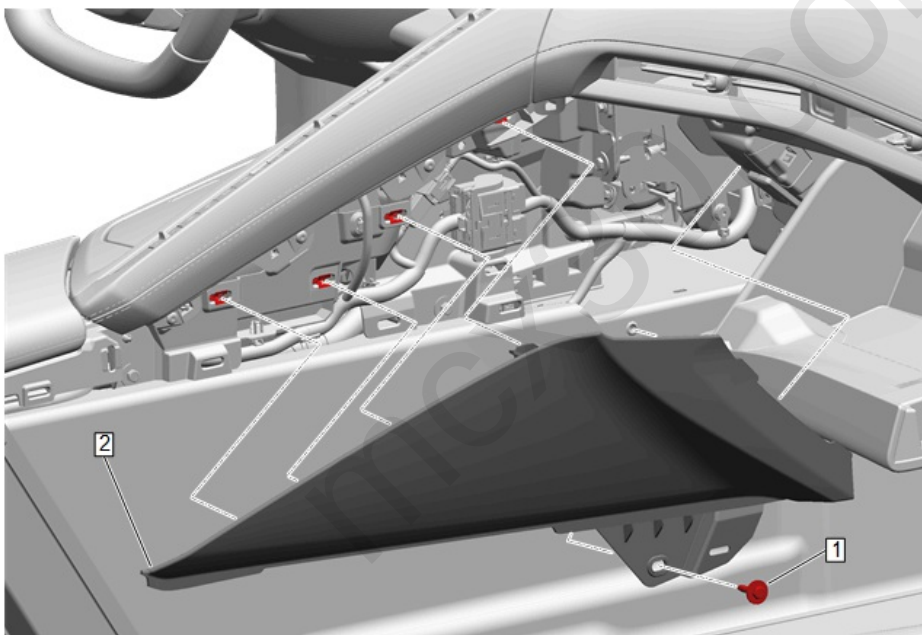

118.  
[Click here for full size](#)

119. Front Floor Console Extension Panel (2) >>> Install - Front Floor Console Extension Panel Replacement

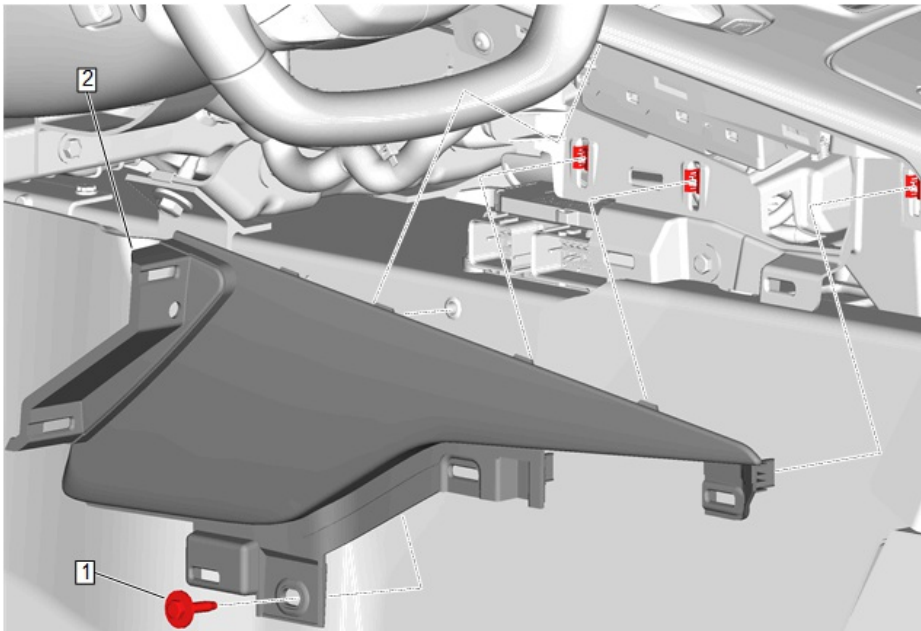


120.  
[Click here for full size](#)

121. Front Floor Console Applique - Left Side (2) >> Install - Front Floor Console Applique Replacement - Left Side




122.  
[Click here for full size](#)

123. Rear Compartment Closeout Panel (1) >> Install - Rear Compartment Closeout Panel Replacement

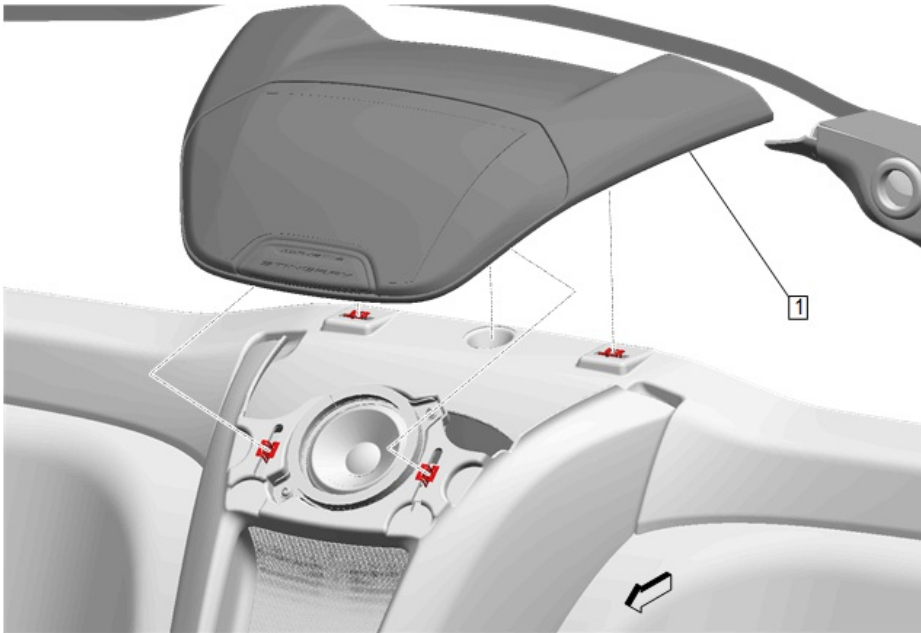


124.  
[Click here for full size](#)

125. Radio Rear Quarter Trim Panel Speaker Grille (1) >> Install - Radio Rear Quarter Trim Panel Speaker Grille Replacement

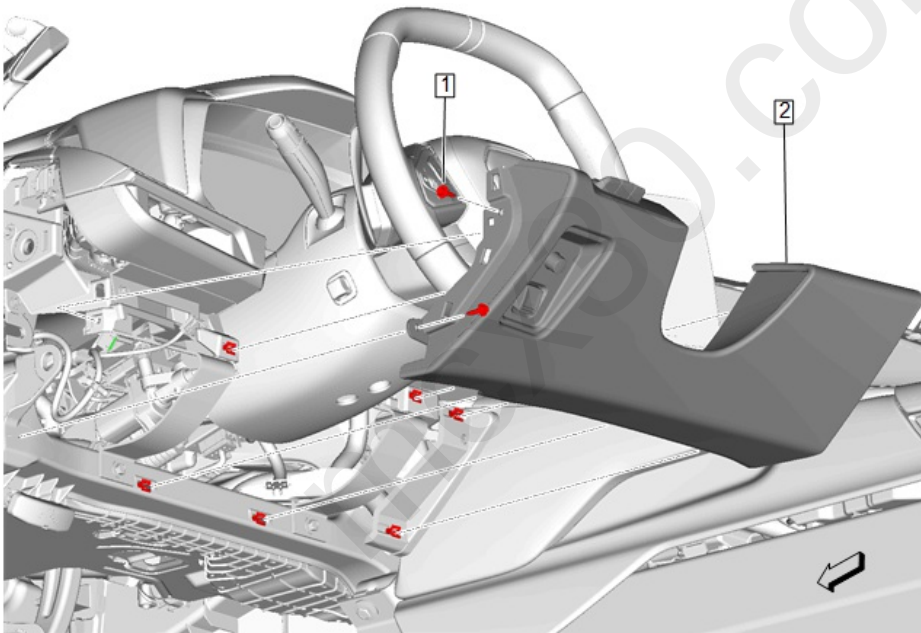


126.  
[Click here for full size](#)

127. Instrument Panel Knee Bolster (2) >> Install - Instrument Panel Knee Bolster Replacement

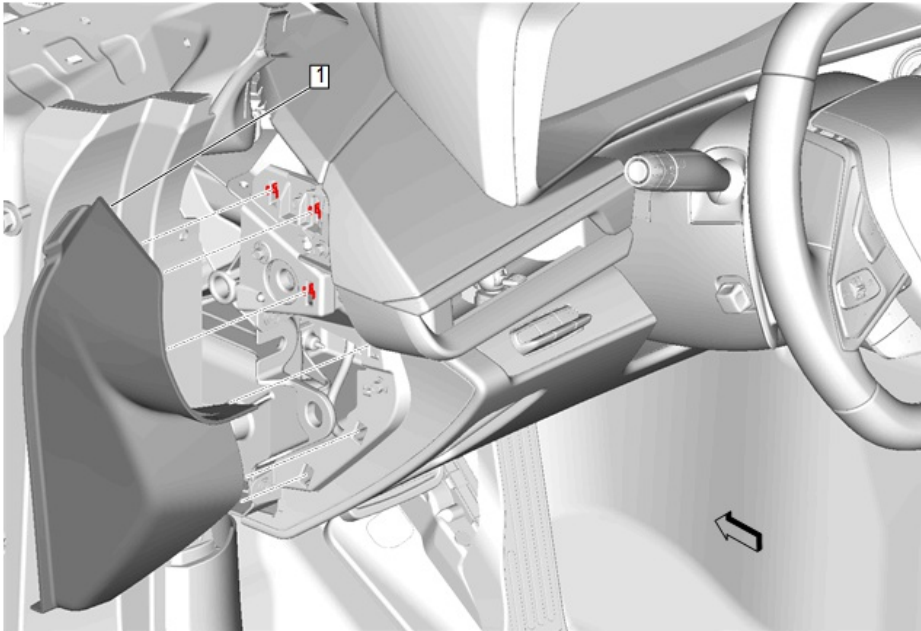

128. [Click here for full size](#)

129. Install the left and right instrument panel outer trim cover (1). Instrument Panel Outer Trim Cover Replacement

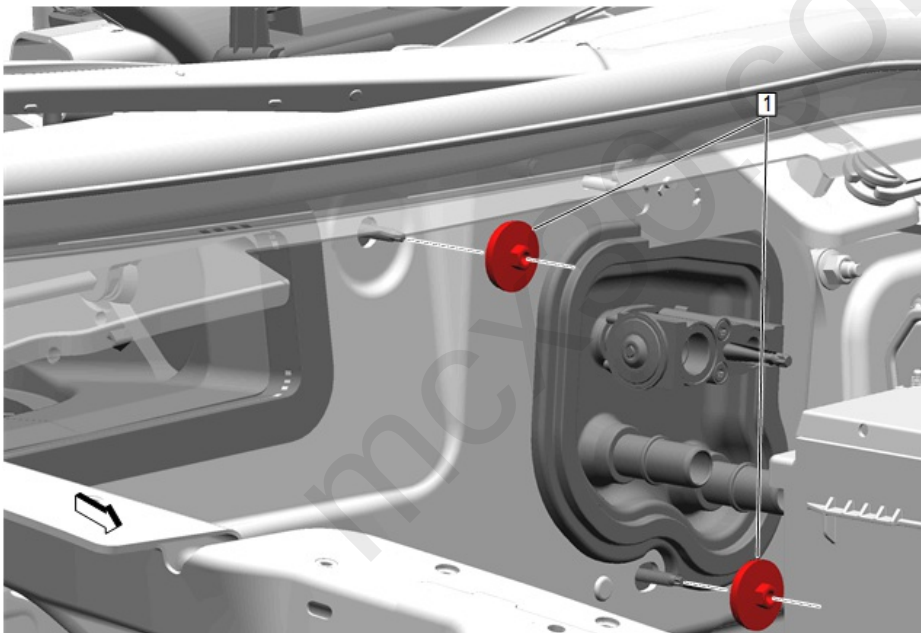

130. [Click here for full size](#)

131. Heater and Blower Module Nut (1) >> Install and tighten [2x]9>N-m (80 lb in)

132. Heater Outlet Hose @ Heater Core Outlet Tube >> Install - Heater Outlet Hose Replacement

133. Radiator Inlet Hose @ Heater Core Inlet Tube >> Install - Radiator Inlet Hose Replacement - Radiator Inlet Pipe to A/C Tube

134. [Click here for full size](#)

135. Caution:


Refer to Fastener Caution.

136. Air Conditioning Evaporator Thermal Expansion Valve Stud (2) >> Install and tighten 9 N-m (80 lb in)

137. Note:


Refer to the procedure link for torque specification.

138. Air Conditioning Condenser and Evaporator Hose Fitting Nut (1) >> Install and tighten - Air Conditioning Condenser and Air Conditioning Evaporator Tube Replacement

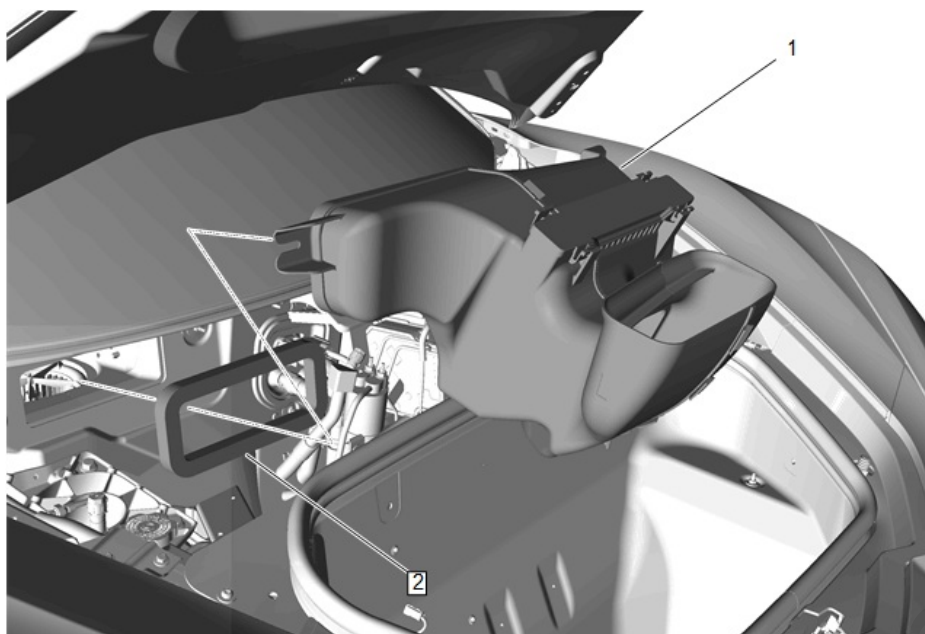


139.  
[Click here for full size](#)

140. Air Inlet Housing Front Panel (1) >> Install - Air Inlet Housing Front Panel Replacement

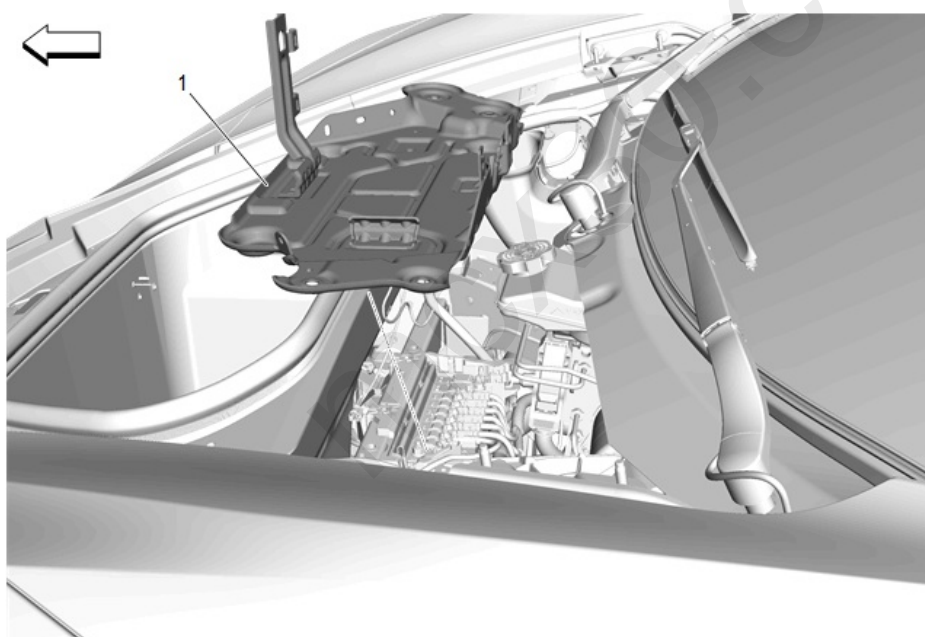

141.  
[Click here for full size](#)

142. Battery Tray (1) >> Install - Battery Tray Replacement

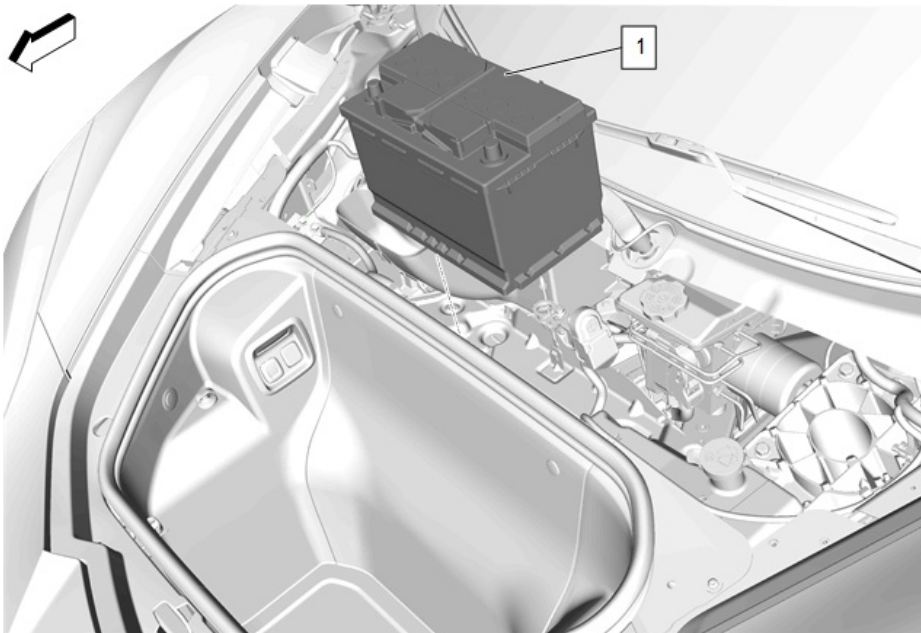

143.  
[Click here for full size](#)

144. Battery (1) >> Install - Battery Replacement

145. Connect the negative battery cable. Battery Negative Cable Disconnection and Connection

146. Fill the cooling system to the proper level. Cooling System Draining and Filling

147. Evacuate and charge the refrigerant system. Refrigerant Recovery and Recharging


148. Inspect for coolant leaks.

149. Inspect for refrigerant leaks.



150.  
[Click here for full size](#)

151. Front Compartment Front Panel (1) >> Install - Front Compartment Front Panel Replacement

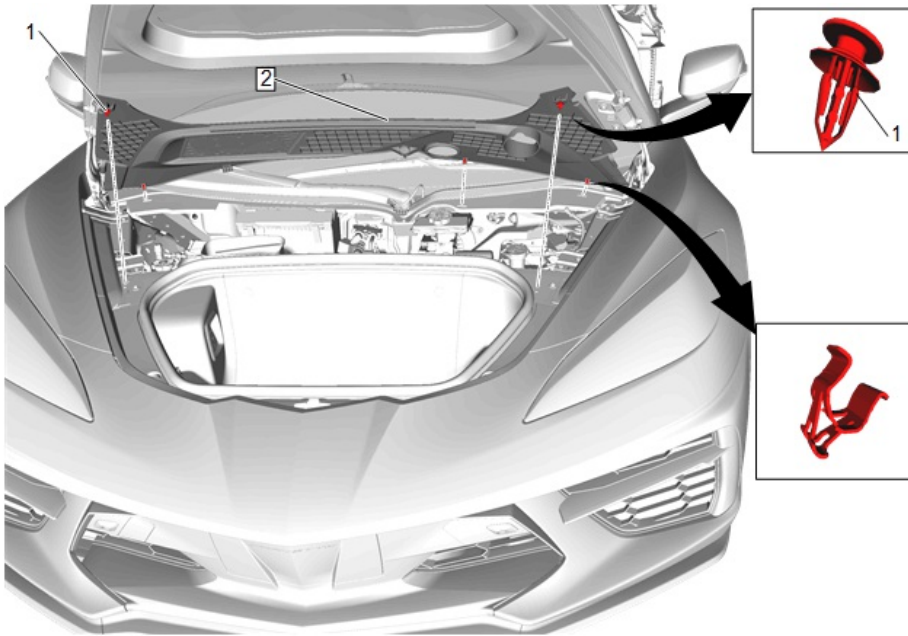


152.  
[Click here for full size](#)

153. Front Compartment Rear Access Cover (2) >> Install - Front Compartment Rear Access Cover Replacement



154.  
[Click here for full size](#)

155. Install the left and right front seats (2). Front Seat Removal and Installation

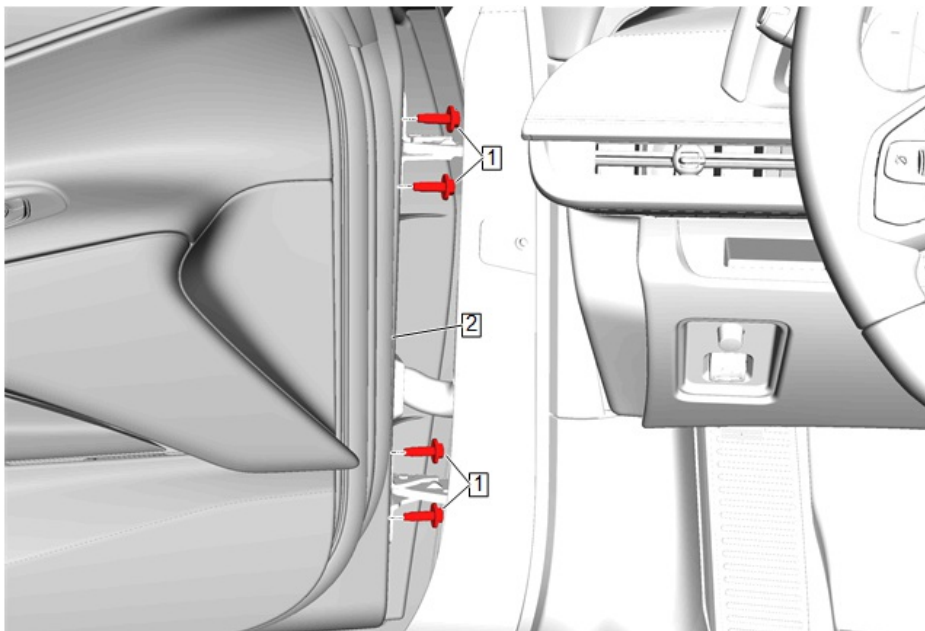

156.  
[Click here for full size](#)

157. Install the left front side door (2). Front Side Door Replacement

mcx30.com