

2022 CHEVROLET CORVETTE SERVICE MANUAL

- [SEARCH](#)

1. [HVAC](#)

2. [Heating, Ventilation, and Air Conditioning](#)


3. [Repair Instructions](#)

- 4.


Heater Outlet Hose Replacement

Removal Procedure


1. Drain the cooling system. Cooling System Draining and Filling

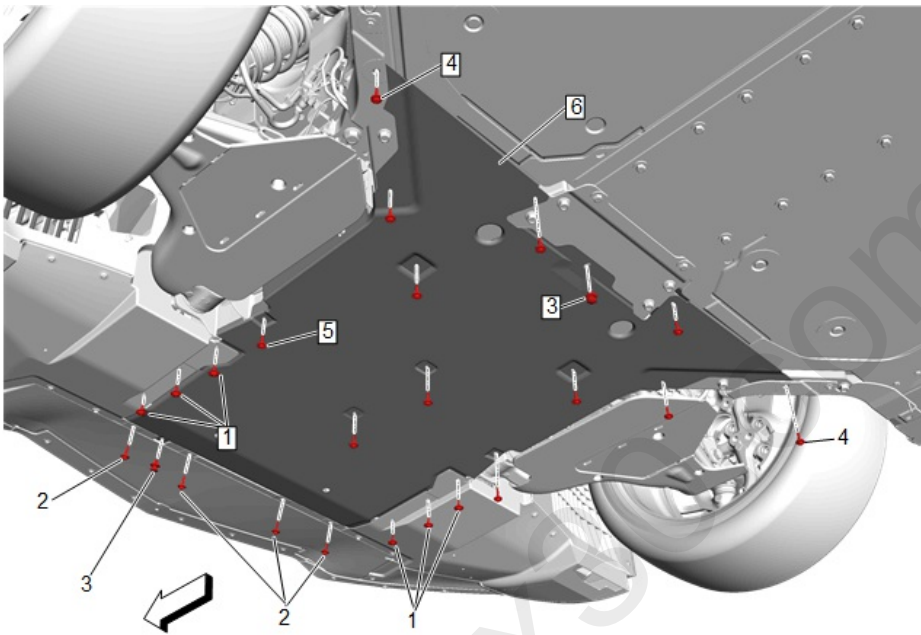


2. [Click here for full size](#)
3. Front Compartment Insulator (6) >> Remove - Front Compartment Insulator Replacement
4. Floor Panel Tunnel Panel Front Reinforcement - Tunnel Front >> Remove - Floor Panel Tunnel Panel Front Reinforcement Replacement - Tunnel Front

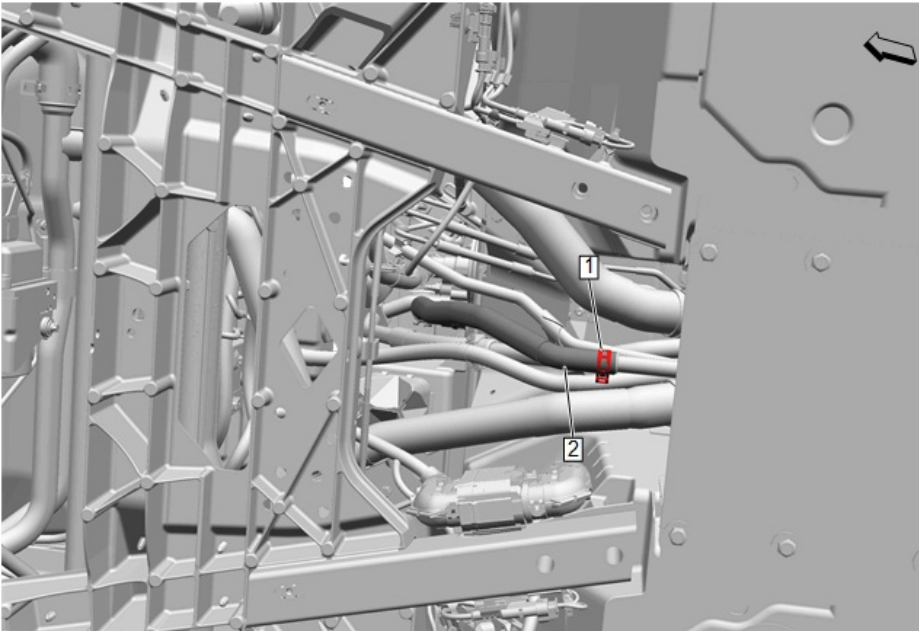

5. [Click here for full size](#)
6. Heater Outlet Hose Clamp (1) >> Disengage - Hose Clamp Replacement Guidelines - Spring Type
7. Heater Outlet Hose (2) @ Air Conditioning Condenser and Air Conditioning Evaporator Tube >> Remove
8. Battery Tray >> Remove - Battery Tray Replacement

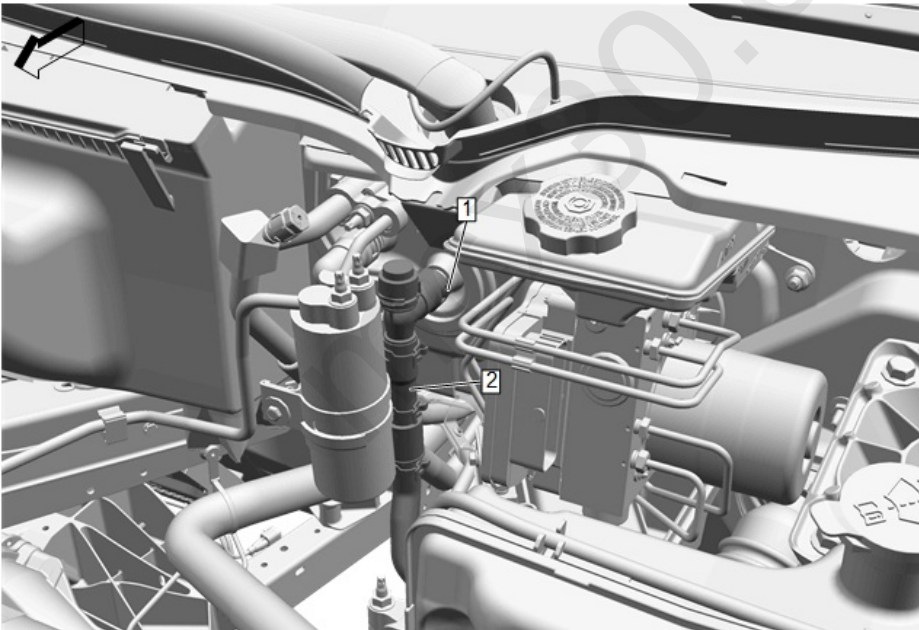

9. [Click here for full size](#)
10. Radiator Inlet Hose (2) @ Heater Core >> Remove - Radiator Inlet Hose Replacement - Radiator Inlet Pipe to A/C Tube

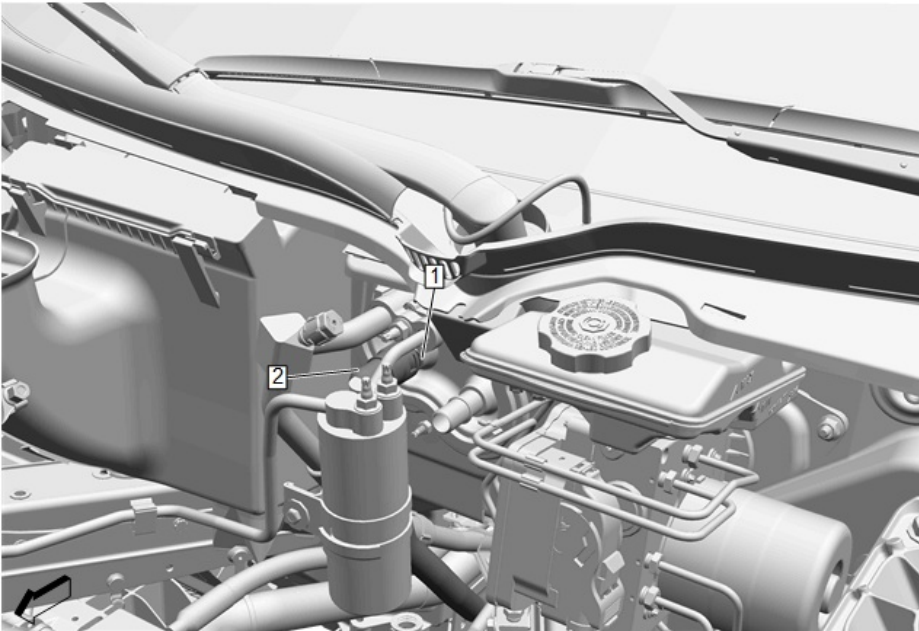


11. [Click here for full size](#)
12. Heater Outlet Hose Retainer (1) >> Disengage
13. Heater Outlet Hose (2) @ Heater Core >> Remove
14. Heater Outlet Hose (2) >> Remove


Installation Procedure




1. [Click here for full size](#)
2. Heater Outlet Hose (2) @ Heater Core >> Install
3. Heater Outlet Hose Retainer (1) >> Engage

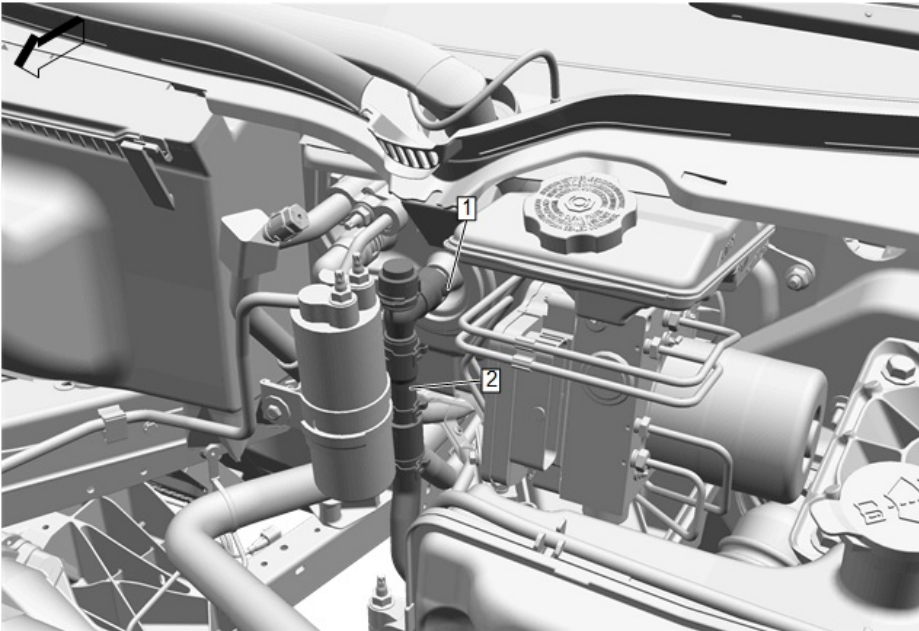

4. [Click here for full size](#)
5. Radiator Inlet Hose (2) @ Heater Core >> Install - Radiator Inlet Hose Replacement - Radiator Inlet Pipe to A/C Tube
6. Battery Tray >> Install - Battery Tray Replacement

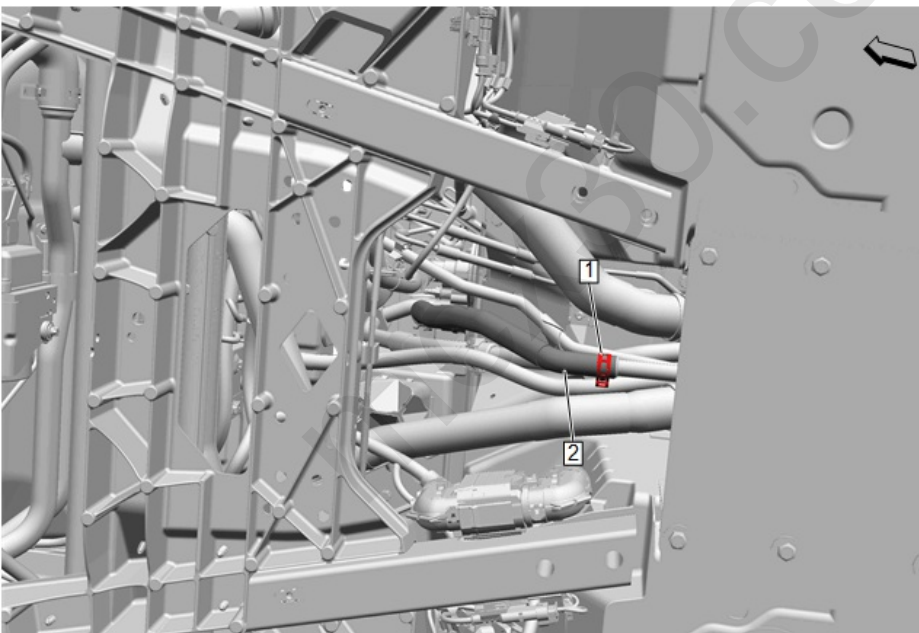

7. [Click here for full size](#)
8. Heater Outlet Hose (2) @ Air Conditioning Condenser and Air Conditioning Evaporator Tube >> Install
9. Heater Outlet Hose Clamp (1) >> Engage - Hose Clamp Replacement Guidelines - Spring Type
10. Floor Panel Tunnel Panel Front Reinforcement - Tunnel Front >> Install - Floor Panel Tunnel Panel Front Reinforcement Replacement - Tunnel Front

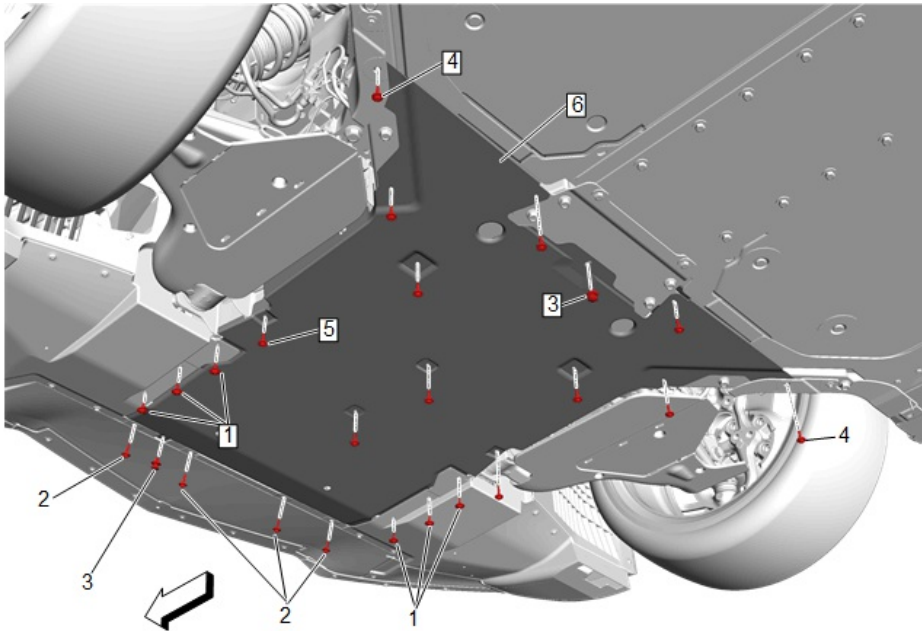

11. [Click here for full size](#)
12. Front Compartment Insulator (6) >> Install - Front Compartment Insulator Replacement
13. Fill the cooling system to the proper level. Cooling System Draining and Filling
14. Start the engine and check for coolant leaks.