

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Safety and Security**
2. **Supplemental Restraints**
3. **Repair Instructions**
- 4.

Front Seat Belt Retractor Replacement (convertible)

Warning:

Refer to SIR Warning.

Warning:

Refer to SIR Inflator Module Handling and Storage Warning.

Warning:

Refer to Folding Top and Folding Top Stowage Compartment Lid Operation Warning.

Warning:


Refer to Folding Top Stowage Compartment Lid Heat Warning.

Caution:

Refer to Folding Top Guidelines Caution.

Removal Procedure

1. Disable the SIR system. SIR Disabling and Enabling
2. Operate the folding top to the halfway open position. Folding Top and Folding Top Stowage Compartment Lid Operation

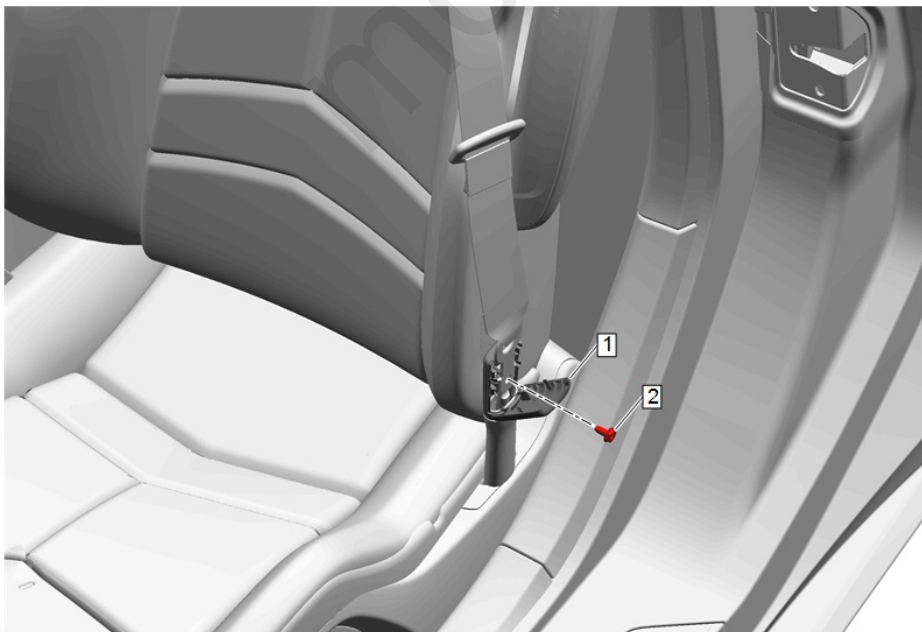

3.
Click here for full size
4. Open the front seat belt anchor plate tensioner cover (1) to remove front seat belt anchor plate tensioner bolt (2)


7. Open the front seat belt anchor plate tensioner cover (1) to remove front seat belt anchor plate tensioner bolt (2).

5. [Click here for full size](#)

6. Note:

The front seat belt retractor trim cover is single use only and must be replaced everytime it is removed.

7. Front Seat Belt Retractor Trim Cover (1) >> Remove and DISCARD - Front Seat Belt Retractor Trim Cover Replacement

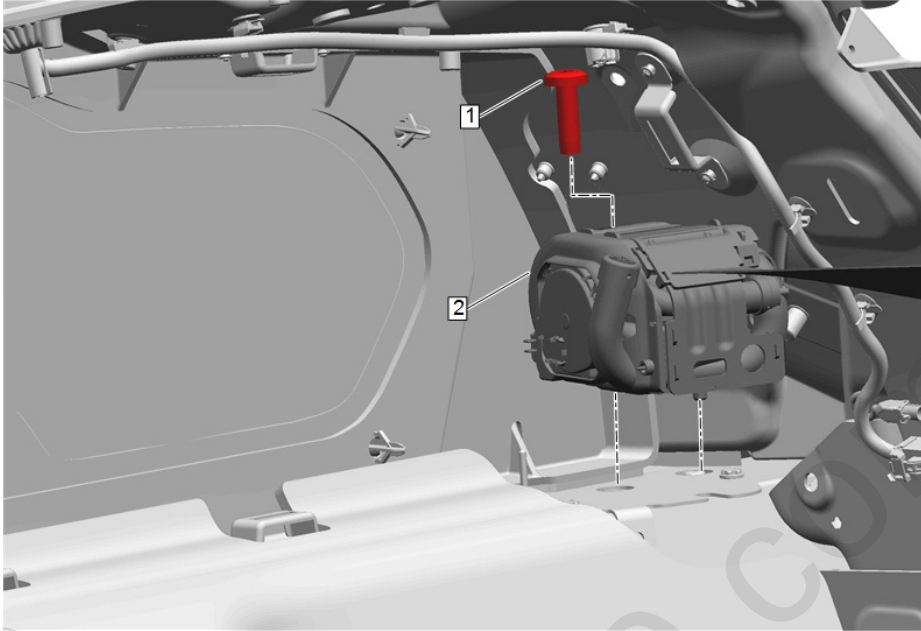

8.

[Click here for full size](#)


9. Front Seat Belt Retractor Bolt (1) >> Remove

10. Front Seat Belt Retractor (2) >> Remove


11. Disconnect the electrical connector.

12. Pretensioner Handling and Scrapping

Installation Procedure

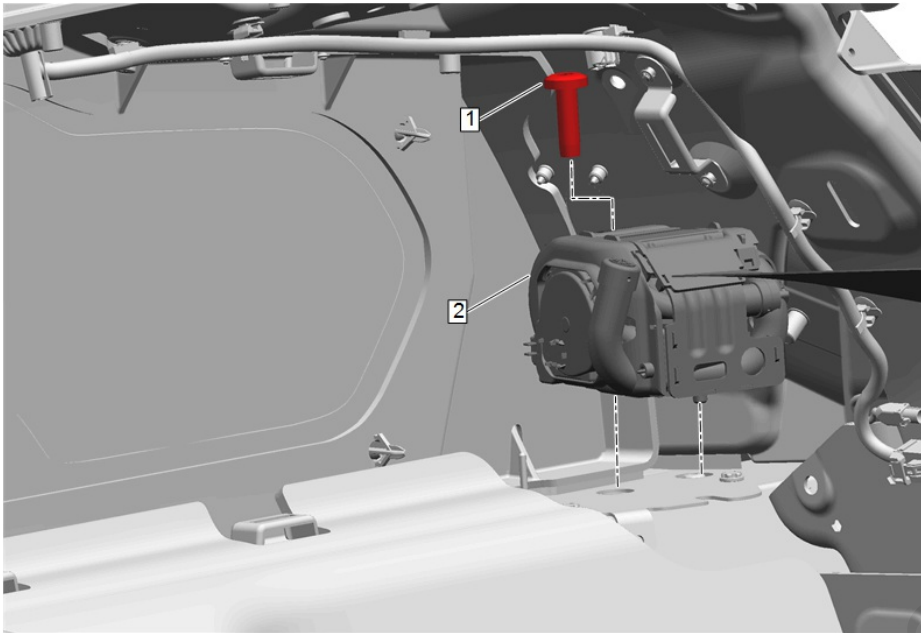

1.
Click here for full size
2. Front Seat Belt Retractor (2>) >> Install
3. Connect the electrical connector.
4. Caution:
Refer to Fastener Caution.
5. Front Seat Belt Retractor Bolt (1>) >> Install and tighten 45 N-m (33 lb ft)
6. Click here for full size
7. Front Seat Belt Retractor Trim Cover (1) >> Install NEW - Front Seat Belt Retractor Trim Cover Replacement
8.
 1. Engage the front hook to the retractor.
 2. Engage the side snap fit to the retractor.
 3. Engage the other side snap fit to the retractor.
 4. Engage the lower back snap fit to the retractor.

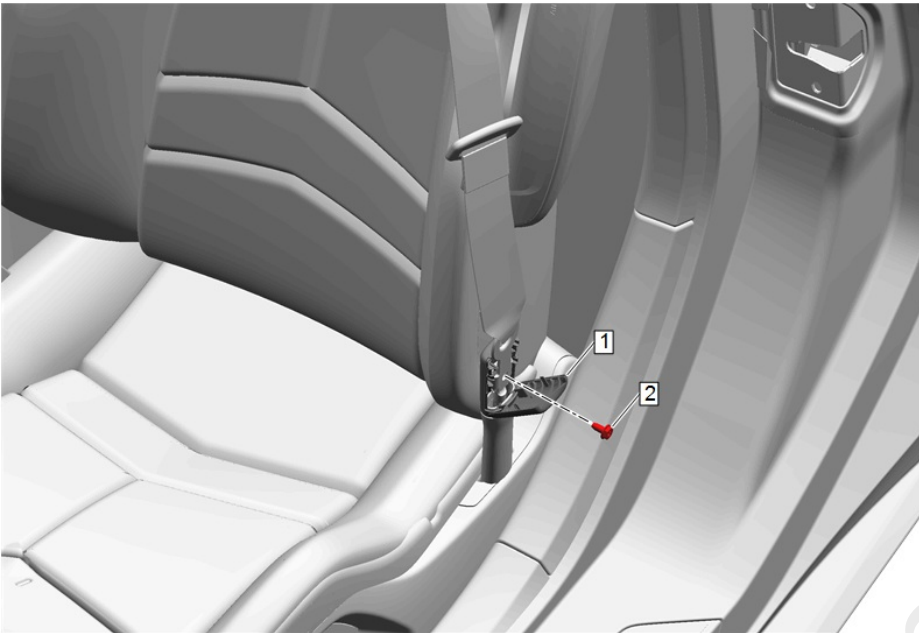

9.
Click [here](#) for full size
10. Front Seat Belt Anchor Plate Tensioner Bolt (2>) >> Install and tighten 6 N-m (53 lb in)
11. Front Seat Belt Anchor Plate Tensioner Cover (1) >> Install
12. Operate the folding top to the fully closed and locked position. Folding Top and Folding Top Stowage Compartment Lid Operation
13. Enable the SIR System. SIR Disabling and Enabling