

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Seats**
2. **Seat Hardware, Trim, and Upholstery**
3. **Repair Instructions**
- 4.


Front Seat Back Cushion Pad Support Replacement (AQ9)

Removal Procedure

1. Warning:
Refer to SIR Warning.
2. Disable the SIR system. SIR Disabling and Enabling




3.
Click here for full size
4. Front Seat (2) >>> Remove - Front Seat Removal and Installation

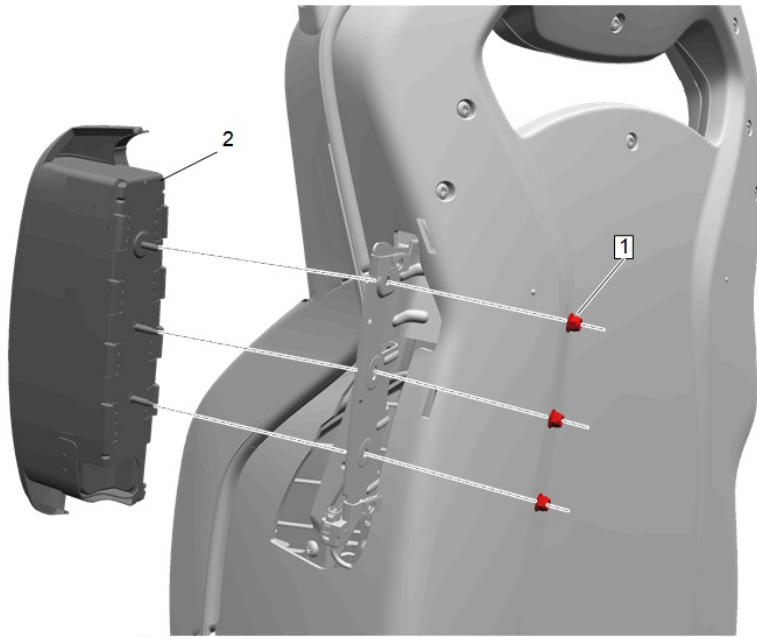


5.
[Click here for full size](#)

6. Front Seat Outboard Seat Back Airbag (2) >> Remove - Front Seat Outboard Seat Back Airbag Replacement

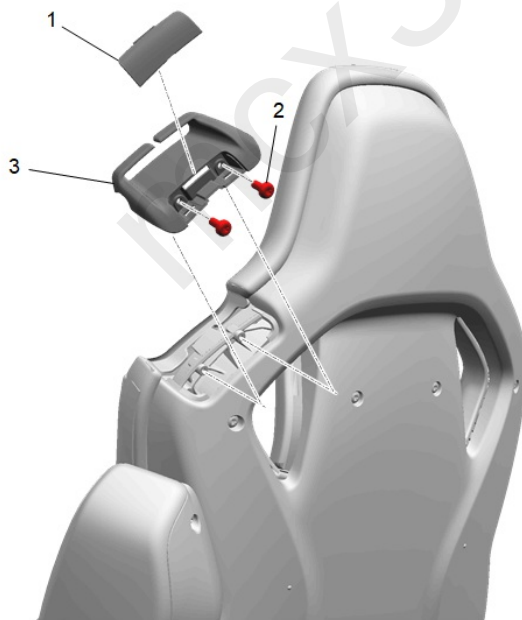

7.
[Click here for full size](#)

8. Front Seat Belt Guide (3) >> Remove - Front Seat Belt Guide Replacement

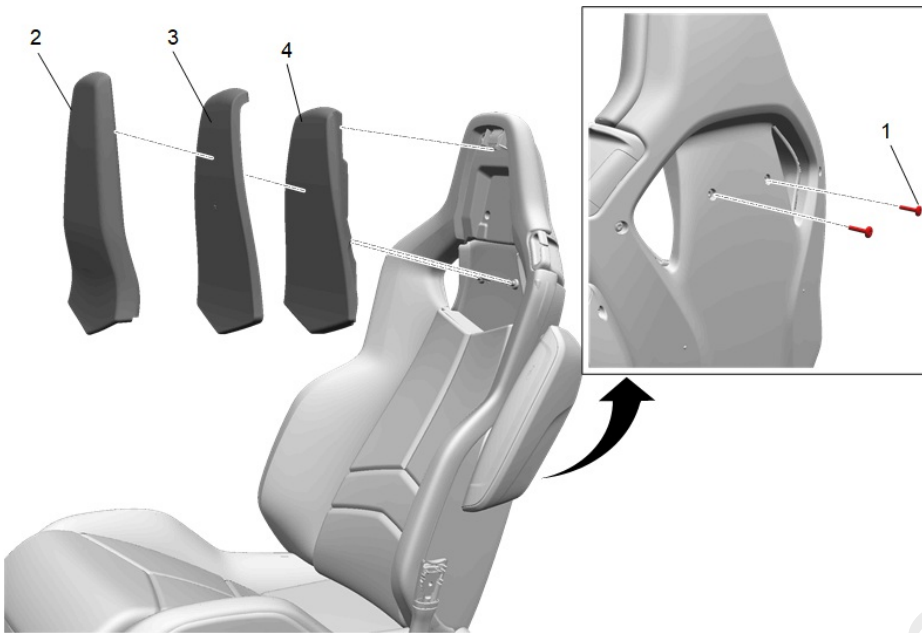


9.
[Click here for full size](#)

10. Note:

Remove the front seat head restraint cover and pad as an assembly. There is no need to separate the components.

11. Front Seat Head Restraint Cover and Pad (2,3,4) >> Remove - Front Seat Head Restraint Cover and Pad Replacement

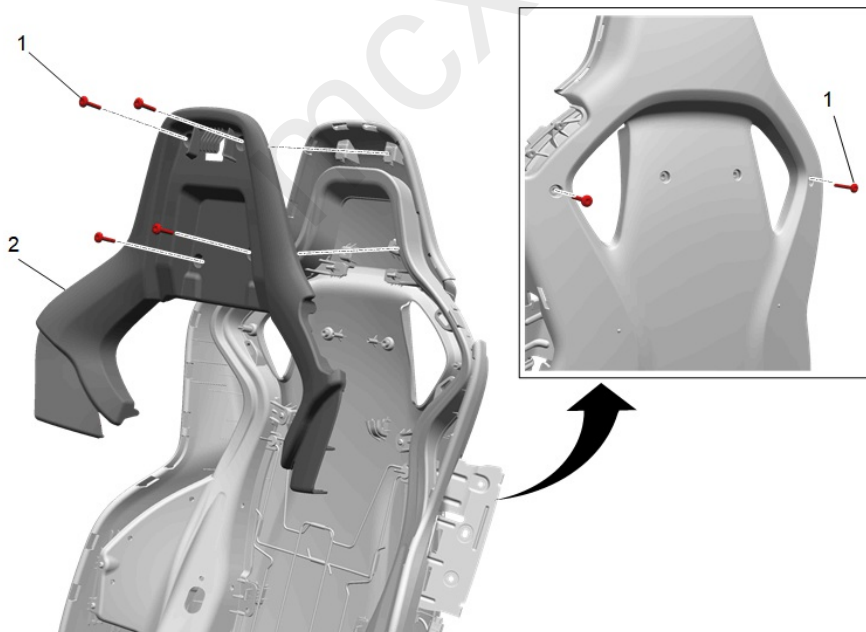

12.
[Click here for full size](#)

13. Front Seat Back Pad Support Screw (1) >> Remove [6x]




14. [Click here for full size](#)
15. Apply two layers of masking tape around the seat side surface to prevent paint damage.
16. Starting at the top, release the J-channel retainer along both sides of the cover (1).
17. Release the hook and loop retainers on the rear of the front seat cushion cover.
18. Release the J-channel retainer along the bottom rear of the cover (1).
19. Release the push in retainers along the top of the cover (1) near the seat back opening.
20. Disconnect the electrical connectors.
21. Slide the front seat cover and pad (1,3) upwards and pull outwards to release the hook retainers.
22. Remove the front seat back cover (1) and front seat back pad (3) as an assembly.
23. [Click here for full size](#)
24. Remove the hog rings and release the front seat back cover material from the front seat back cushion pad support.
25. Reposition the upper front seat back cover material as necessary.
26. Front Seat Back Cushion Pad Support (1) >> Remove

Installation Procedure

1. [Click here for full size](#)
2. Front Seat Back Cushion Pad Support (1) >> Install
3. Return the upper front seat back cover material to the original position.
4. Install the front seat back cover material to the front seat back cushion pad support and install the hog rings.



5. [Click here for full size](#)
6. Install the front seat back cover (1) and front seat back pad (3) as an assembly.
7. Slide the front seat cover and pad (1,3) inwards and pull down to engage the hook retainers.
8. Connect the electrical connectors.
9. Install the push in retainers along the top of the cover (1) near the seat back opening.
10. Install the J-channel retainer along the bottom rear of the cover (1).
11. Install the hook and loop retainers on the rear of the front seat cushion cover.
12. Starting at the top, install the J-channel retainer along both sides of the cover (1).
13. Remove the two layers of masking tape around the seat side surface.

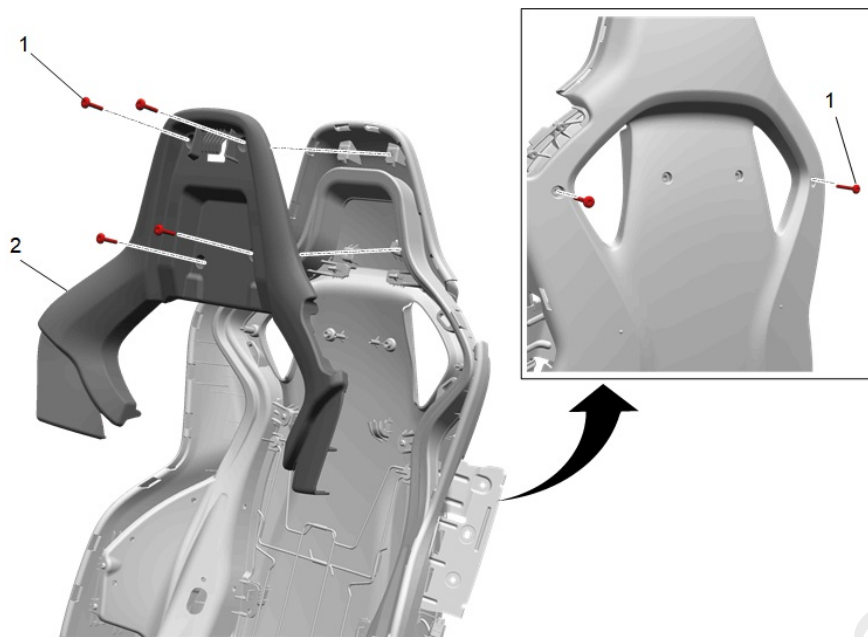


14. [Click here for full size](#)

15. **Caution:**


Refer to Fastener Caution.

16. Front Seat Back Pad Support Screw (1) >> Install and tighten [6x] - Front Seat Back Cover and Pad Replacement

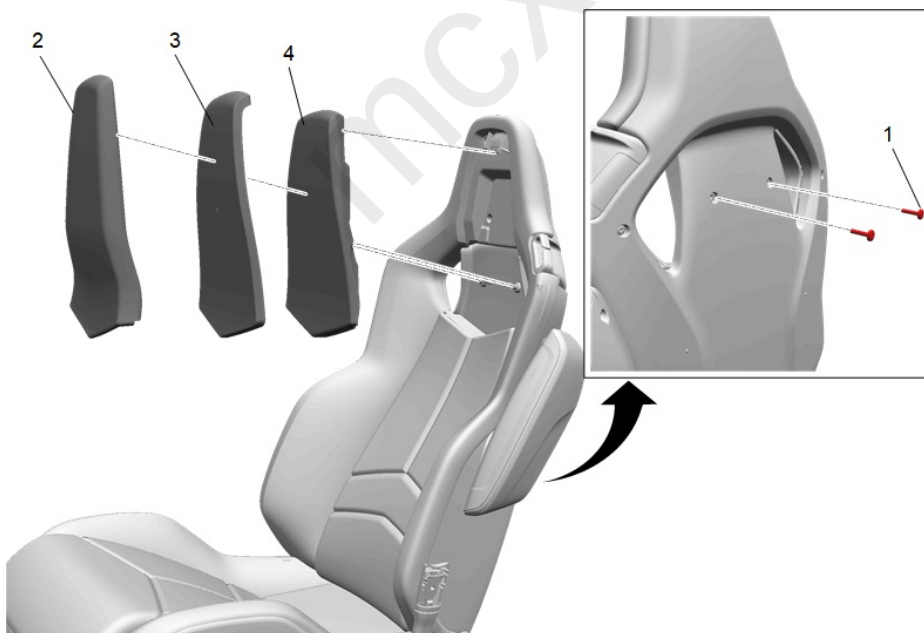


17. [Click here for full size](#)

18. Front Seat Head Restraint Cover and Pad (2,3,4) >> Install - Front Seat Head Restraint Cover and Pad Replacement

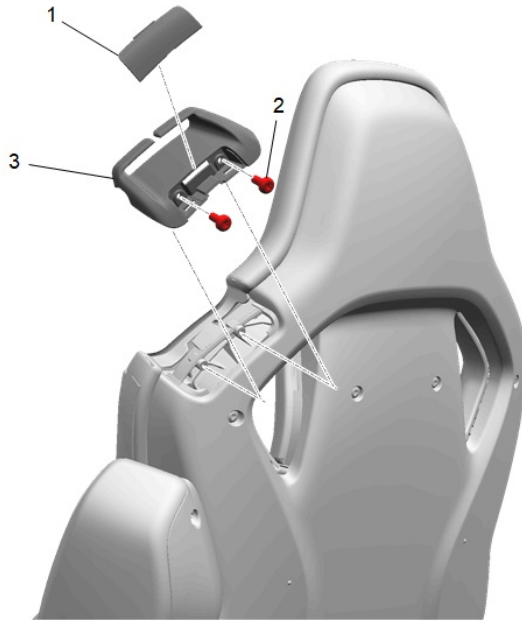

19.
[Click here for full size](#)

20. Front Seat Belt Guide (3) >> Install - Front Seat Belt Guide Replacement

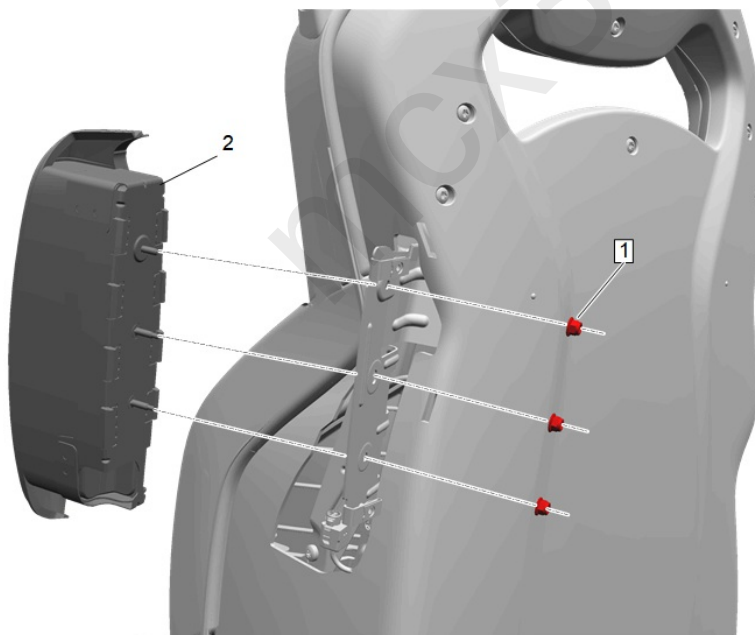

21.
[Click here for full size](#)

22. Front Seat Outboard Seat Back Airbag (2) >> Install - Front Seat Outboard Seat Back Airbag Replacement



23. [Click here for full size](#)
24. Front Seat (2) >> Install - Front Seat Removal and Installation
25. Enable the SIR System, SIR Disabling and Enabling