

2022 CHEVROLET CORVETTE SERVICE MANUAL


- **SEARCH**

1. **Steering**
2. **Steering Wheel and Column**
3. **Repair Instructions**
- 4.


Steering Wheel Replacement

Removal Procedure

1. Steering Wheel Airbag >> Remove - Steering Wheel Airbag Replacement

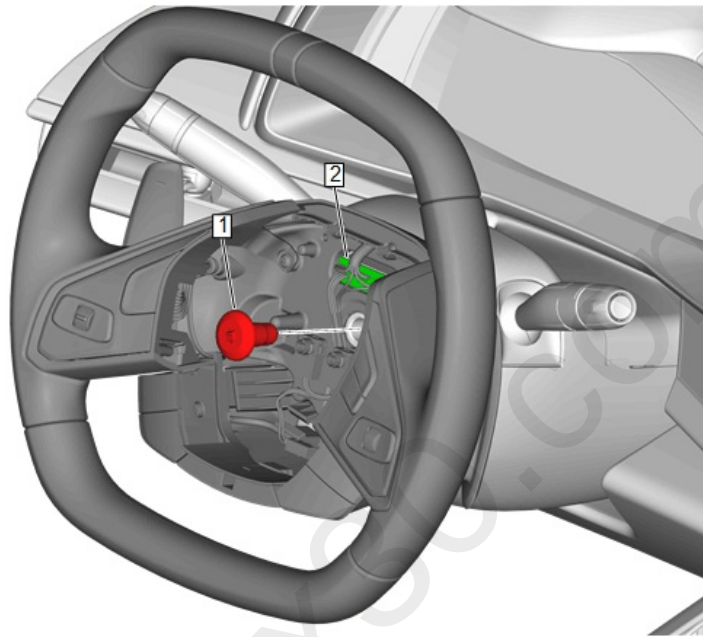

2. [Click here for full size](#)
3. Remove the steering wheel bolt (1).
4. Disconnect the electrical connector (2).

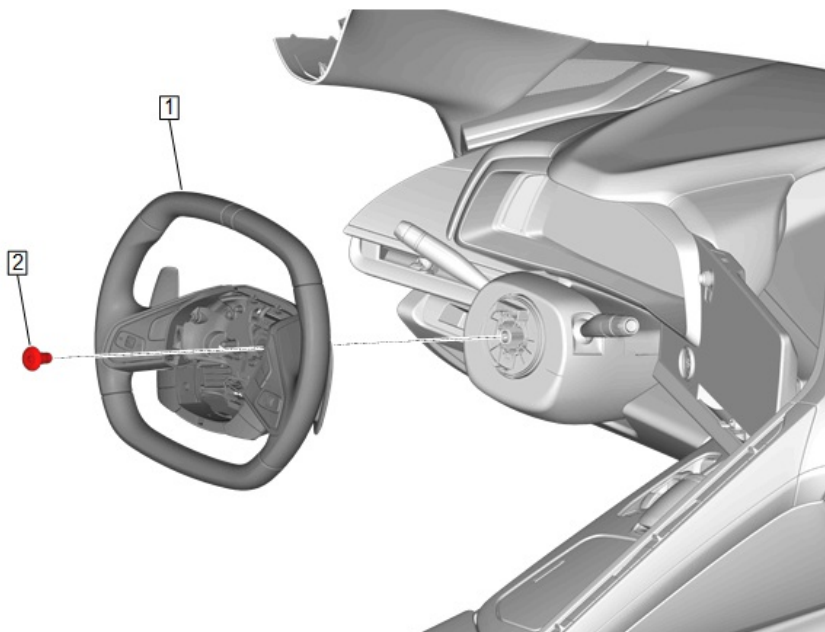

- 5.

[Click here for full size](#)


6. Perform the following steps to remove the steering wheel (1):

7.

1. Install the steering wheel bolt (2) until 2 to 3 threads are engaged.
2. Wiggle the steering wheel (1) until the steering wheel disengages completely.
3. Remove the steering wheel bolt (2).
4. Remove the steering wheel (1).

8. Transfer components as necessary.


Installation Procedure

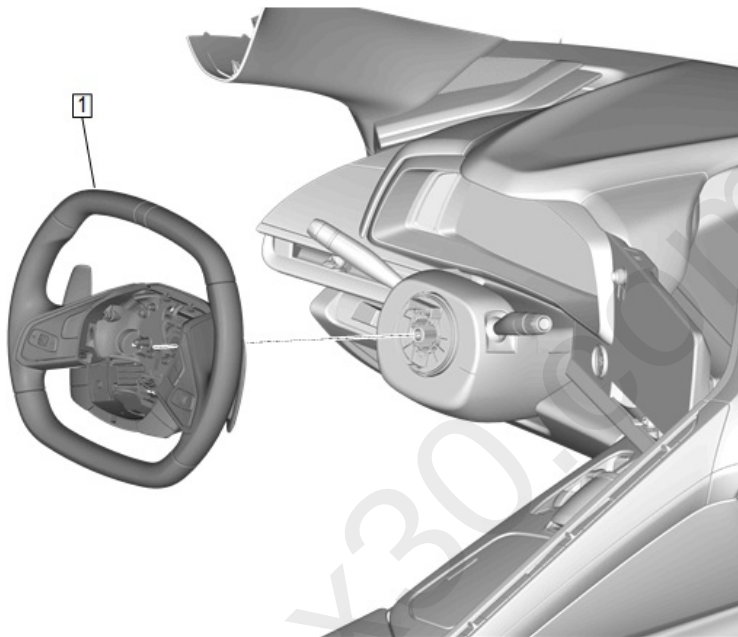

1.

[Click here for full size](#)

2. Install the steering wheel (1).

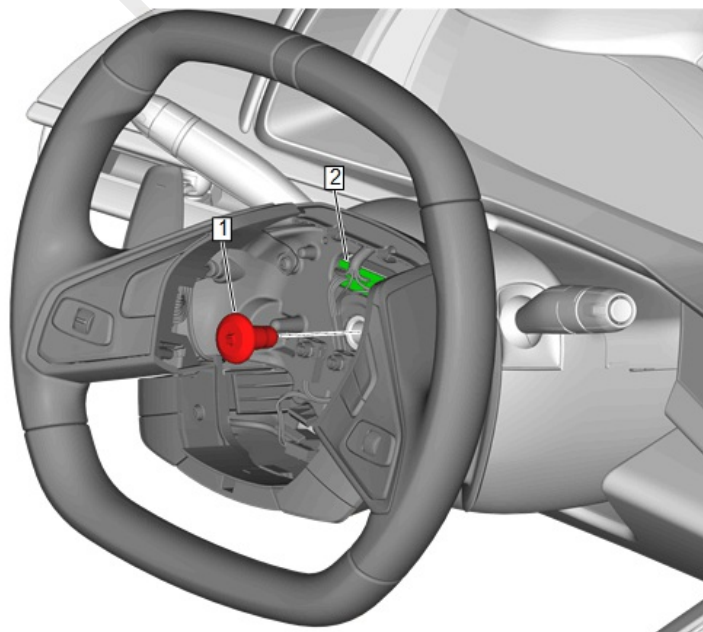

3.

[Click here for full size](#)

4. Connect the electrical connector (2).

5. Caution:

Refer to Fastener Caution.

6. Install the steering wheel bolt (1) by performing the following steps:

7.

1. Clean the threads of the steering wheel bolt (1) with denatured alcohol or equivalent and allow to dry.
2. Apply thread locking adhesive to the steering wheel bolt (1). Adhesives, Fluids, Lubricants, and Sealers
3. Ensure there are no gaps in the thread locking adhesive once applied to the bolt.

8. Install the steering wheel bolt (1) and tighten to 45 N-m (33 lb ft).

9. Steering Wheel Airbag >> Install - Steering Wheel Airbag Replacement

mcx30.com