


2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**


1. **Steering**
2. **Steering Wheel and Column**
3. **Repair Instructions**
- 4.

Steering Wheel Shroud Replacement

Removal Procedure

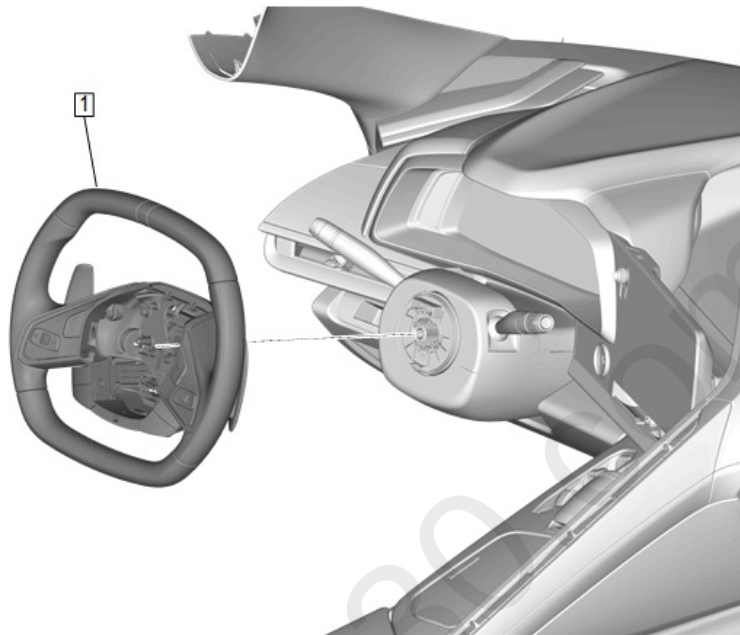


1. [Click here for full size](#)
2. Steering Wheel (1) >> Remove - Steering Wheel Replacement
3. [Click here for full size](#)
4. Automatic Transmission Manual Shift Auxiliary Position Switch (2) >> Remove [2x] - Automatic Transmission Manual Shift Auxiliary Position Switch Replacement
5. [Click here for full size](#)
6. Steering Wheel Shroud Bolt (1) >> Remove
7. [Click here for full size](#)
8. Steering Wheel Shroud Bolt (1) >> Remove [2x]

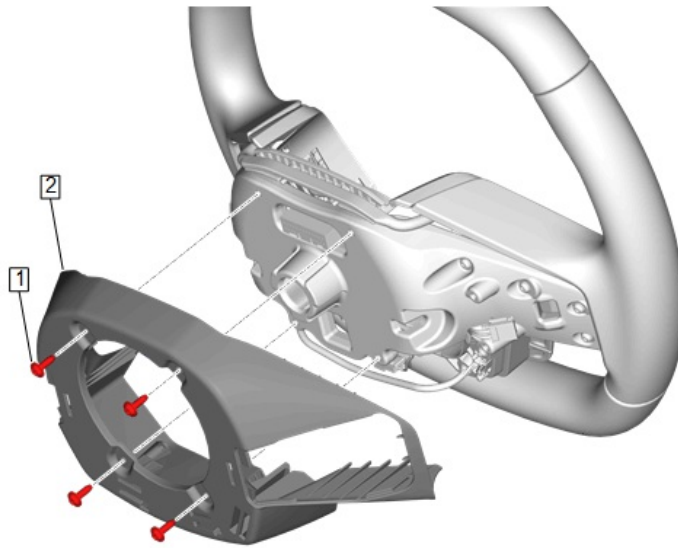

9. [Click here for full size](#)
10. Steering Wheel Shroud Bolt (1) >> Remove [4x]
11. Cut the 2 zip ties holding the electrical connectors to the steering wheel shroud (2).
12. Disconnect the electrical connectors.
13. Steering Wheel Shroud (2) >> Remove
14. Transfer components as necessary.


Installation Procedure

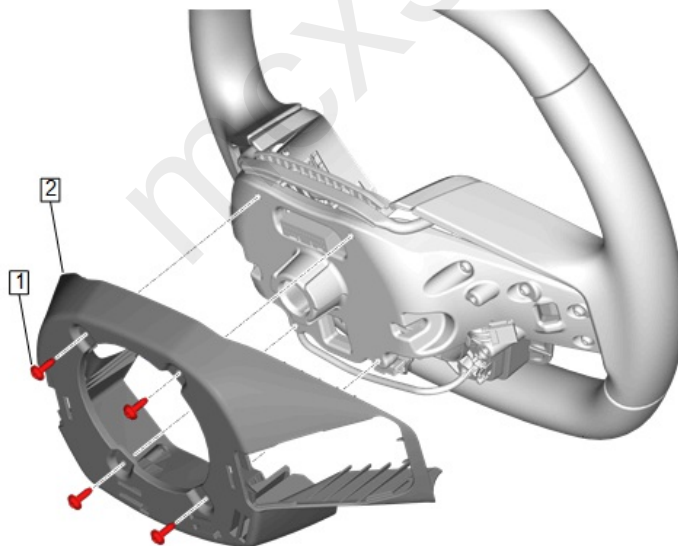

1. [Click here for full size](#)
2. Steering Wheel Shroud (2) >> Install
3. Connect the electrical connectors.
4. Secure the electrical wiring to the steering wheel shroud (2) with 2 zip ties.
5. Caution:

Refer to Fastener Caution.

6. Steering Wheel Shroud Bolt (1) >> Install and tighten [4x]4 N-m (35 lb in)
7. [Click here for full size](#)
8. Steering Wheel Shroud Bolt (1) >> Install and tighten 1 N-m (9 lb in)[2x]
9. [Click here for full size](#)
10. Steering Wheel Shroud Bolt (1) >> Install and tighten 3 N-m (27 lb in)
11. [Click here for full size](#)
12. Automatic Transmission Manual Shift Auxiliary Position Switch (2) >> Install [2x] - Automatic Transmission Manual Shift Auxiliary Position Switch Replacement

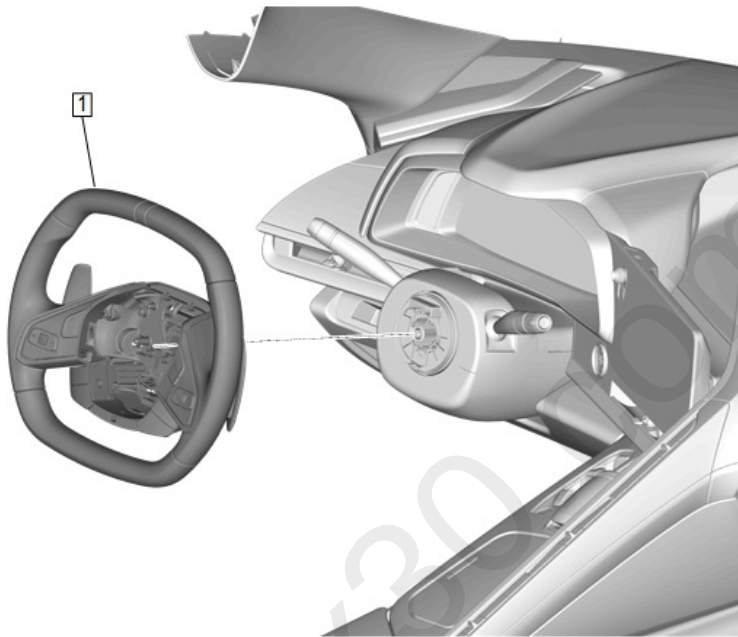

13. [Click here for full size](#)
14. Steering Wheel (1) >> Install - Steering Wheel Replacement