

2022 CHEVROLET CORVETTE SERVICE MANUAL


- **SEARCH**

1. Suspension
2. **Rear Suspension**
3. Repair Instructions
- 4.


Rear Stabilizer Shaft Link Replacement

Removal Procedure


1. Raise and support the vehicle. Lifting and Jacking the Vehicle
2. Remove the rear tire and wheel assembly. Tire and Wheel Removal and Installation

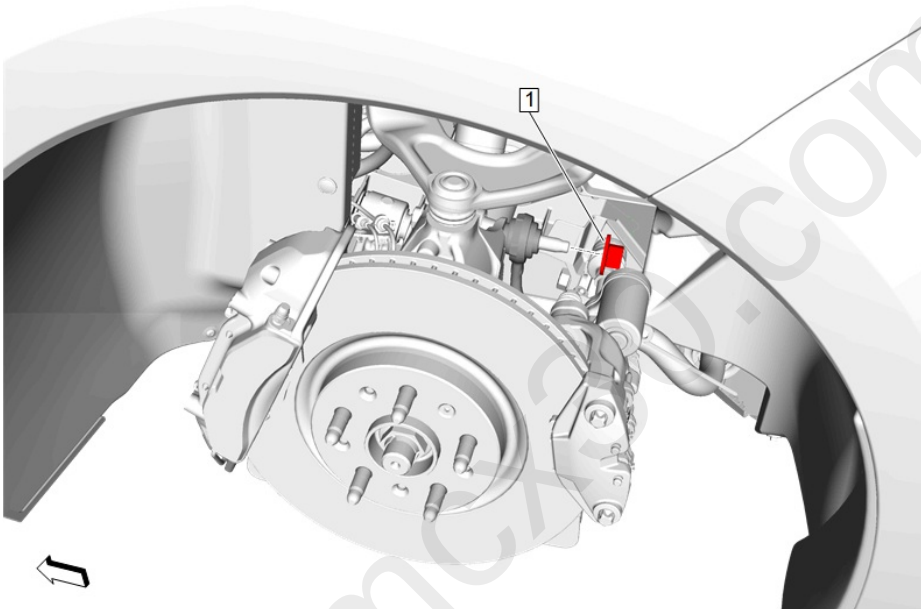

3.
Click here for full size
4. Rear Shock Absorber Lower Bracket Nut (1) @ Rear Stabilizer Shaft Link >> Remove

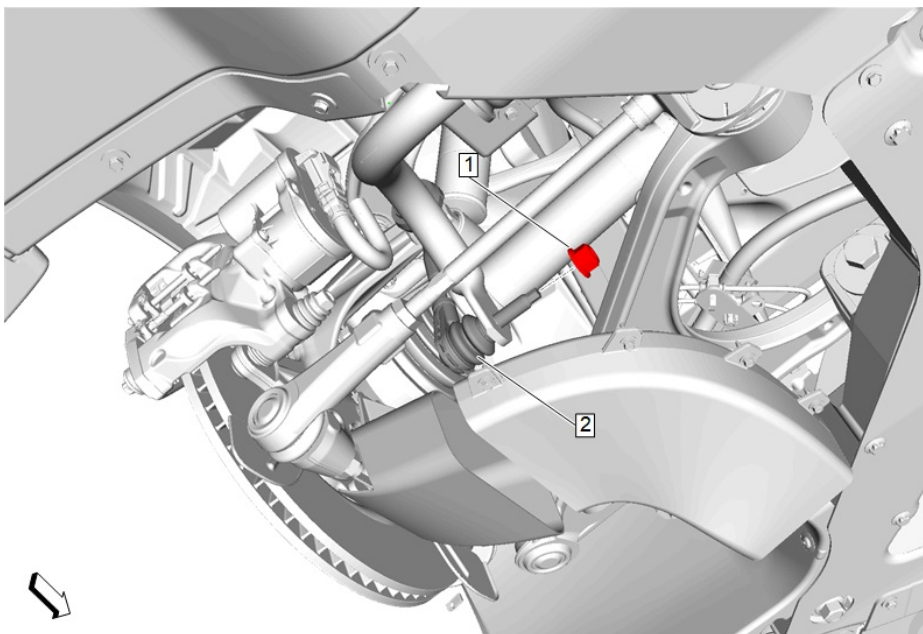


5. [Click here for full size](#)
6. Rear Stabilizer Shaft Link Nut (1) @ Rear Stabilizer Shaft >> Remove

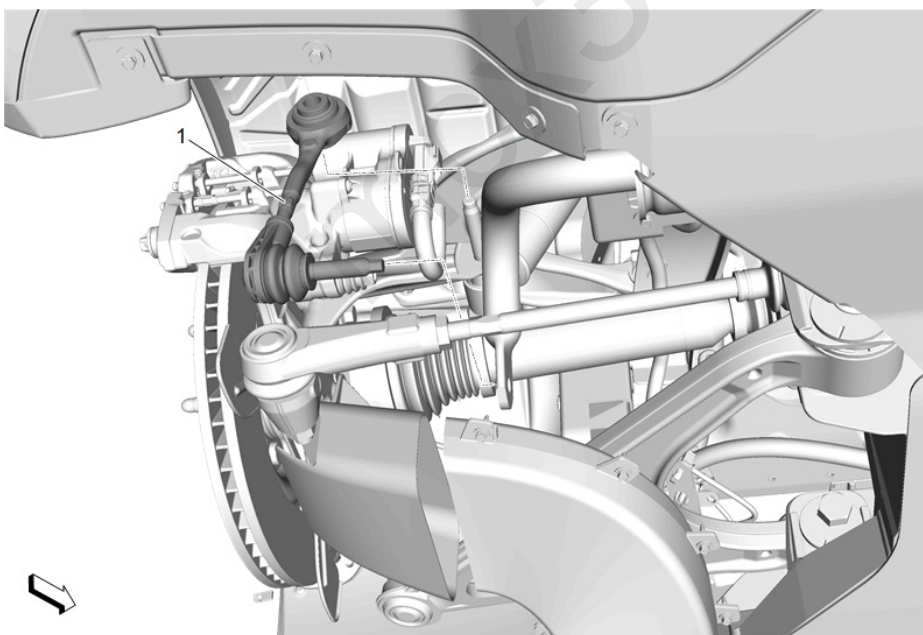


7. [Click here for full size](#)
8. Rear Stabilizer Shaft Link (1) >> Remove

Installation Procedure

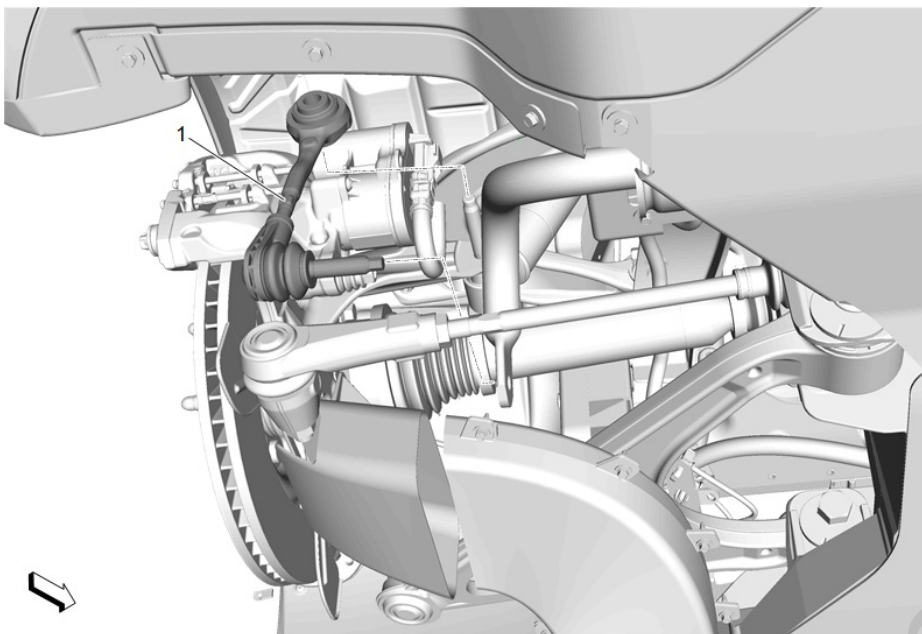


1. [Click here for full size](#)
2. Rear Stabilizer Shaft Link (1) >> Install

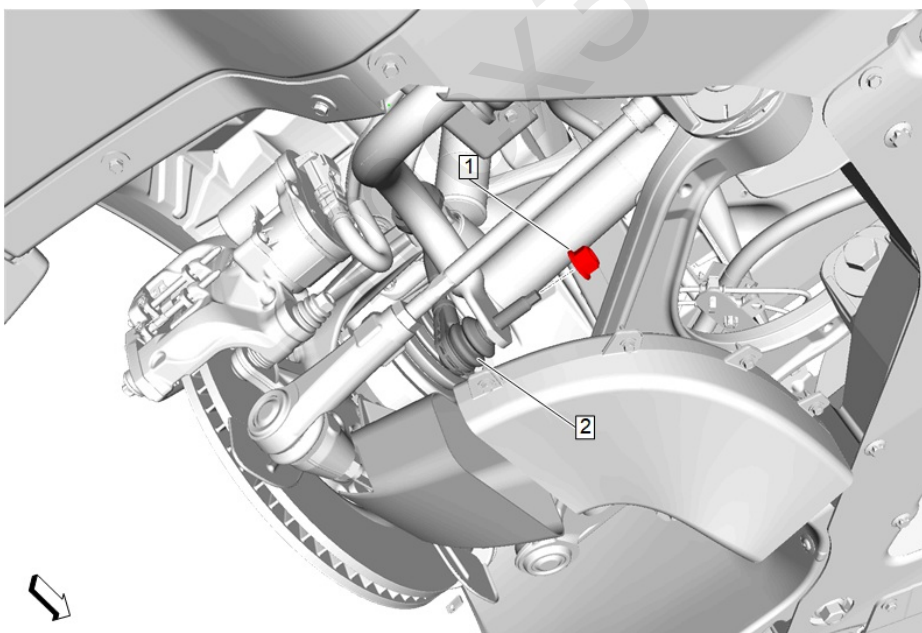

3. [Click here for full size](#)
4. Caution:
Refer to Fastener Caution.
5. Rear Stabilizer Shaft Link Nut (1) @ Rear Stabilizer Shaft >> Install and tighten

6.

1. First Pass: 60 N-m (44 lb ft)
2. Final Pass: 20 - 35 degrees

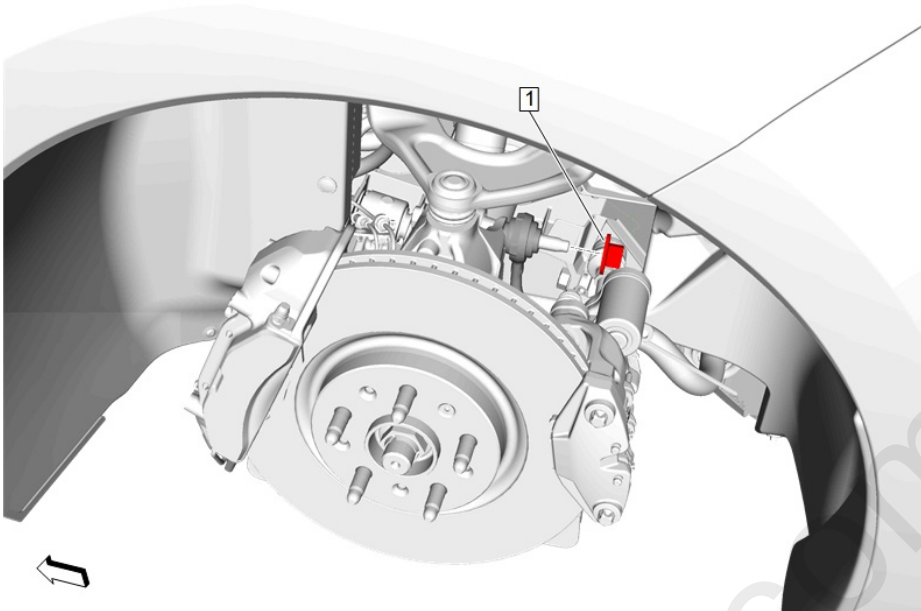

7. [Click here for full size](#)
8. Note:
- Refer to the procedure link for torque specification.
9. Rear Shock Absorber Lower Bracket Nut (1) @ Rear Stabilizer Shaft Link >> Install - Rear Shock Absorber and Spring Removal and Installation
 10. Install the rear tire and wheel assembly. Tire and Wheel Removal and Installation
 11. Remove the support and lower the vehicle.