


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH


1. Body Systems
2. Lighting
3. Repair Instructions
- 4.

Outside Rearview Mirror Turn Signal Lamp Replacement


Removal Procedure

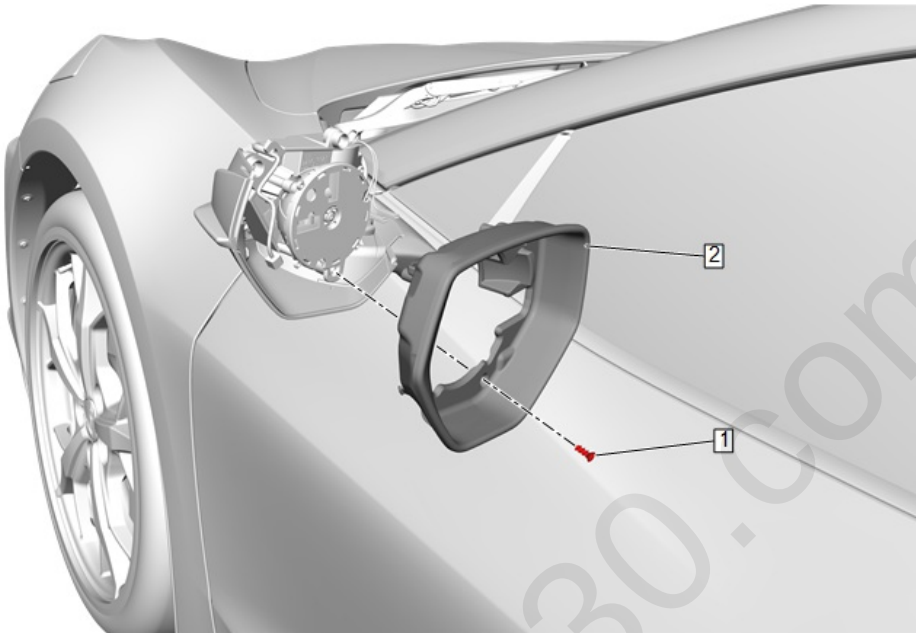


1. [Click here for full size](#)
2. Outside Rearview Mirror Housing Bezel (2) >> Remove - Outside Rearview Mirror Housing Bezel Replacement

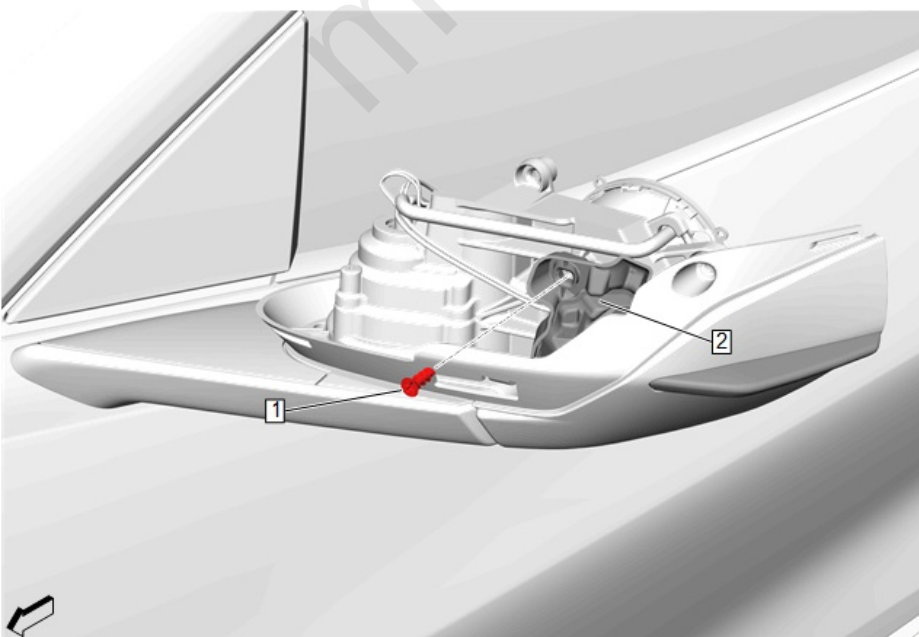

3. [Click here for full size](#)
4. Outside Rearview Mirror Turn Signal Lamp Screw (1) >> Remove

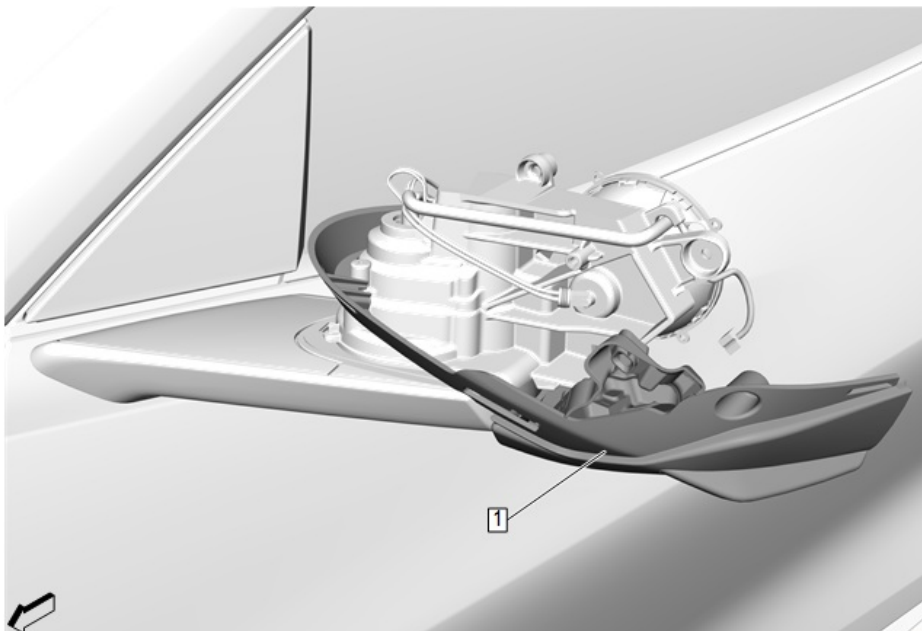


5. [Click here for full size](#)
6. Rotate the outside rearview mirror lower case with the outside rearview mirror turn signal lamp (1) downward.
7. Disconnect the electrical connector.

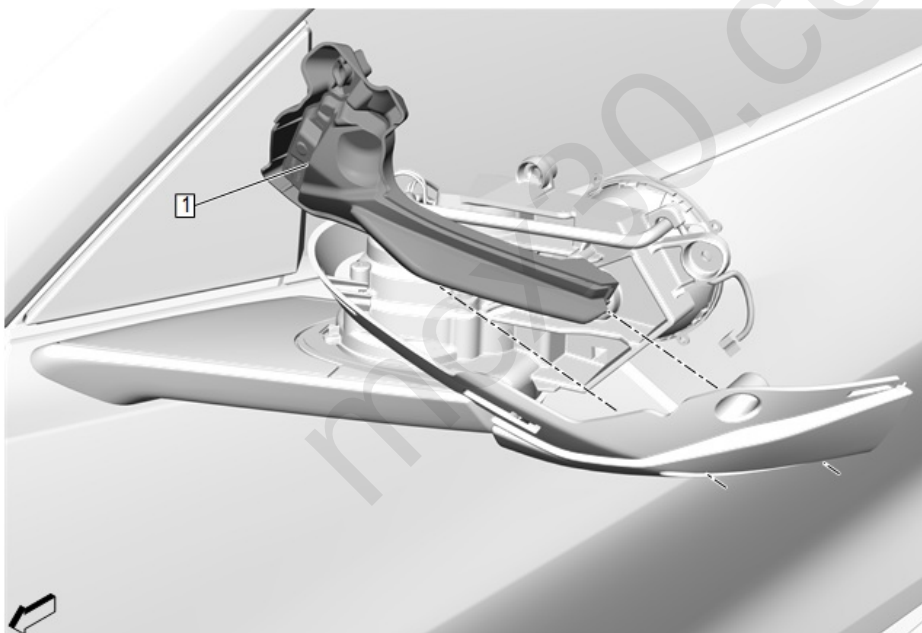


8. [Click here for full size](#)
9. Outside Rearview Mirror Turn Signal Lamp (1) >> Remove


Installation Procedure

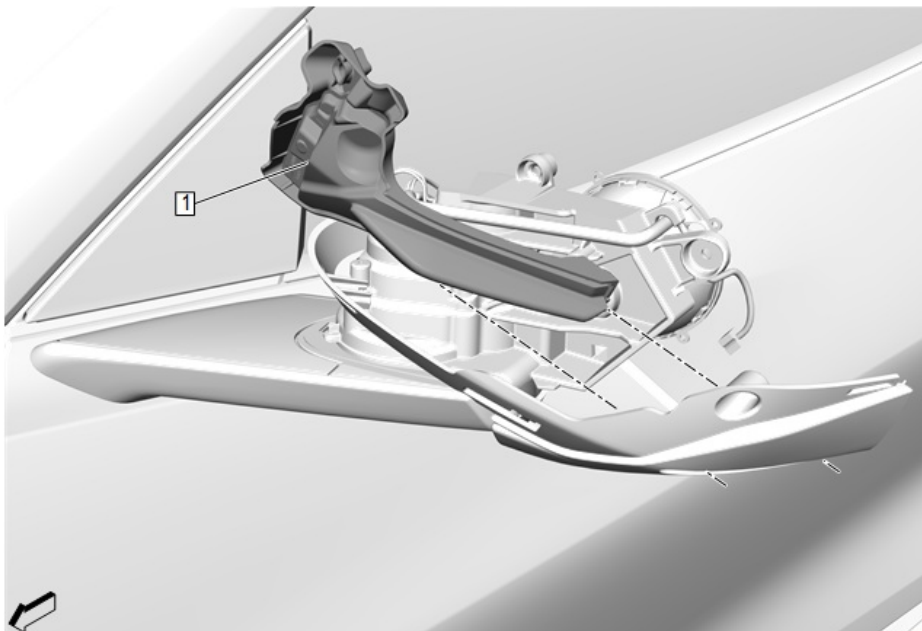

1. [Click here for full size](#)
2. Outside Rearview Mirror Turn Signal Lamp (1) >> Install
3. Connect the electrical connector.

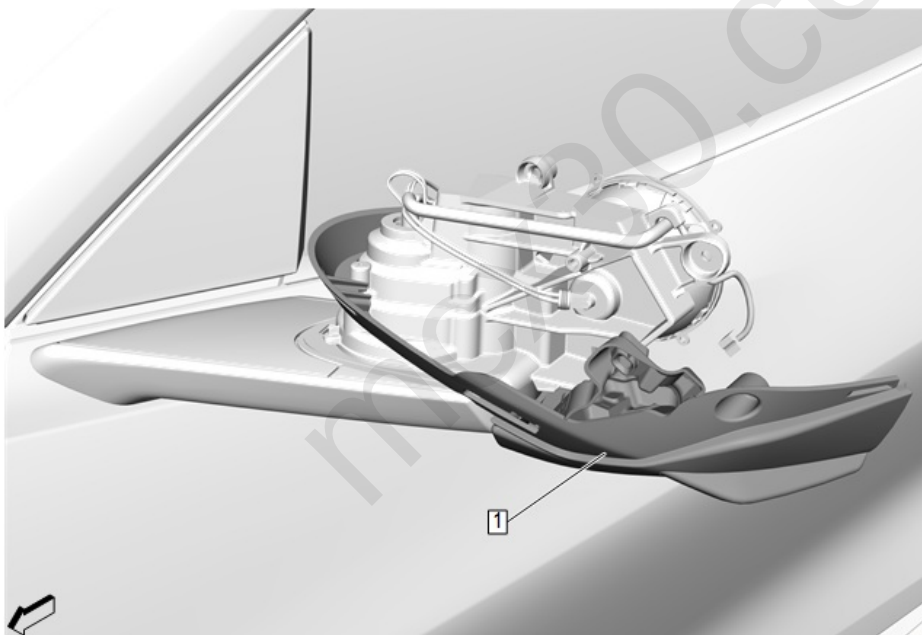

4. [Click here for full size](#)
5. Rotate the outside rearview mirror lower case with the outside rearview mirror turn signal lamp (1) upward and into position.

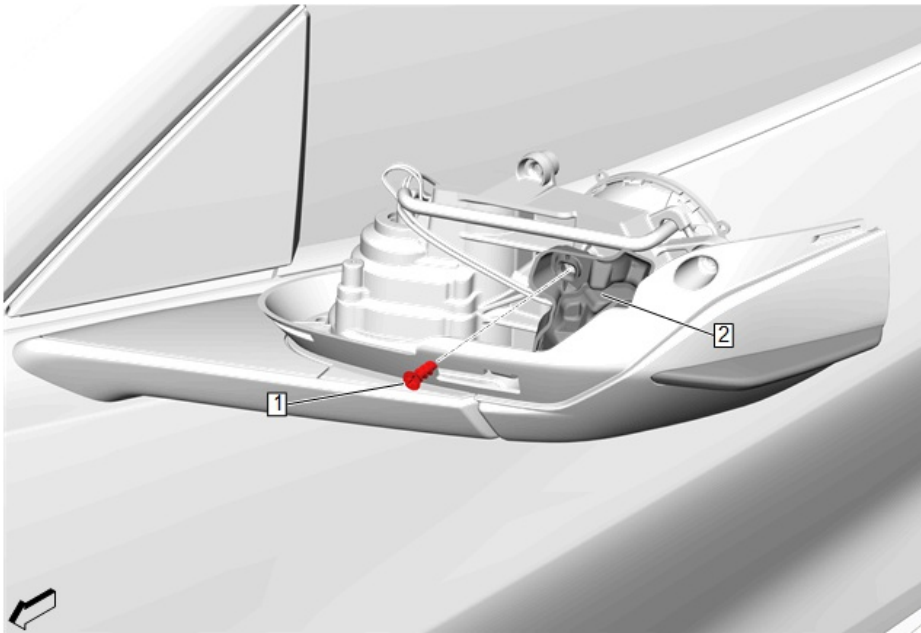


6. [Click here for full size](#)

7. Caution:

Refer to Fastener Caution.

8. Outside Rearview Mirror Turn Signal Lamp Screw (1) >> Install and tighten 1.3N-m (12 lb in)

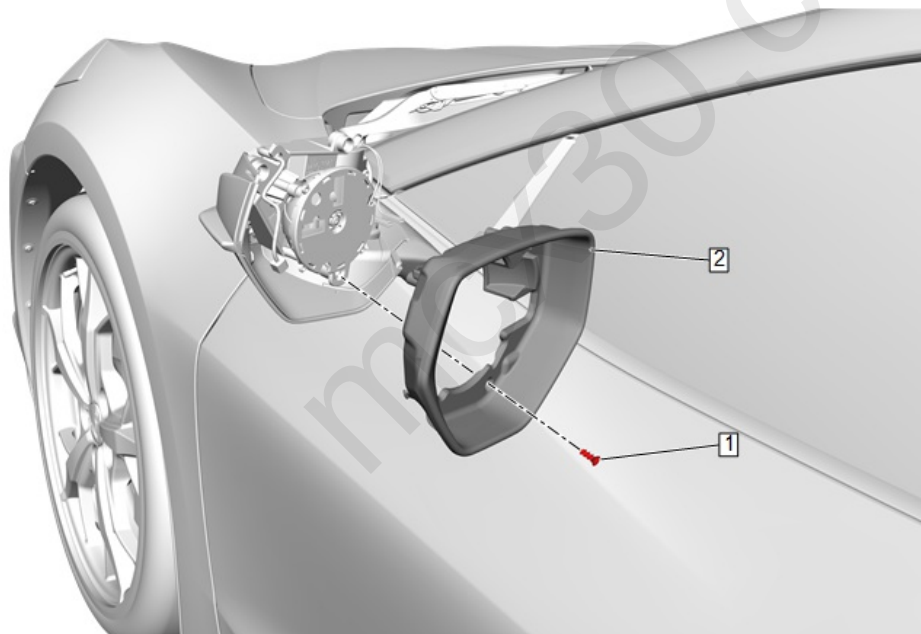

9. [Click here for full size](#)

10. Outside Rearview Mirror Housing Bezel (2) >> Install - Outside Rearview Mirror Housing Bezel Replacement