

2022 CHEVROLET CORVETTE SERVICE MANUAL


- **SEARCH**

1. **Body Systems**
2. **Vehicle Access**
3. **Repair Instructions**
- 4.

Front Side Door Latch Replacement

Removal Procedure

1. Quarter Window Trim Finish Panel >> Remove - Quarter Window Trim Finish Panel Replacement

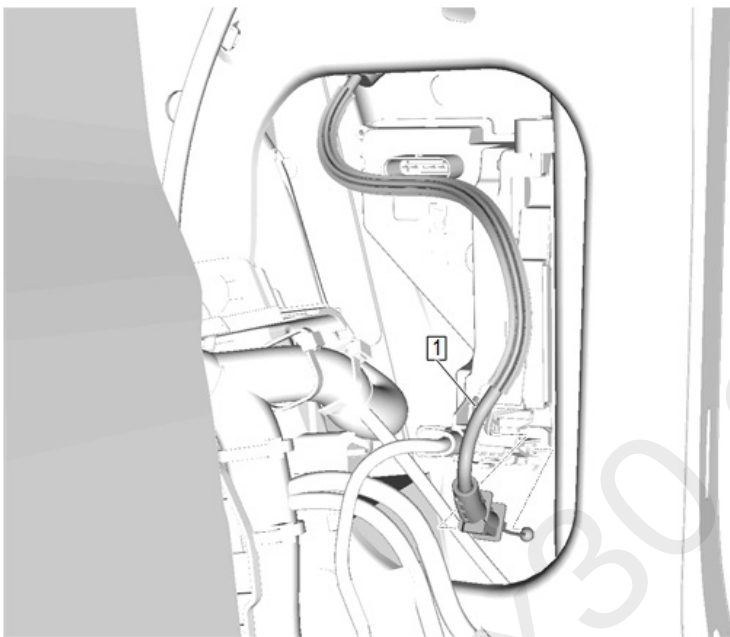

2. [Click here for full size](#)
3. Disconnect the electrical connector.
4. If equipped, remove the front side door lock cylinder cable (1) from the front side door latch. Front Side Door Lock Cylinder Replacement
5. [Click here for full size](#)
6. Note:

Support the front side door lock cover (2) and front side door latch (4) before removing the front side door latch bolts (1)
7. Front Side Door Latch Bolt (1) >> Remove [3x]
8. Front Side Door Lock Cover (2) >> Remove
9. Release the front side door inside handle cable retainer (3).
10. Front Side Door Latch (4) >> Remove
11. [Click here for full size](#)
12. Remove the front side door inside handle cable (1) from the front side door latch (2).
13. Transfer components as necessary.

Installation Procedure

1. [Click here for full size](#)

2. Install the front side door inside handle cable (1) to the front side door latch (2).

3. [Click here for full size](#)

4. Front Side Door Latch (4) >> Install


5. Install the front side door inside handle cable retainer (3).

6. Front Side Door Lock Cover (2) >> Install

7. Caution:

Refer to Fastener Caution

8. Front Side Door Latch Bolt (1) >> Install and tighten [3x] 9 N-m (80 lb in)

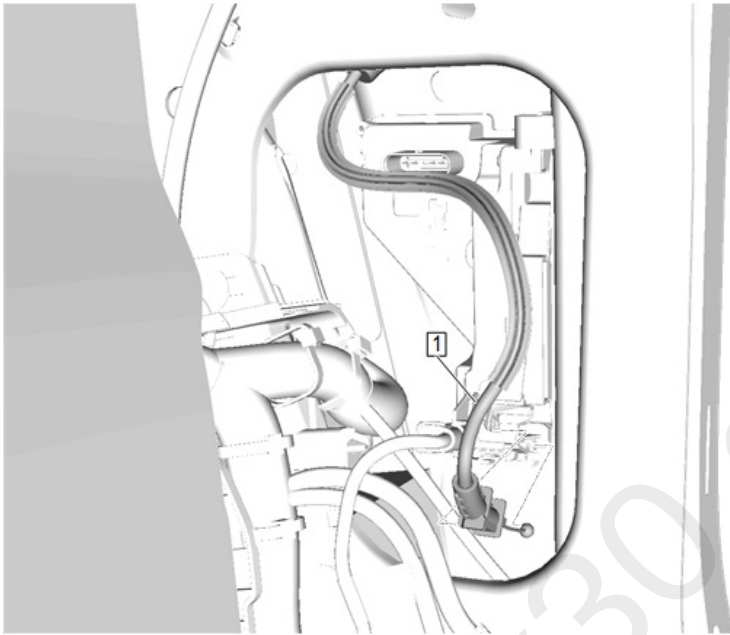

9.

[Click here for full size](#)

10. If equipped, install the front side door lock cylinder cable (1) to the front side door latch. Front Side Door Lock Cylinder Replacement

11. Connect the electrical connector.

12. Inspect the front side door for proper operation before installing the quarter window trim finish panel.

13. Quarter Window Trim Finish Panel >> Install - Quarter Window Trim Finish Panel Replacement