

2022 CHEVROLET CORVETTE SERVICE MANUAL


- [SEARCH](#)

1. [Body Systems](#)
2. [Vehicle Access](#)
3. [Repair Instructions](#)
- 4.


Front Side Door Lock Cylinder Replacement

Removal Procedure

1. Quarter Window Trim Finish Panel >> Remove - Quarter Window Trim Finish Panel Replacement
2. Quarter Outer Panel - Left Side >> Remove - Quarter Outer Panel Replacement - Left Side

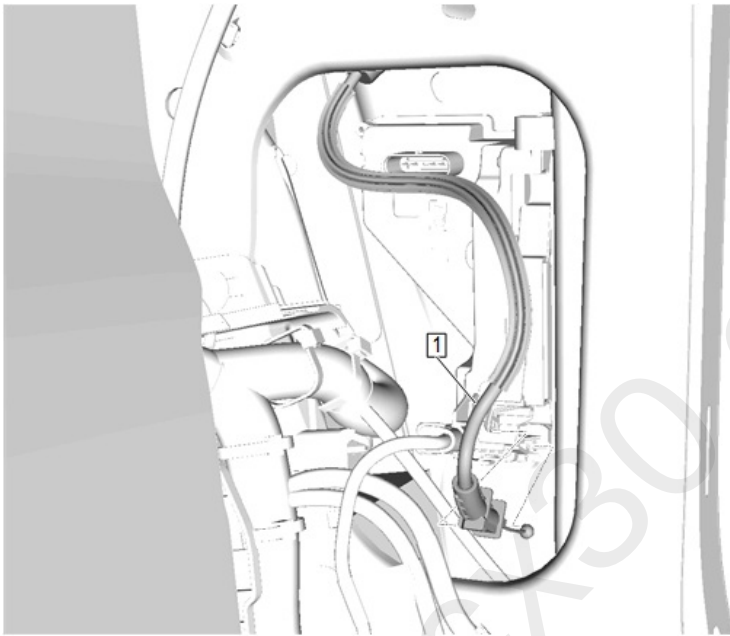


3.
[Click here for full size](#)
4. Using a suitable tool, release the retaining tab on the front side door lock cylinder cable (1).
5. Guide the front side door lock cylinder cable ball end through the grooves in the front side door latch release lever to remove the front side door lock cylinder cable (1) from the front side door latch.

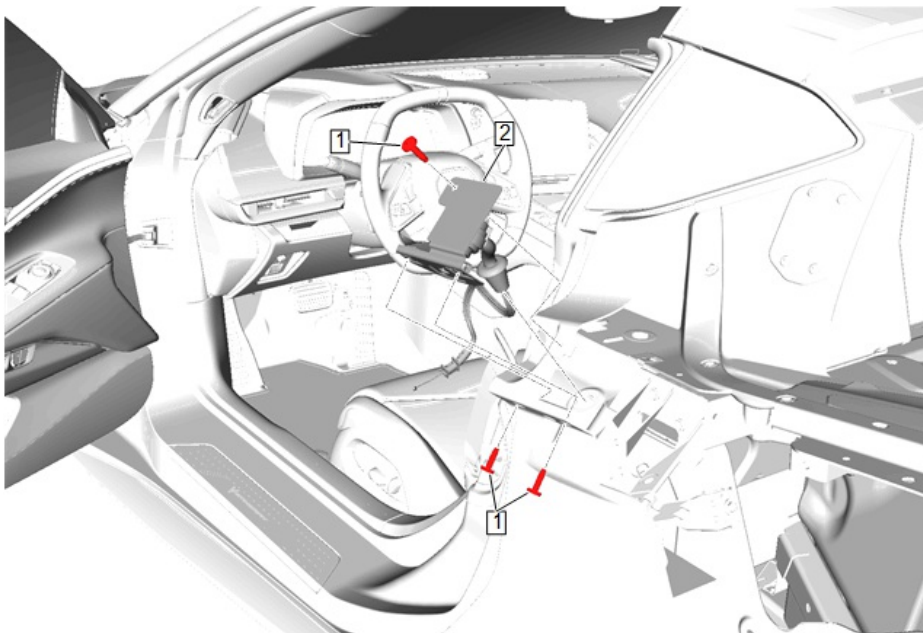


6. [Click here for full size](#)
7. Remove the front side door lock cylinder cable grommet from the body side inner quarter panel.
8. Front Side Door Lock Cylinder Bolt (1) >> Remove [3x]
9. Front Side Door Lock Cylinder (2) >> Remove
10. Transfer components as necessary.

Installation Procedure

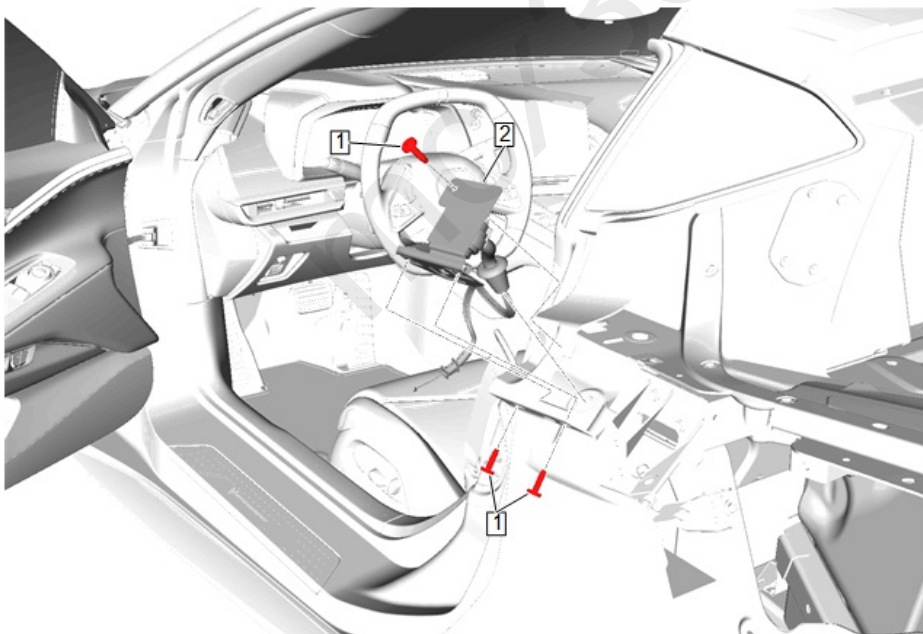

1. [Click here for full size](#)
2. Front Side Door Lock Cylinder (2) >> Install
3. Caution:
Refer to Fastener Caution
4. Front Side Door Lock Cylinder Bolt (1) >> Install and tighten [3x] 9 N-m (80 lb in)
5. Press firmly to install the front side door lock cylinder cable grommet in the body side inner quarter panel.

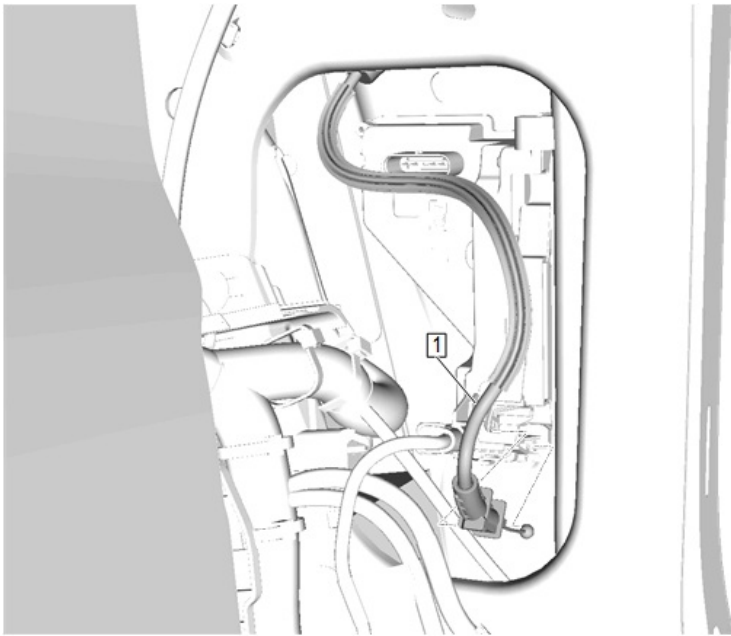

6. [Click here for full size](#)
7. Guide the front side door lock cylinder cable ball end through the grooves in the front side door latch release lever.
8. Install the front side door lock cylinder cable (1) ensuring the retaining tab is fully seated.
9. Inspect the front side door lock cylinder for proper operation
10. Quarter Outer Panel - Left Side >> Install - Quarter Outer Panel Replacement - Left Side
11. Quarter Window Trim Finish Panel >> Install - Quarter Window Trim Finish Panel Replacement