

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Body Systems**

2. **Wipers and Washers**

3. **Repair Instructions**

- 4.


Windshield Wiper Motor Replacement

Special Tools

- *BO 39232*, Wiper Linkage Separator
- *BO 39529*, Wiper Linkage Installer

Equivalent regional tools: Special Tools


Removal Procedure

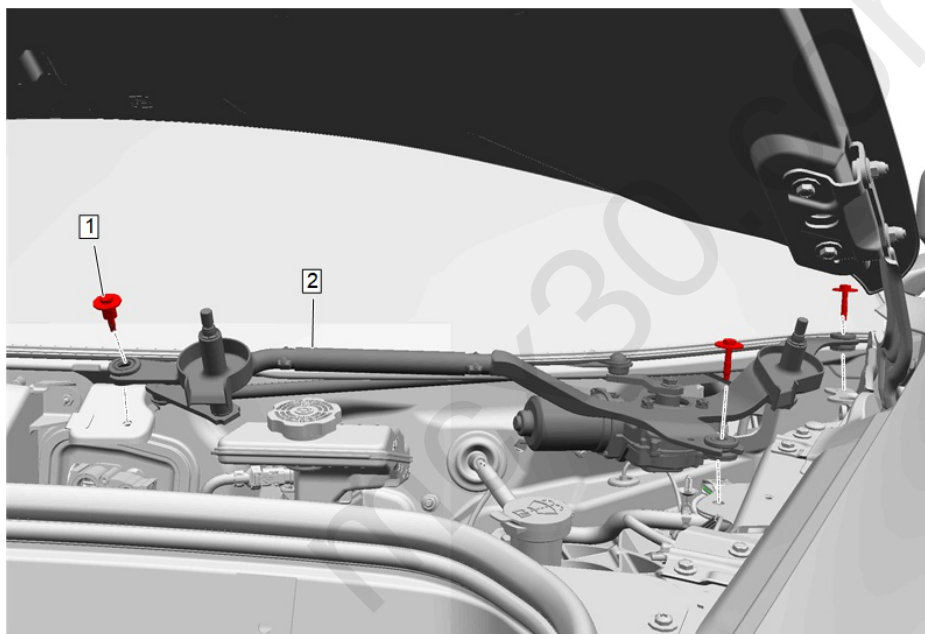

1. [Click here for full size](#)
2. Windshield Wiper Transmission (2) >> Remove - Windshield Wiper Transmission Replacement




3. [Click here for full size](#)
4. Using the *BO 39232* Wiper Linkage Separator (1), remove the windshield wiper motor crank arm from the transmission link.

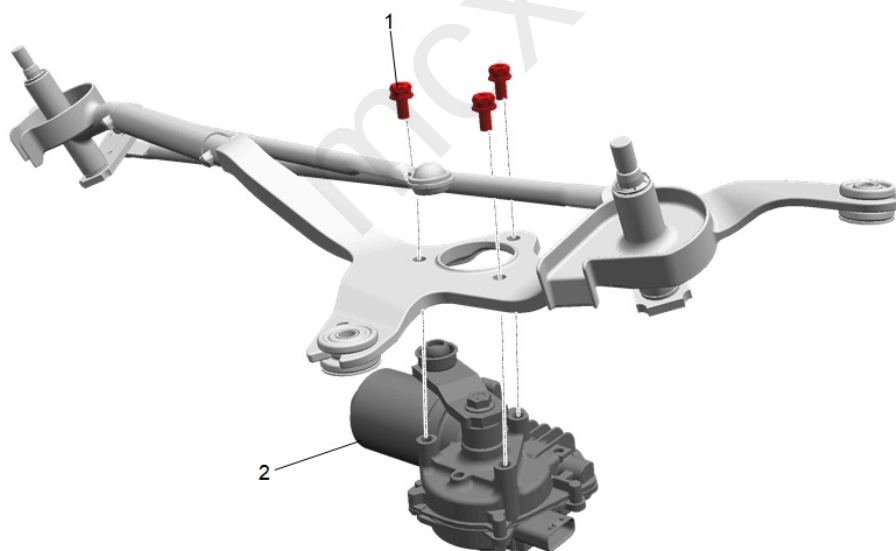


5. [Click here for full size](#)
6. Windshield Wiper Motor Bolt (1) >> Remove [3x]
7. Remove the windshield wiper motor (2) from the windshield wiper transmission.

Installle Procedure

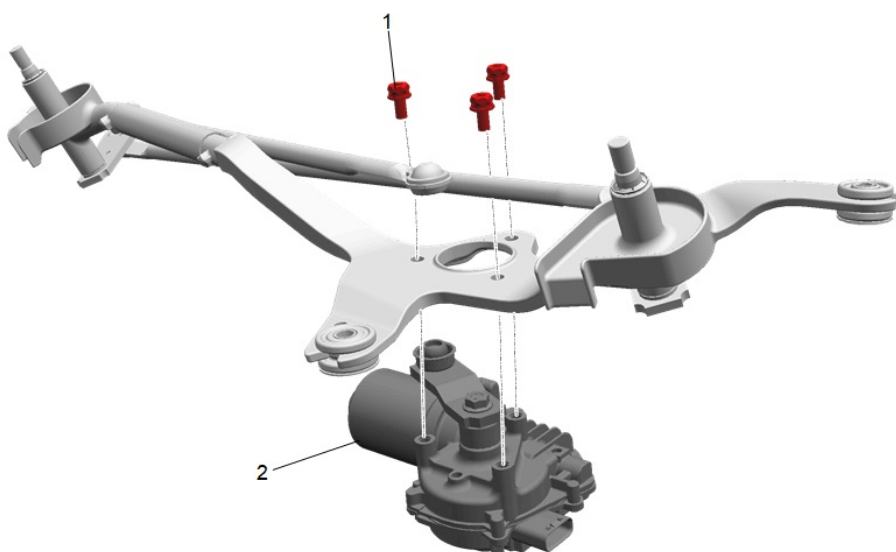


1. [Click here for full size](#)
2. Install the new windshield wiper motor (2) to the windshield wiper transmission.
3. Caution:
Refer to Fastener Caution.
4. Windshield Wiper Motor Bolt (1) >> Install and tighten [3x]5.4N-m (48 lb in)

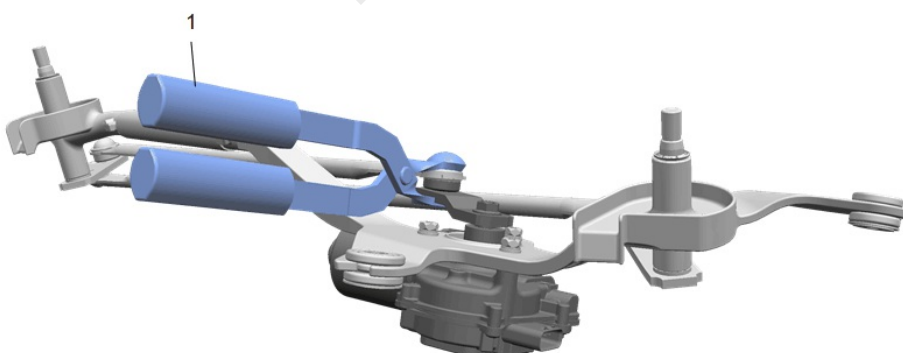

5. [Click here for full size](#)

6. Align the transmission links to the windshield wiper motor crank arm.
7. Using the *BO 39529* Wiper Linkage Installer (1), secure the windshield wiper motor crank arm ball to the transmission link ball socket.

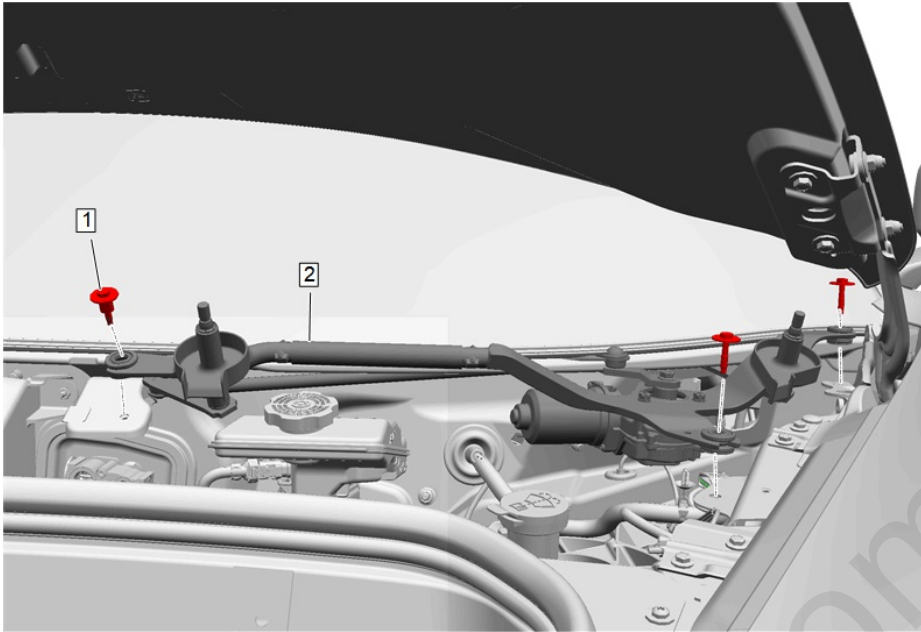

8. [Click here for full size](#)
9. Note:
The windshield module cover must be re-installed
10. Windshield Wiper Transmission (2) >> Install - Windshield Wiper Transmission Replacement