


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

- 1. Body Systems
- 2. Wipers and Washers
- 3. Repair Instructions
- 4.

Windshield Wiper Transmission Replacement

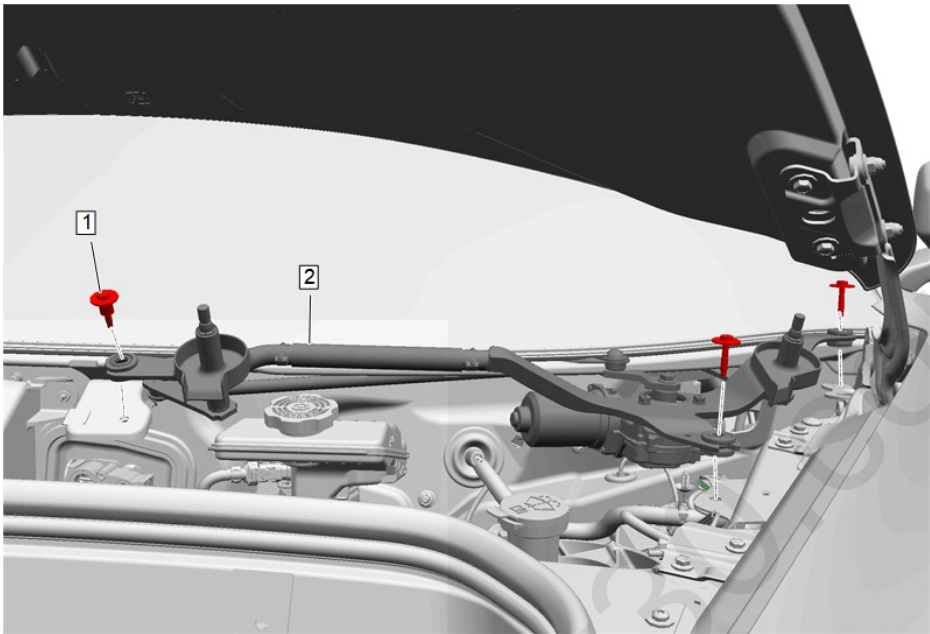

[Click here for full size](#)
Battery Negative Cable Disconnection and Connection

- Windshield Wiper System Module Shield Replacement

- Disconnect the electrical connector.

Fastener Caution.

Note:

One windshield wiper transmission bolt is unique, maintain proper fastener location.

Tighten

9>N-m (80 lb in)

Battery Negative Cable Disconnection and Connection

Callout	Component Name

Callout	Component Name
Preliminary Procedures 1. Note: To prevent erroneous DTCs, disconnect the battery negative cable before disconnecting the windshield wiper motor electrical connector. 2. Disconnect the battery negative cable.	
1	Windshield Wiper Transmission Bolt [3x] Caution: Refer to
2	Windshield Wiper Transmission Procedure 1. Slide the windshield wiper transmission inboard to release the grommet from the plenum. 2. Remove the windshield wiper transmission from the vehicle. 3. Transfer components as necessary. 4. Connect the battery negative cable.