

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Brakes**
2. **Disc Brakes**
3. **Repair Instructions**
- 4.

Rear Brake Shield Replacement - Lower

Warning:


The battery must be disconnected to prevent the brake master cylinder from pressurizing the hydraulic system during its automated self diagnostic tests that can possibly occur when a door is opened or the key transmitter is activated. Failure to follow this precaution may cause personal injury.

Warning:

Brake Dust Warning


Removal Procedure

1. Disconnect the battery negative cable. Battery Negative Cable Disconnection and Connection
2. Raise and support the vehicle. Lifting and Jacking the Vehicle
3. Remove the rear tire and wheel assembly. Tire and Wheel Removal and Installation
4. Rear Brake Rotor >> Remove - Rear Brake Rotor Replacement

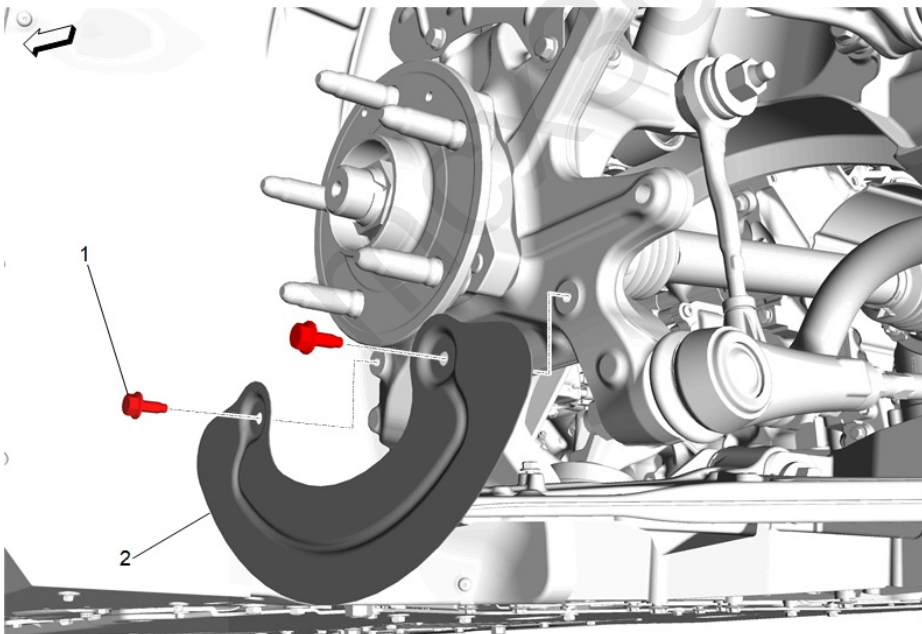

5.
[Click here for full size](#)
6. Rear Brake Shield Bolt (1) >> Remove [2x]
7. Rear Brake Lower Shield (2) >> Remove

Installation Procedure

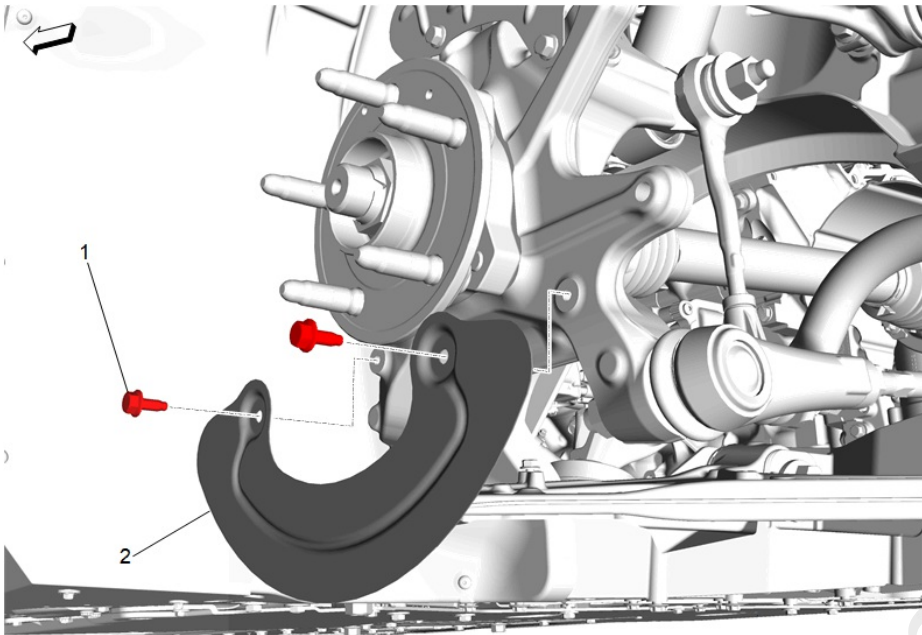

1. [Click here for full size](#)
2. Rear Brake Lower Shield (2) >> Install
3. Caution:
Fastener Caution
4. Rear Brake Shield Bolt (1) >> Install and tighten [2x]9 N-m (80 lb in)
5. Rear Brake Rotor >> Install - Rear Brake Rotor Replacement
6. Install the tire and wheel assembly. Tire and Wheel Removal and Installation
7. Remove the support and lower the vehicle.
8. Connect the battery negative cable. Battery Negative Cable Disconnection and Connection