

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Brakes**
2. **Hydraulic Brakes**
3. **Repair Instructions**
- 4.

Rear Brake Front Pipe Replacement - Left Side

Warning:

The battery must be disconnected to prevent the brake master cylinder from pressurizing the hydraulic system during its automated self diagnostic tests that can possibly occur when a door is opened or the key transmitter is activated. Failure to follow this precaution may cause personal injury.


Warning:

Brake Fluid Irritant Warning


Caution:

Brake Fluid Effects on Paint and Electrical Components Caution


Removal Procedure

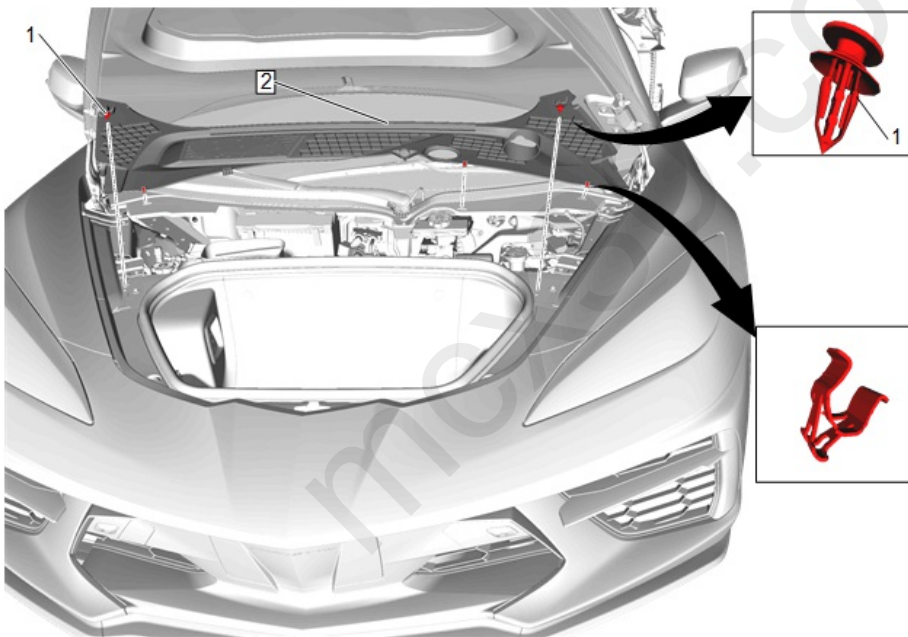

1. [Click here for full size](#)
2. Front Compartment Rear Access Cover (2) >> Remove - Front Compartment Rear Access Cover Replacement

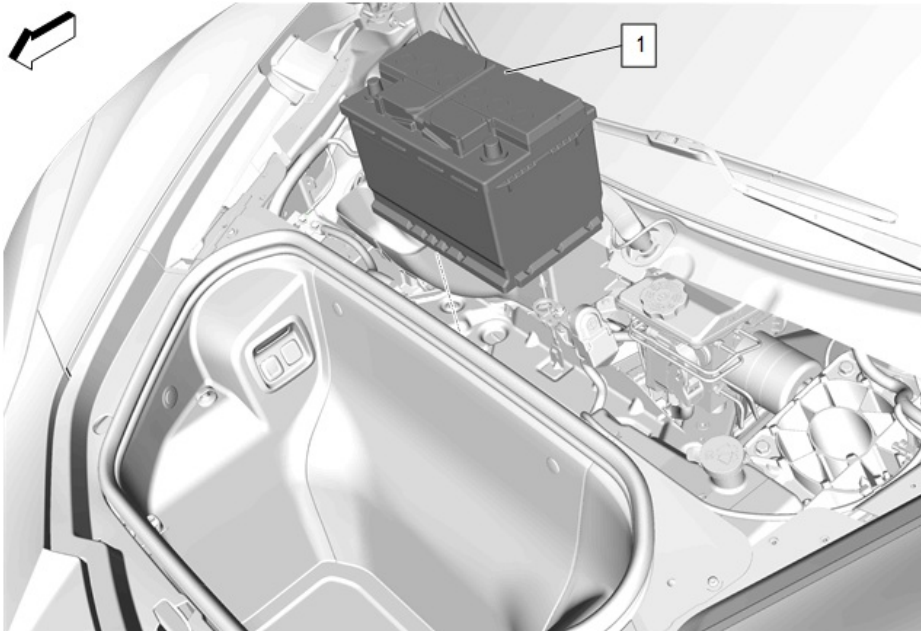


3. [Click here for full size](#)
4. Battery (1) >> Remove - Battery Replacement

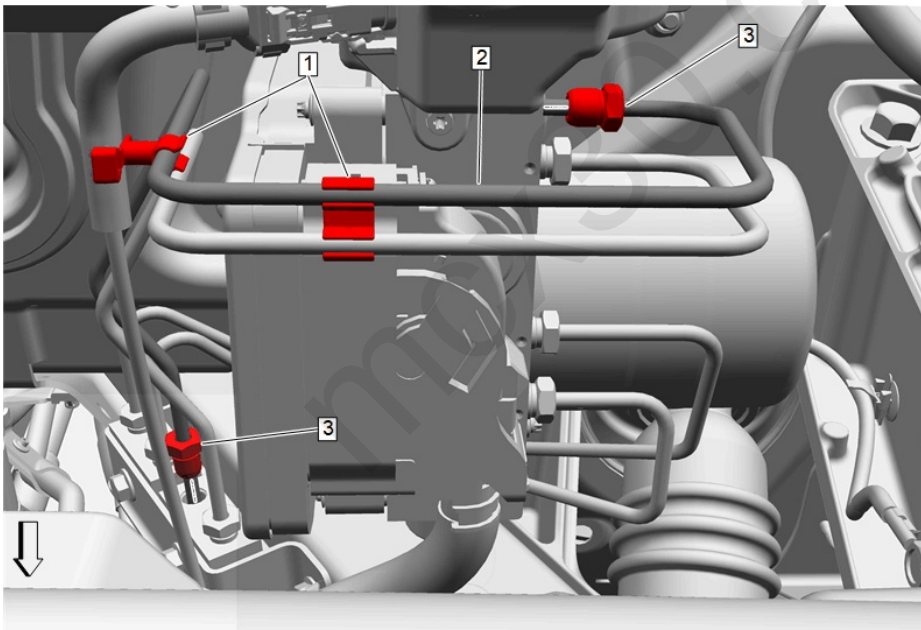


5. [Click here for full size](#)
6. Retainer (1) >> Disconnect [2x]
7. Rear Brake Front Pipe Nut (3) >> Remove [2x]
8. Rear Brake Front Pipe (2) >> Remove
9. Plug the brake pressure modulator valve inlet port to prevent brake fluid loss and contamination.
10. Plug the front brake crossover pipe connector inlet port to prevent brake fluid loss and contamination.

Installation Procedure

1. Remove the plug from the front brake crossover pipe connector inlet port.
2. Remove the plug from the brake pressure modulator valve inlet port.

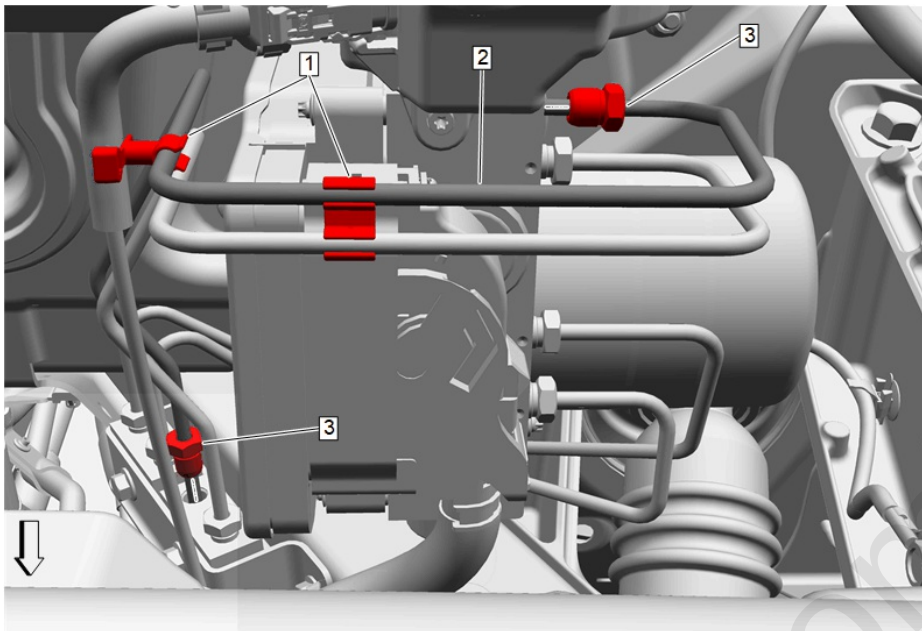


3. [Click here for full size](#)
4. Rear Brake Front Pipe (2) >> Install
5. Caution:
Fastener Caution
6. Rear Brake Front Pipe Nut (3) >> Install and tighten [2x]18 N-m (13 lb ft)
7. Retainer (1) >> Connect [2x]

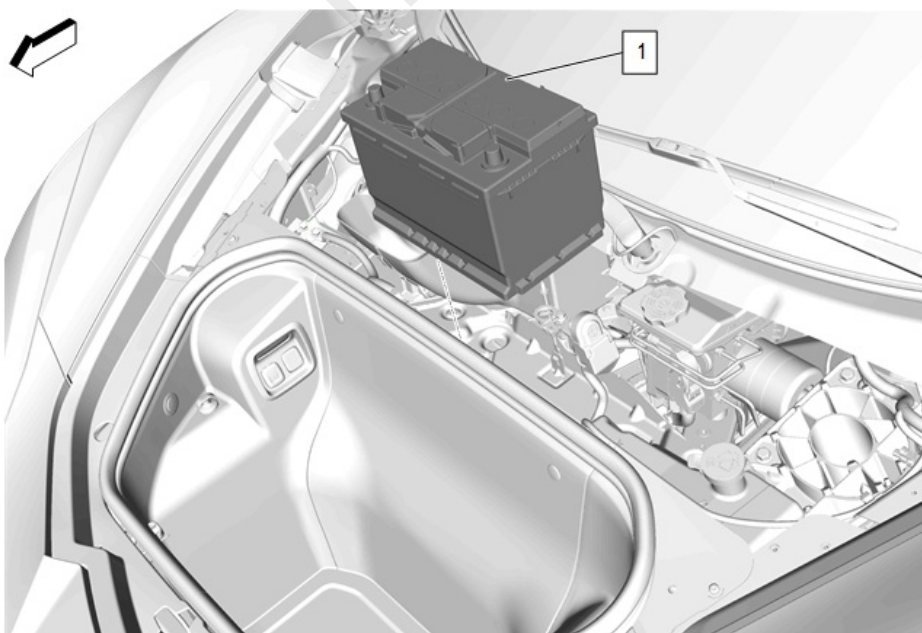

8. [Click here for full size](#)

9. Battery (1) >> Install - Battery Replacement
10. Bleed the brake system. Hydraulic Brake System Bleeding
11. Inspect for fluid leaks.

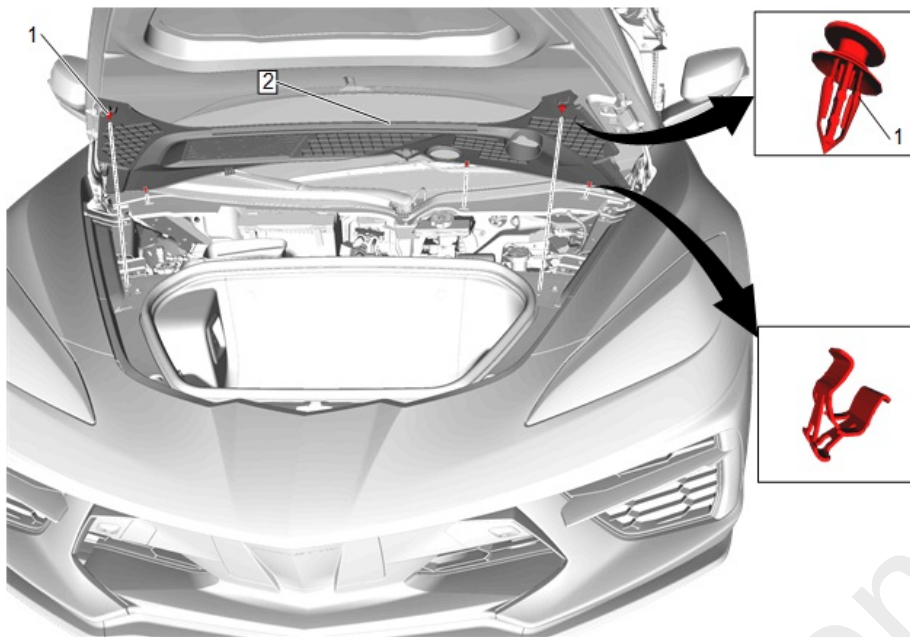

12.
[Click here for full size](#)
13. Front Compartment Rear Access Cover (2) >> Install - Front Compartment Rear Access Cover Replacement