


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

- 1. Engine/Propulsion
- 2. Engine Controls and Fuel - 6.2L (LT2)
- 3. Repair Instructions
- 4.

Fuel Injector Replacement

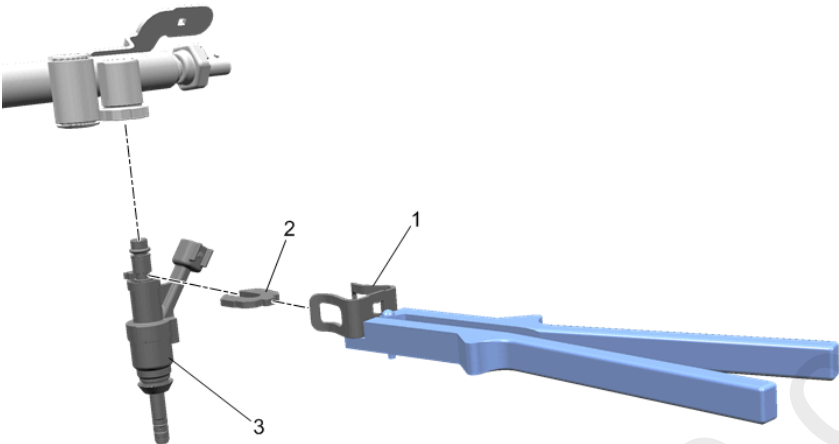

[Click here for full size](#)
Fuel Injection Fuel Rail Assembly Replacement - Bank 1

-

Fuel Injection Fuel Rail Assembly Replacement - Bank 2

Special Tools

Fuel Rail and Injectors Cleaning and Inspection

Callout	Component Name
Preliminary Procedure	
Remove the appropriate fuel rail.	
•	

Callout	Component Name
1	Fuel Injector Retainer Procedure Remove and DISCARD the fuel injector retainer clips by installing EN-51097 Injector Retaining Clip Installer and spreading both sides of the clip evenly. Special Tools EN-51097,Â Injector Retaining Clip Installer
2	Equivalent regional tools. Fuel Injector Collar Note: Always use NEW fuel injector collars supplied with injector when installing the new injector. If reinstalling the injector, it is not necessary to remove the collars unless the collars are being replaced.
3	Fuel Injector Note: Inspect the injectors to be sure that they are clean and free of debris prior to installation. Do NOT lubricate the injector seals. Rebuild the fuel injectors whenever the injector has been removed from the fuel injector rail. Procedure Replace the injector seals as needed.