

2022 CHEVROLET CORVETTE SERVICE MANUAL


- SEARCH

1. Engine/Propulsion
2. Engine Heating and Cooling
3. Repair Instructions
- 4.


Radiator Outlet Hose Replacement - Radiator Inlet Pipe to A/C Tube

Removal Procedure


1. Drain the cooling system. Cooling System Draining and Filling

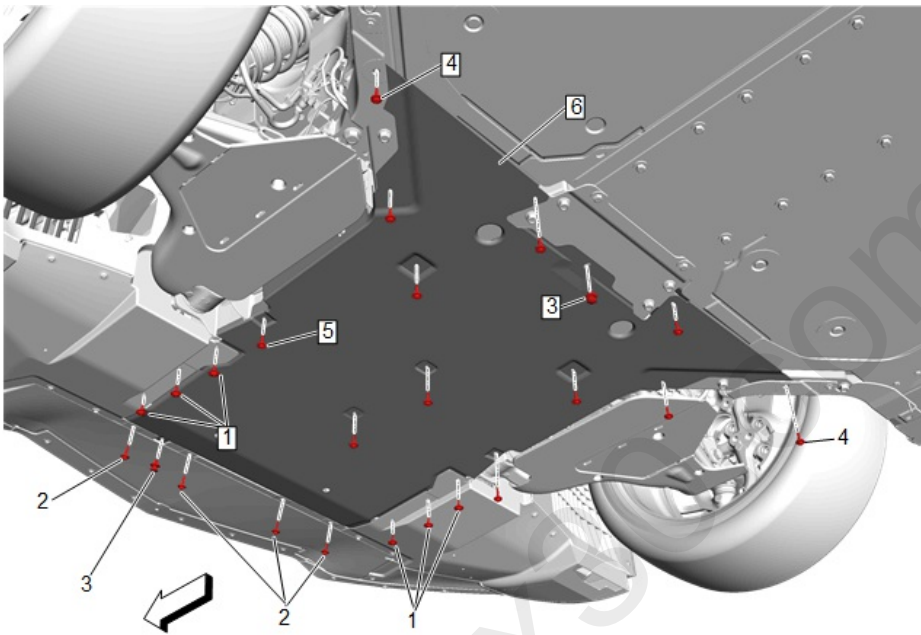

2. [Click here for full size](#)
3. Front Compartment Insulator (6) >> Remove - Front Compartment Insulator Replacement
4. Floor Panel Tunnel Panel Front Reinforcement - Front >> Remove - Floor Panel Tunnel Panel Front Reinforcement Replacement - Tunnel Front

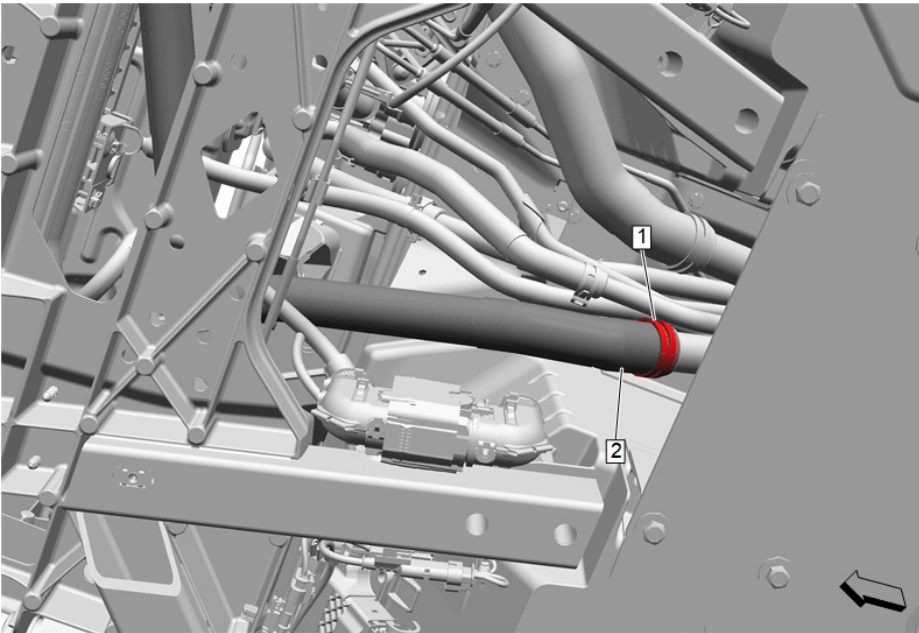


5. [Click here for full size](#)
6. Radiator Outlet Hose Clamp (1) >>> Disengage - Hose Clamp Replacement Guidelines - Spring Type
7. Radiator Outlet Hose (2) @ Air Conditioning Condenser and Air Conditioning Evaporator Tube >> Remove
8. Battery Distribution Engine Compartment Fuse Block >> Remove - Battery Distribution Engine Compartment Fuse Block Replacement
9. [Click here for full size](#)
10. Radiator Outlet Hose Clip (1) @ Front Compartment Inner Side Rail >> Remove

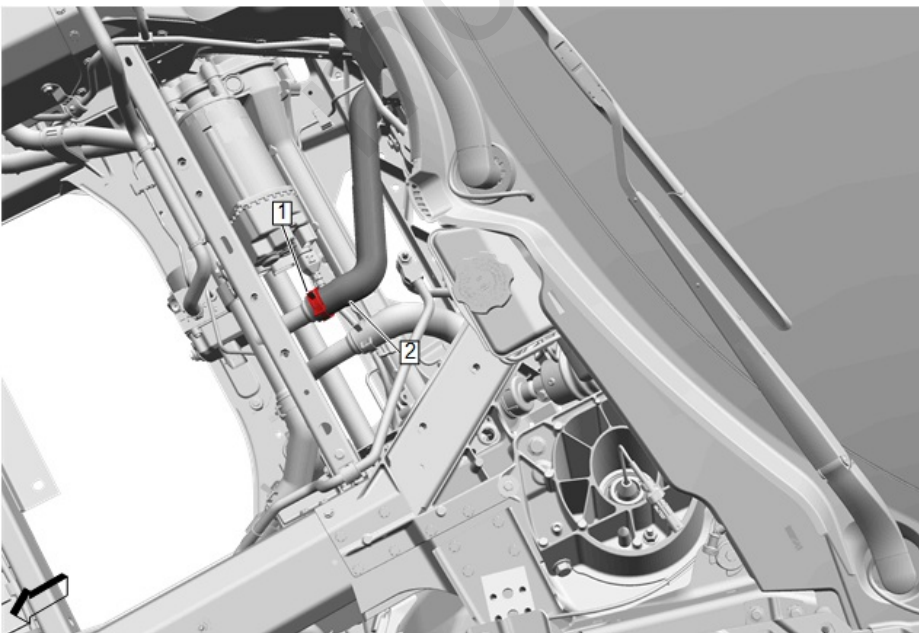


11. [Click here for full size](#)
12. Radiator Outlet Hose Clamp (1) >>> Disengage - Hose Clamp Replacement Guidelines - Spring Type
13. Radiator Outlet Hose (2) @ Radiator Inlet Pipe >> Remove

14. Radiator Outlet Hose (2) >> Remove

Installation Procedure

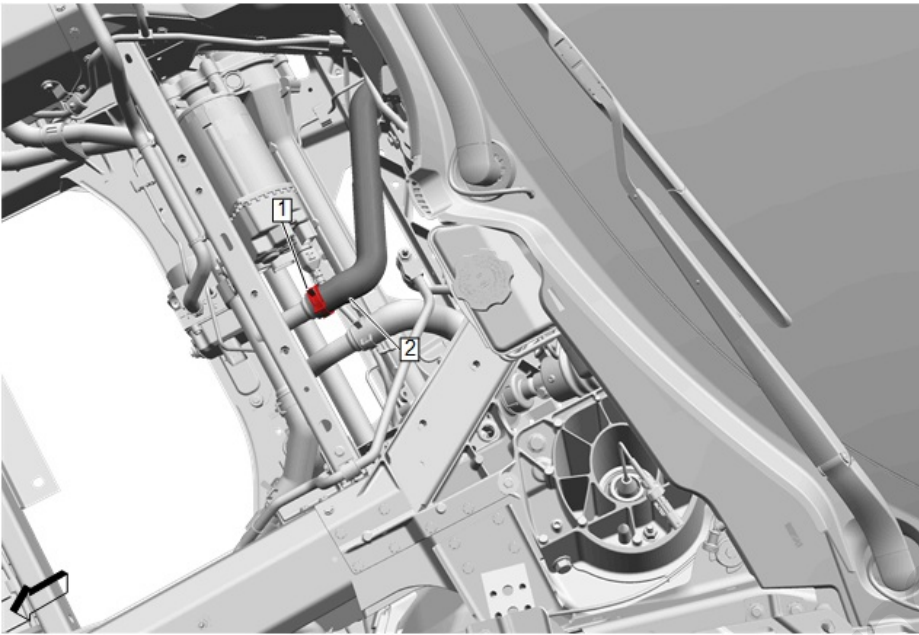


1. [Click here for full size](#)
2. Radiator Outlet Hose (2) @ Radiator Inlet Pipe >> Install
3. Radiator Outlet Hose Clamp (1) >> Engage - Hose Clamp Replacement Guidelines - Spring Type
4. [Click here for full size](#)
5. Radiator Outlet Hose Clip (1) @ Front Compartment Inner Side Rail >> Install
6. Battery Distribution Engine Compartment Fuse Block >> Install - Battery Distribution Engine Compartment Fuse Block Replacement

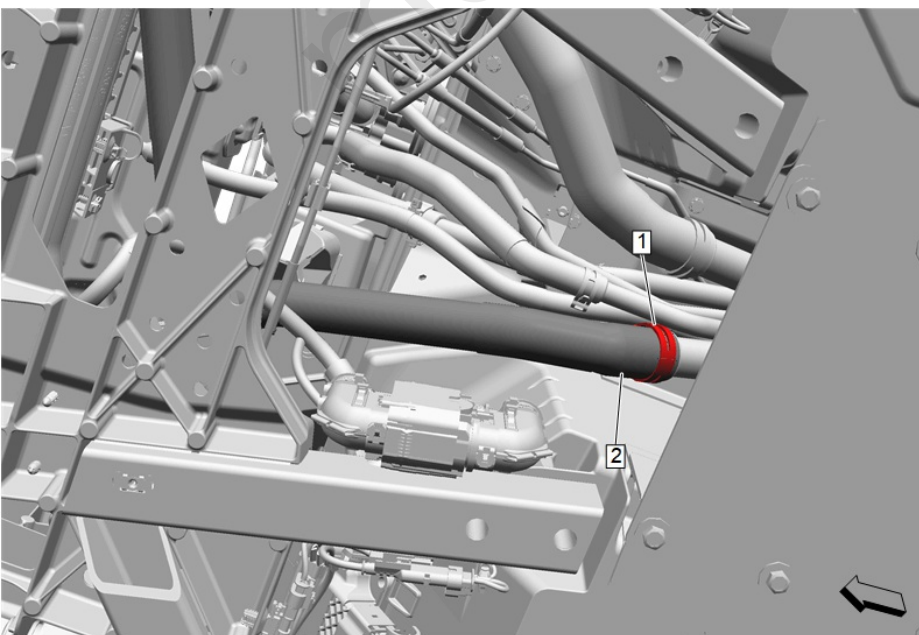

7. [Click here for full size](#)

8. Radiator Outlet Hose (2) @ Air Conditioning Condenser and Air Conditioning Evaporator Tube >> Install
9. Radiator Outlet Hose Clamp (1) >> Engage - Hose Clamp Replacement Guidelines - Spring Type
10. Floor Panel Tunnel Panel Front Reinforcement - Front >> Install - Floor Panel Tunnel Panel Front Reinforcement Replacement - Tunnel Front

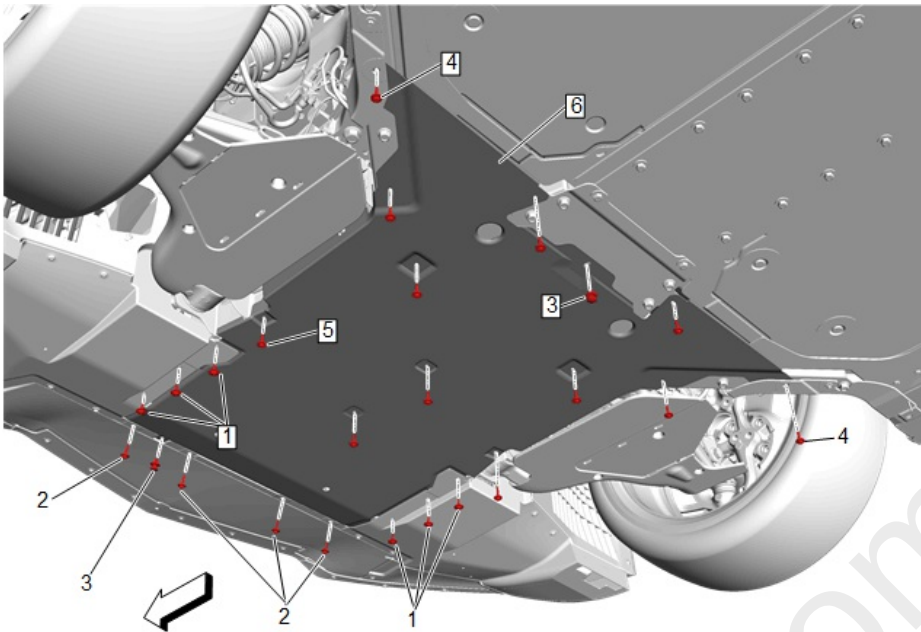

11. [Click here for full size](#)
12. Front Compartment Insulator (6) >> Install - Front Compartment Insulator Replacement
13. Fill the cooling system to the proper level. Cooling System Draining and Filling
14. Start the engine and check for coolant leaks.