


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH


1. [Engine/Propulsion](#)
2. [Engine Mechanical - 6.2L \(LT2\)](#)
3. [Repair Instructions](#)
- 4.

Drive Belt Tensioner Replacement - Accessory

Removal Procedure

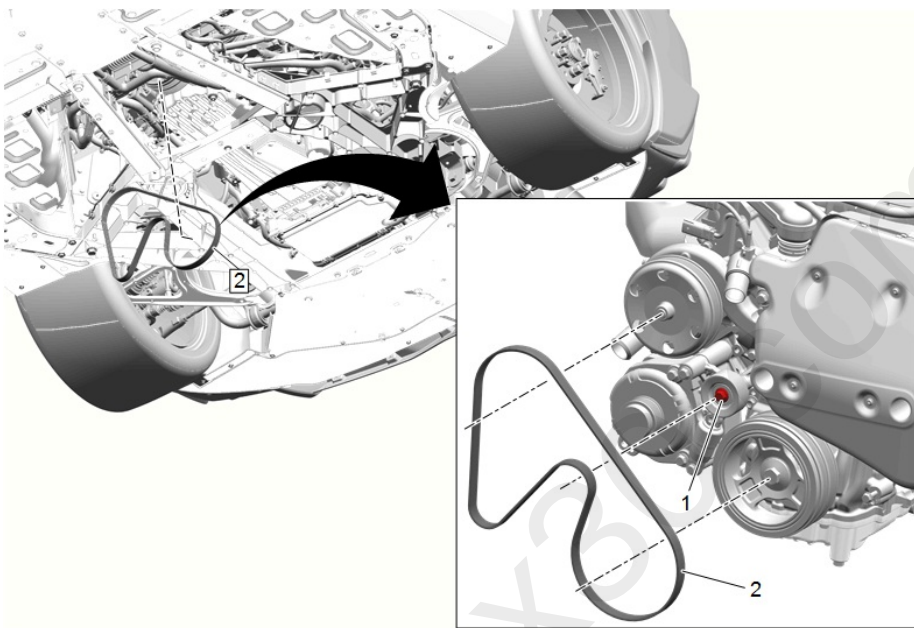


1. [Click here for full size](#)
2. Water Pump and Generator Belt (2>) >> Remove and DISCARD - Water Pump and Generator Belt Replacement

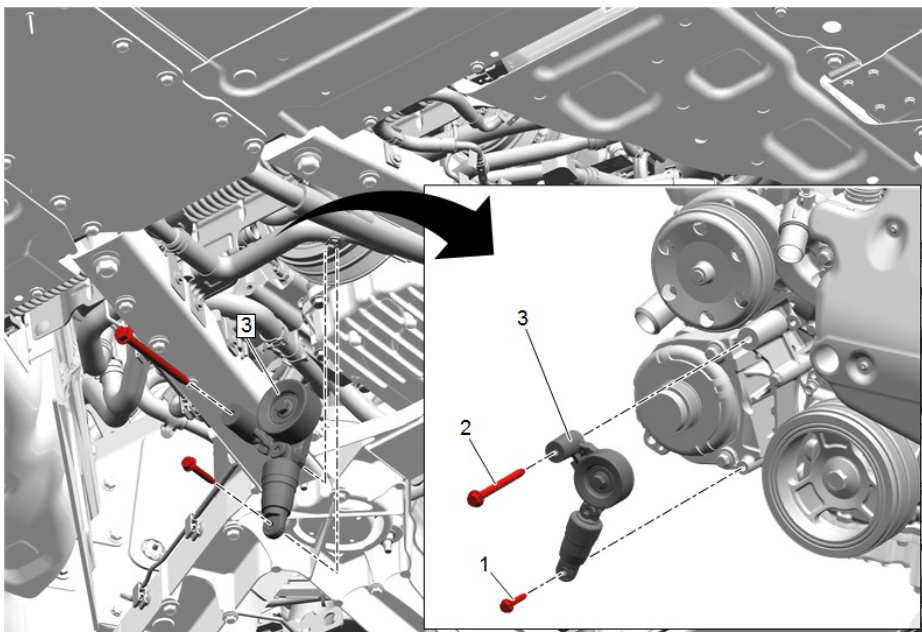

3. [Click here for full size](#)
4. Drive Belt Tensioner Bolt (1>) >>> Remove
5. Drive Belt Tensioner Bolt (2>) >>> Remove
6. Drive Belt Tensioner (3>) >>> Remove

Installation Procedure

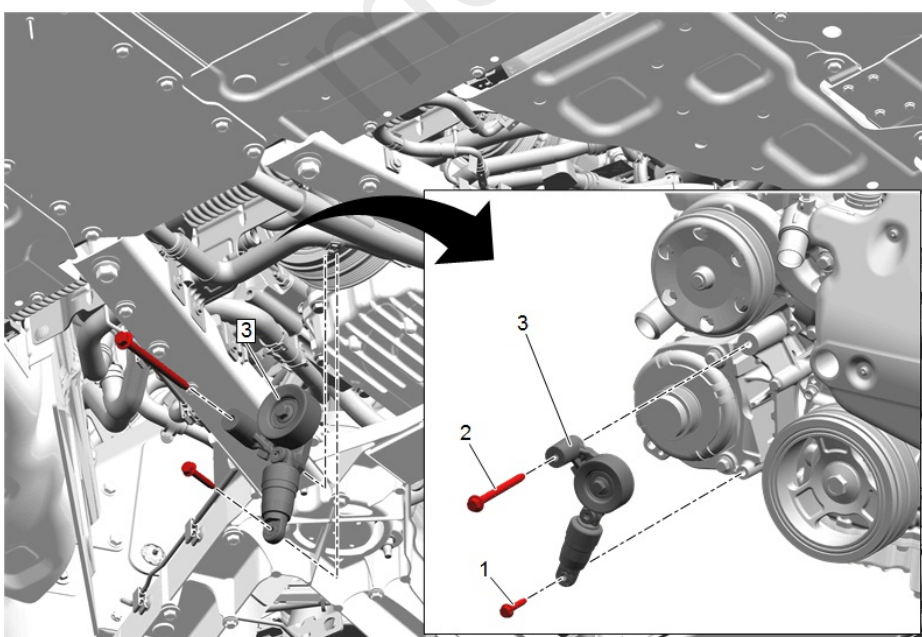

1. [Click here for full size](#)


2. Drive Belt Tensioner (3>) >> Install

3. Caution:

Refer to Fastener Caution.

4. Drive Belt Tensioner Bolt (2>) >> Install and tighten 58N-m (43 lb ft)

5. Drive Belt Tensioner Bolt (1>) >> Install and tighten 22N-m (16 lb ft)

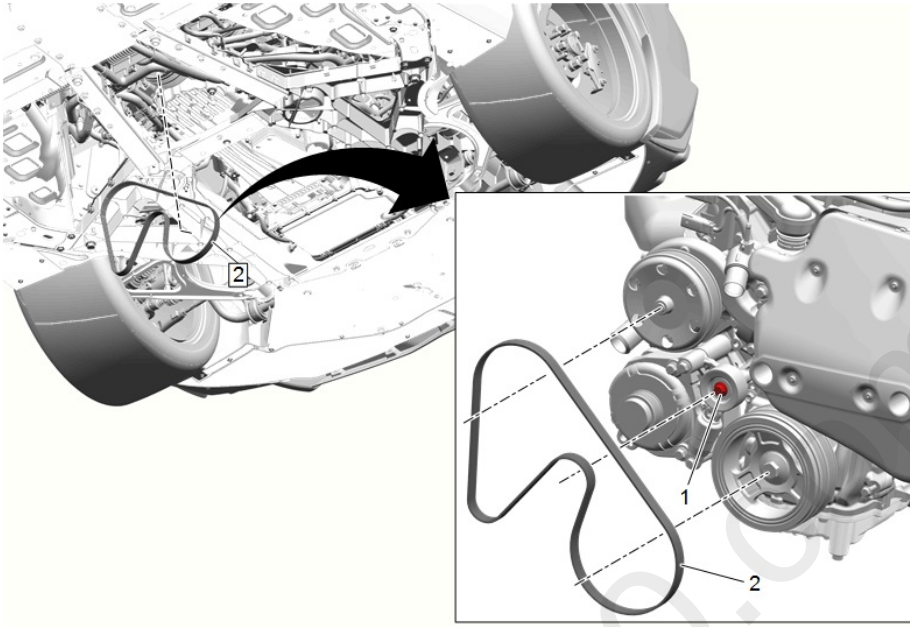

6.
[Click here for full size](#)

7. Water Pump and Generator Belt (2>) >> Install NEW - Water Pump and Generator Belt Replacement