


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH


1. [Engine/Propulsion](#)
2. [Engine Mechanical - 6.2L \(LT2\)](#)
3. [Repair Instructions](#)
- 4.

Generator and Drive Belt Tensioner Bracket Replacement


Removal Procedure

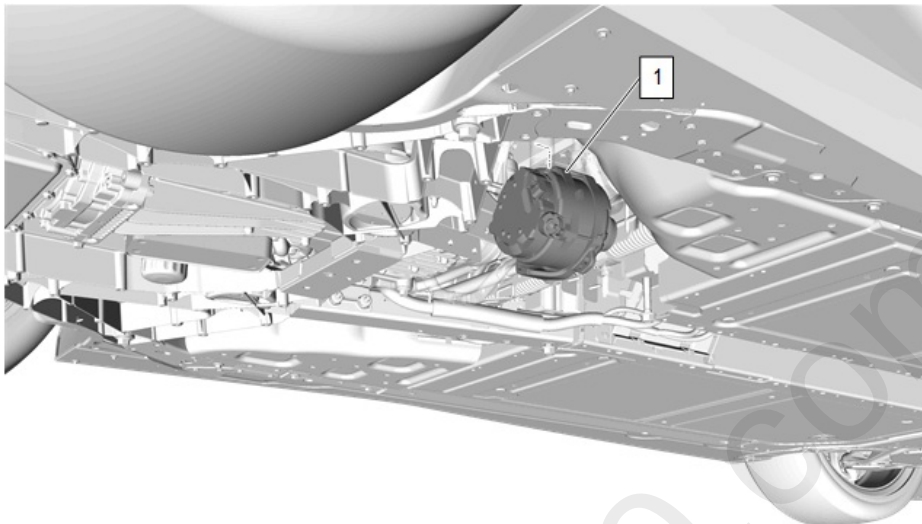


1. [Click here for full size](#)
2. [Generator \(1>\) >> Remove - Generator Replacement](#)

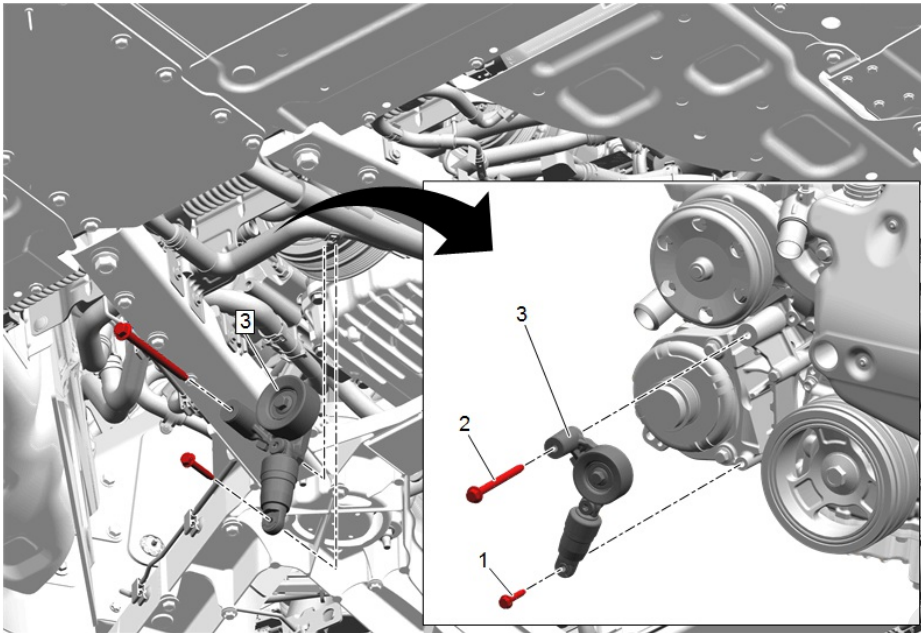

3. [Click here for full size](#)
4. Drive Belt Tensioner (3>) >>> Remove - Drive Belt Tensioner Replacement - Accessory

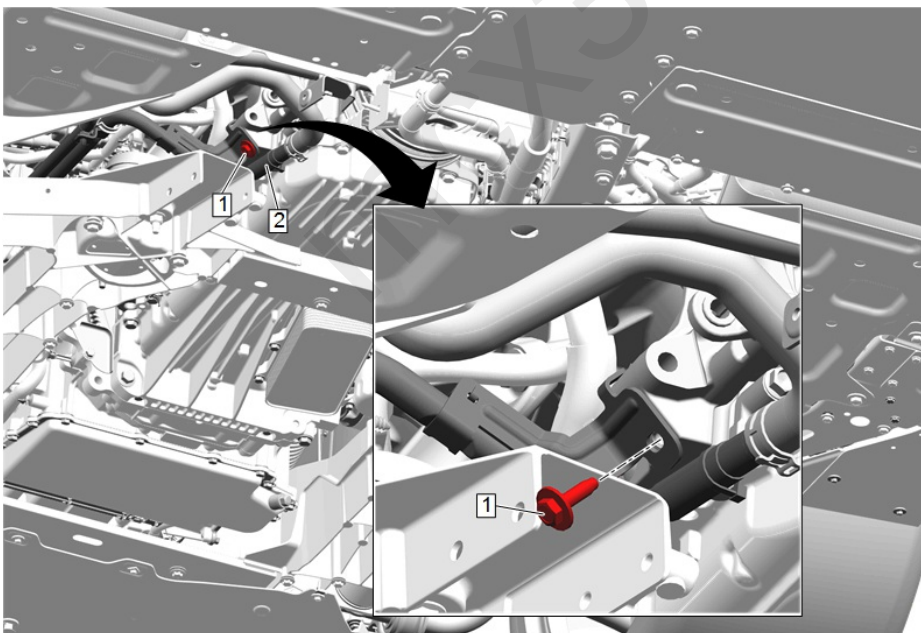

5. [Click here for full size](#)
6. Transmission Fluid Cooler Pipe Bracket Bolt (1>) @ Water Pump Inlet Pipe (2>) >>> Remove
7. [Click here for full size](#)
8. Wiring Harness Retainer (1>) >>> Remove

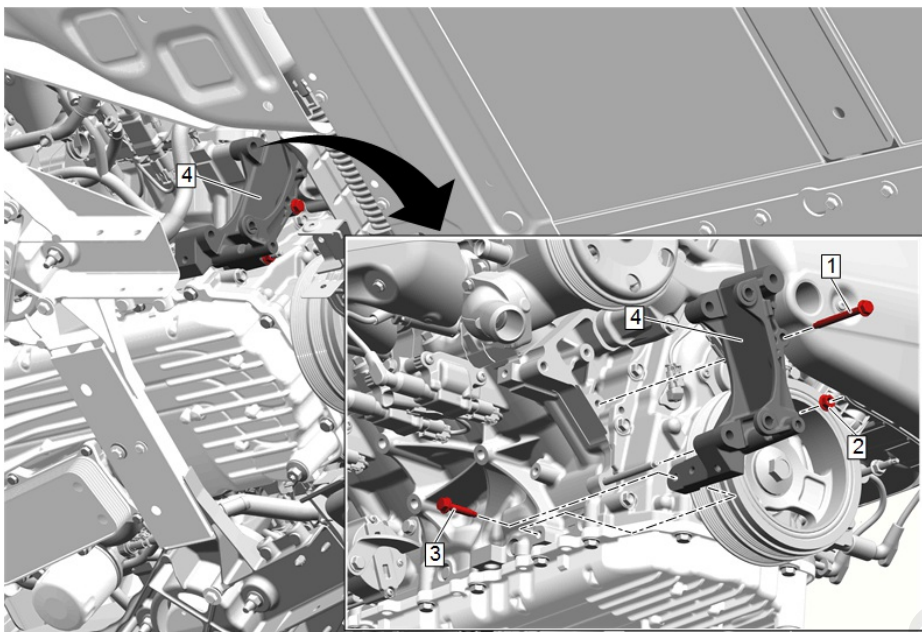

9.

[Click here for full size](#)


10. Generator Bracket Bolt (1>) >> Remove

11. Generator Bracket Nut (2>) >> Remove


12. Generator and Drive Belt Tensioner Bracket Bolt (3>) >> Remove

13. Generator and Drive Belt Tensioner Bracket (4>) >> Remove

Installation Procedure

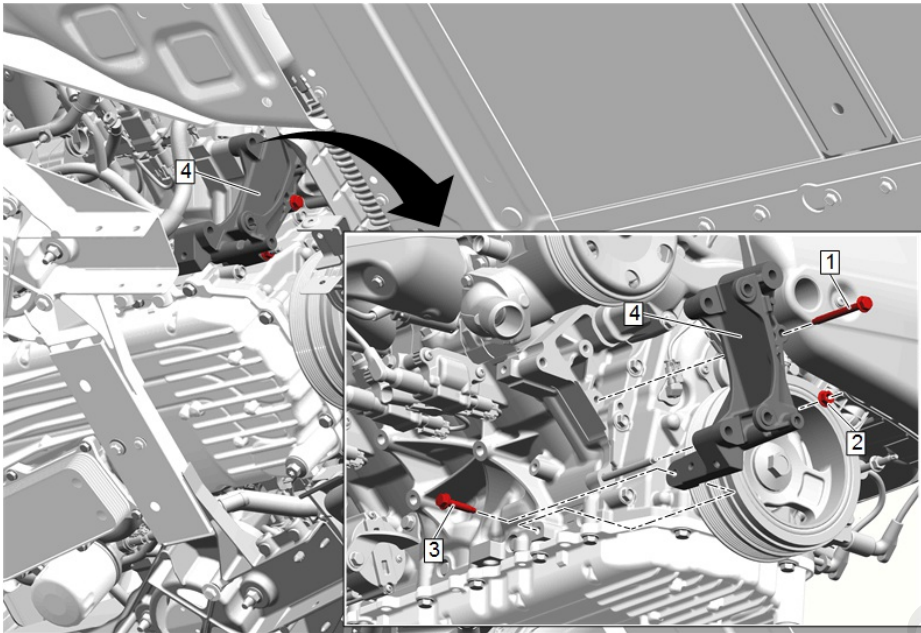

1. [Click here for full size](#)
2. Generator and Drive Belt Tensioner Bracket (4>) >> Install
3. Generator and Drive Belt Tensioner Bracket Bolt (3>) >> Install and tighten
4. Generator Bracket Nut (2>) >> Install and tighten 22N-m (16 lb ft)
5. Generator Bracket Bolt (1>) >> Install and tighten 22N-m (16 lb ft)
6. [Click here for full size](#)
7. Wiring Harness Retainer (1>) >> Install

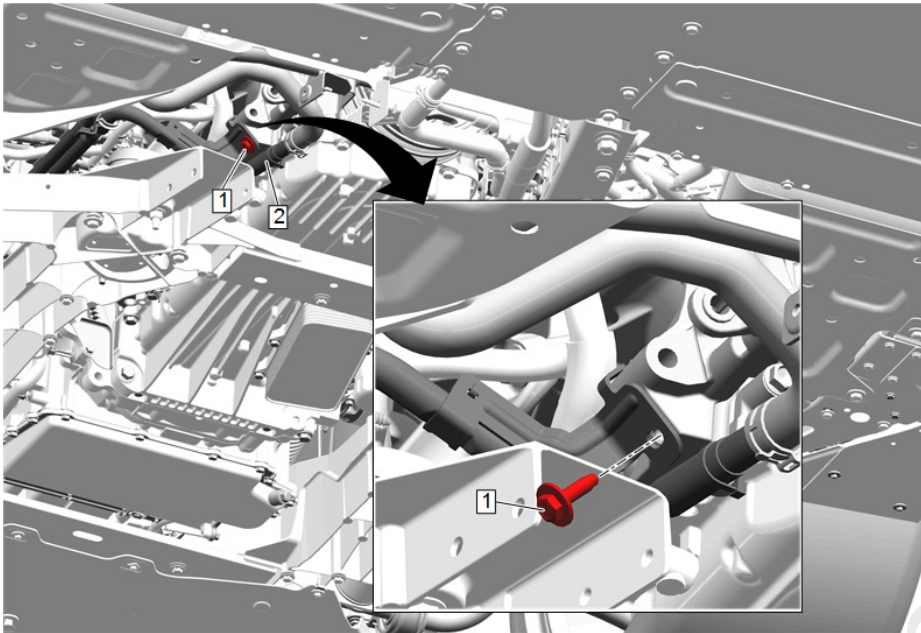


8. [Click here for full size](#)

9. Caution:


Refer to Fastener Caution.

10. Transmission Fluid Cooler Pipe Bracket Bolt (1>) @ Water Pump Inlet Pipe (2>) >> Install and tighten 22N-m (16 lb ft)

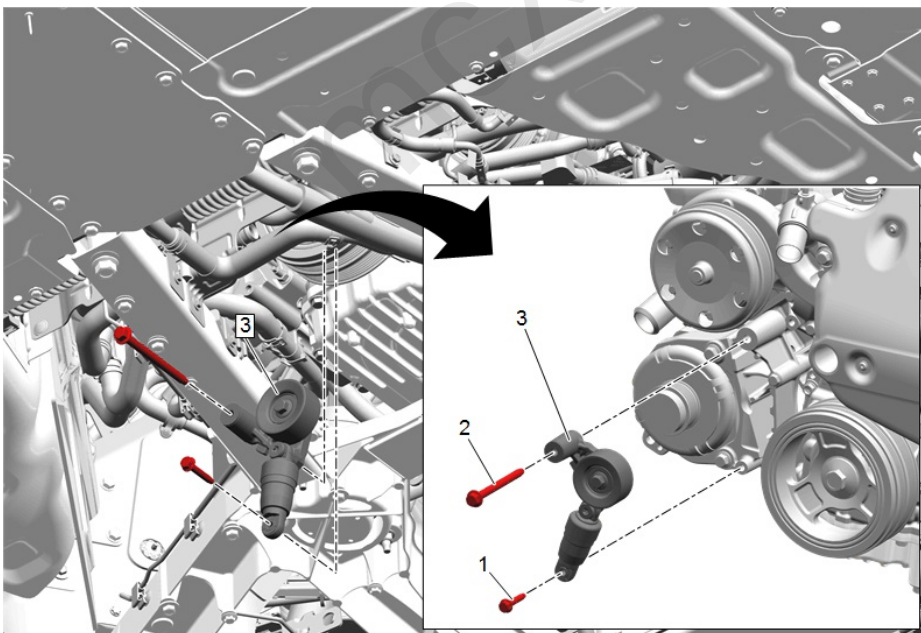

11. [Click here for full size](#)

12. Drive Belt Tensioner (3>) >> Install - Drive Belt Tensioner Replacement - Accessory

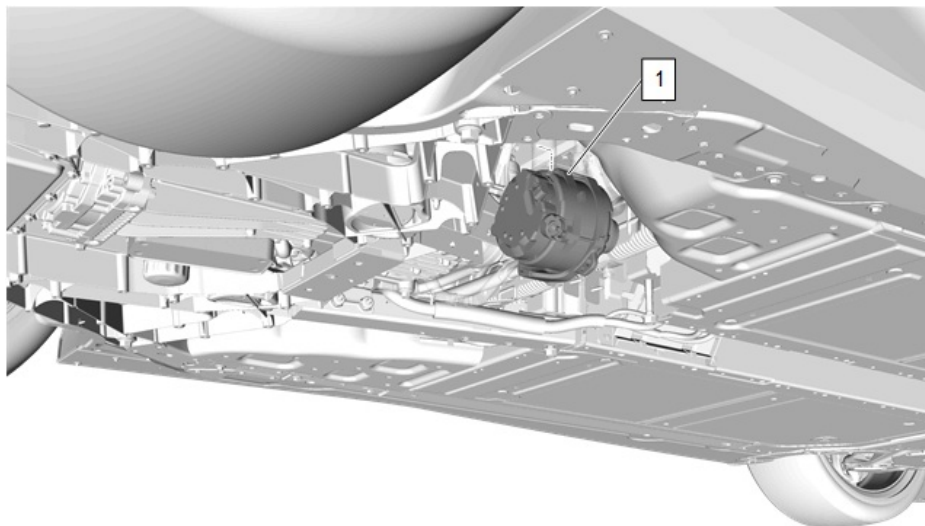

13. [Click here for full size](#)
14. Generator (1>) >> Install - Generator Replacement

mcx30.com