

2022 CHEVROLET CORVETTE SERVICE MANUAL


- SEARCH

1. [Engine/Propulsion](#)
2. [Engine Mechanical - 6.2L \(LT2\)](#)
3. [Repair Instructions](#)
- 4.


Oil Level Indicator Tube Replacement (Convertible)

Removal Procedure

1. [Click here for full size](#)
2. [Rear Window Panel \(2>\) >> Remove - Rear Window Panel Replacement](#)

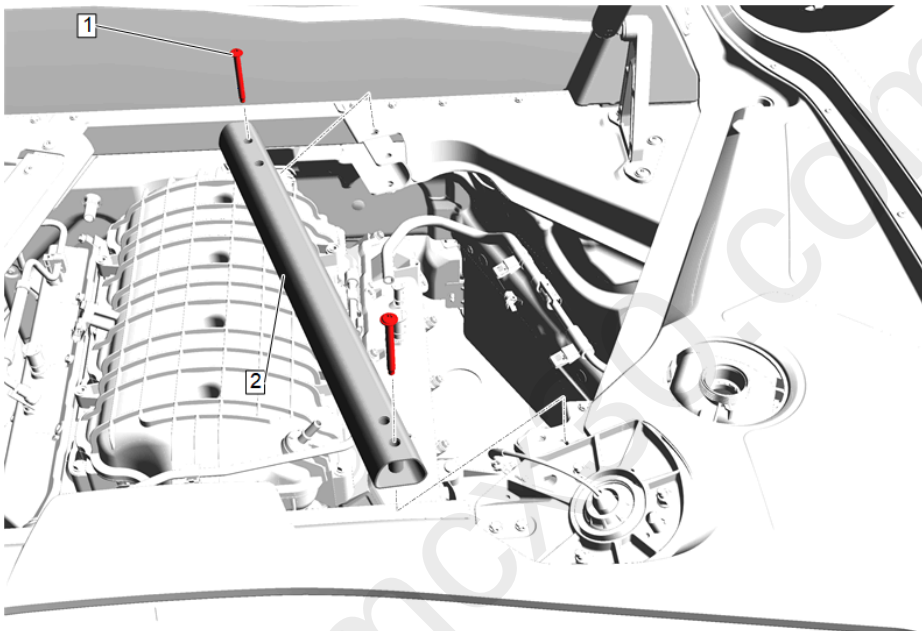


3. [Click here for full size](#)
4. [Load Floor Panel Rear Cross Bar \(2>\) >> Remove - Load Floor Panel Rear Cross Bar Replacement - Right Side](#)
5. [Click here for full size](#)
6. [Radiator Surge Tank Bolt \(1>\) @ Radiator Surge Tank Outlet Pipe \(2>\) >> Remove](#)
7. [Click here for full size](#)
8. [Radiator Surge Tank Bracket Bolt \(1>\) @ Radiator Surge Tank >> Remove](#)
9. Reposition the radiator surge tank and attached components to assist in removing the remaining components.

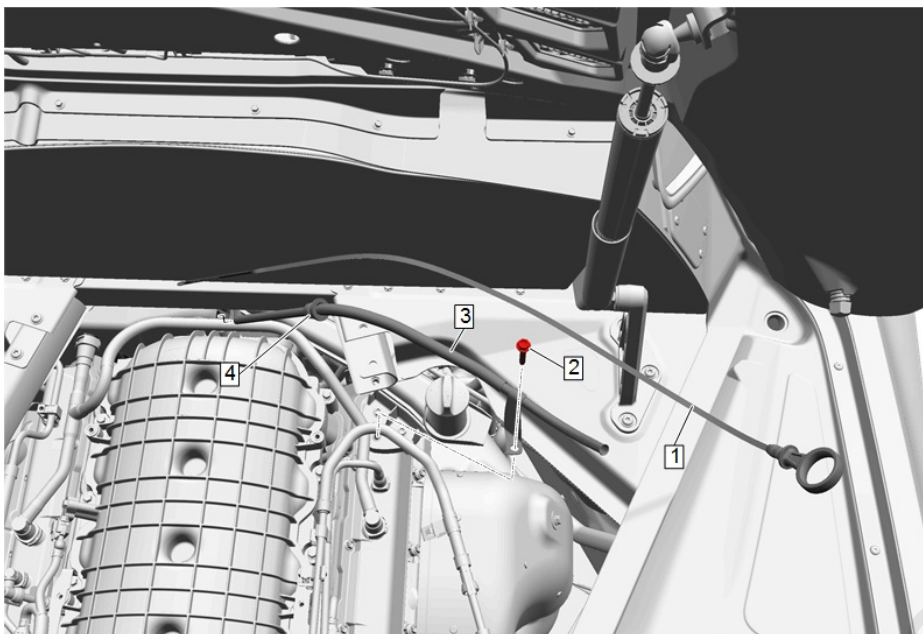


10. [Click here for full size](#)
11. Oil Level Indicator (1>) >> Remove
12. Oil Level Indicator Tube Bolt (2>) >> Remove
13. Oil Level Indicator Tube (3>) >> Remove
14. Oil Level Indicator Seal (4>) >> Remove and DISCARD

Installation Procedure

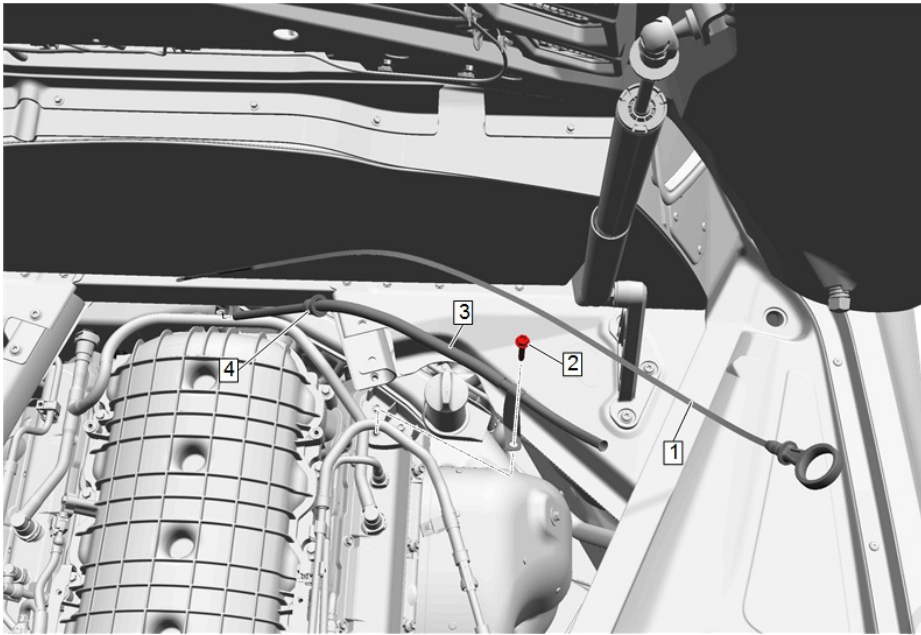

1. [Click here for full size](#)
2. Oil Level Indicator Seal (4>) >> Install NEW
3. Oil Level Indicator Tube (3>) >> Install
4. Caution:
Refer to Fastener Caution.
5. Oil Level Indicator Tube Bolt (2>) >> Install and tighten 10 N-m (89 lb in)
6. Oil Level Indicator >> (1>) Install
7. Reposition the radiator surge tank and attached components to normal location.
8. [Click here for full size](#)
9. Radiator Surge Tank Bracket Bolt (1>) @ Radiator Surge Tank >> Install and tighten - Radiator Surge Tank Outlet Pipe Replacement
10. [Click here for full size](#)
11. Radiator Surge Tank Bolt (1>) @ Radiator Surge Tank Outlet Pipe (2>) >> Install and tighten - Radiator Surge Tank Replacement

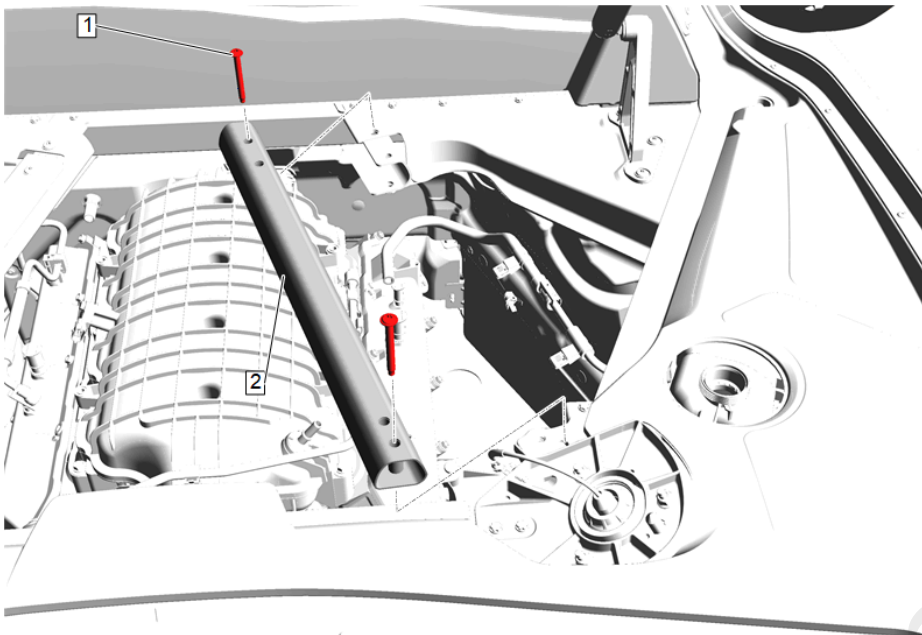

12. [Click here for full size](#)
13. Load Floor Panel Rear Cross Bar (2>) >> Install - Load Floor Panel Rear Cross Bar Replacement - Right Side
14. [Click here for full size](#)
15. Rear Window Panel (2>) >> Install - Rear Window Panel Replacement