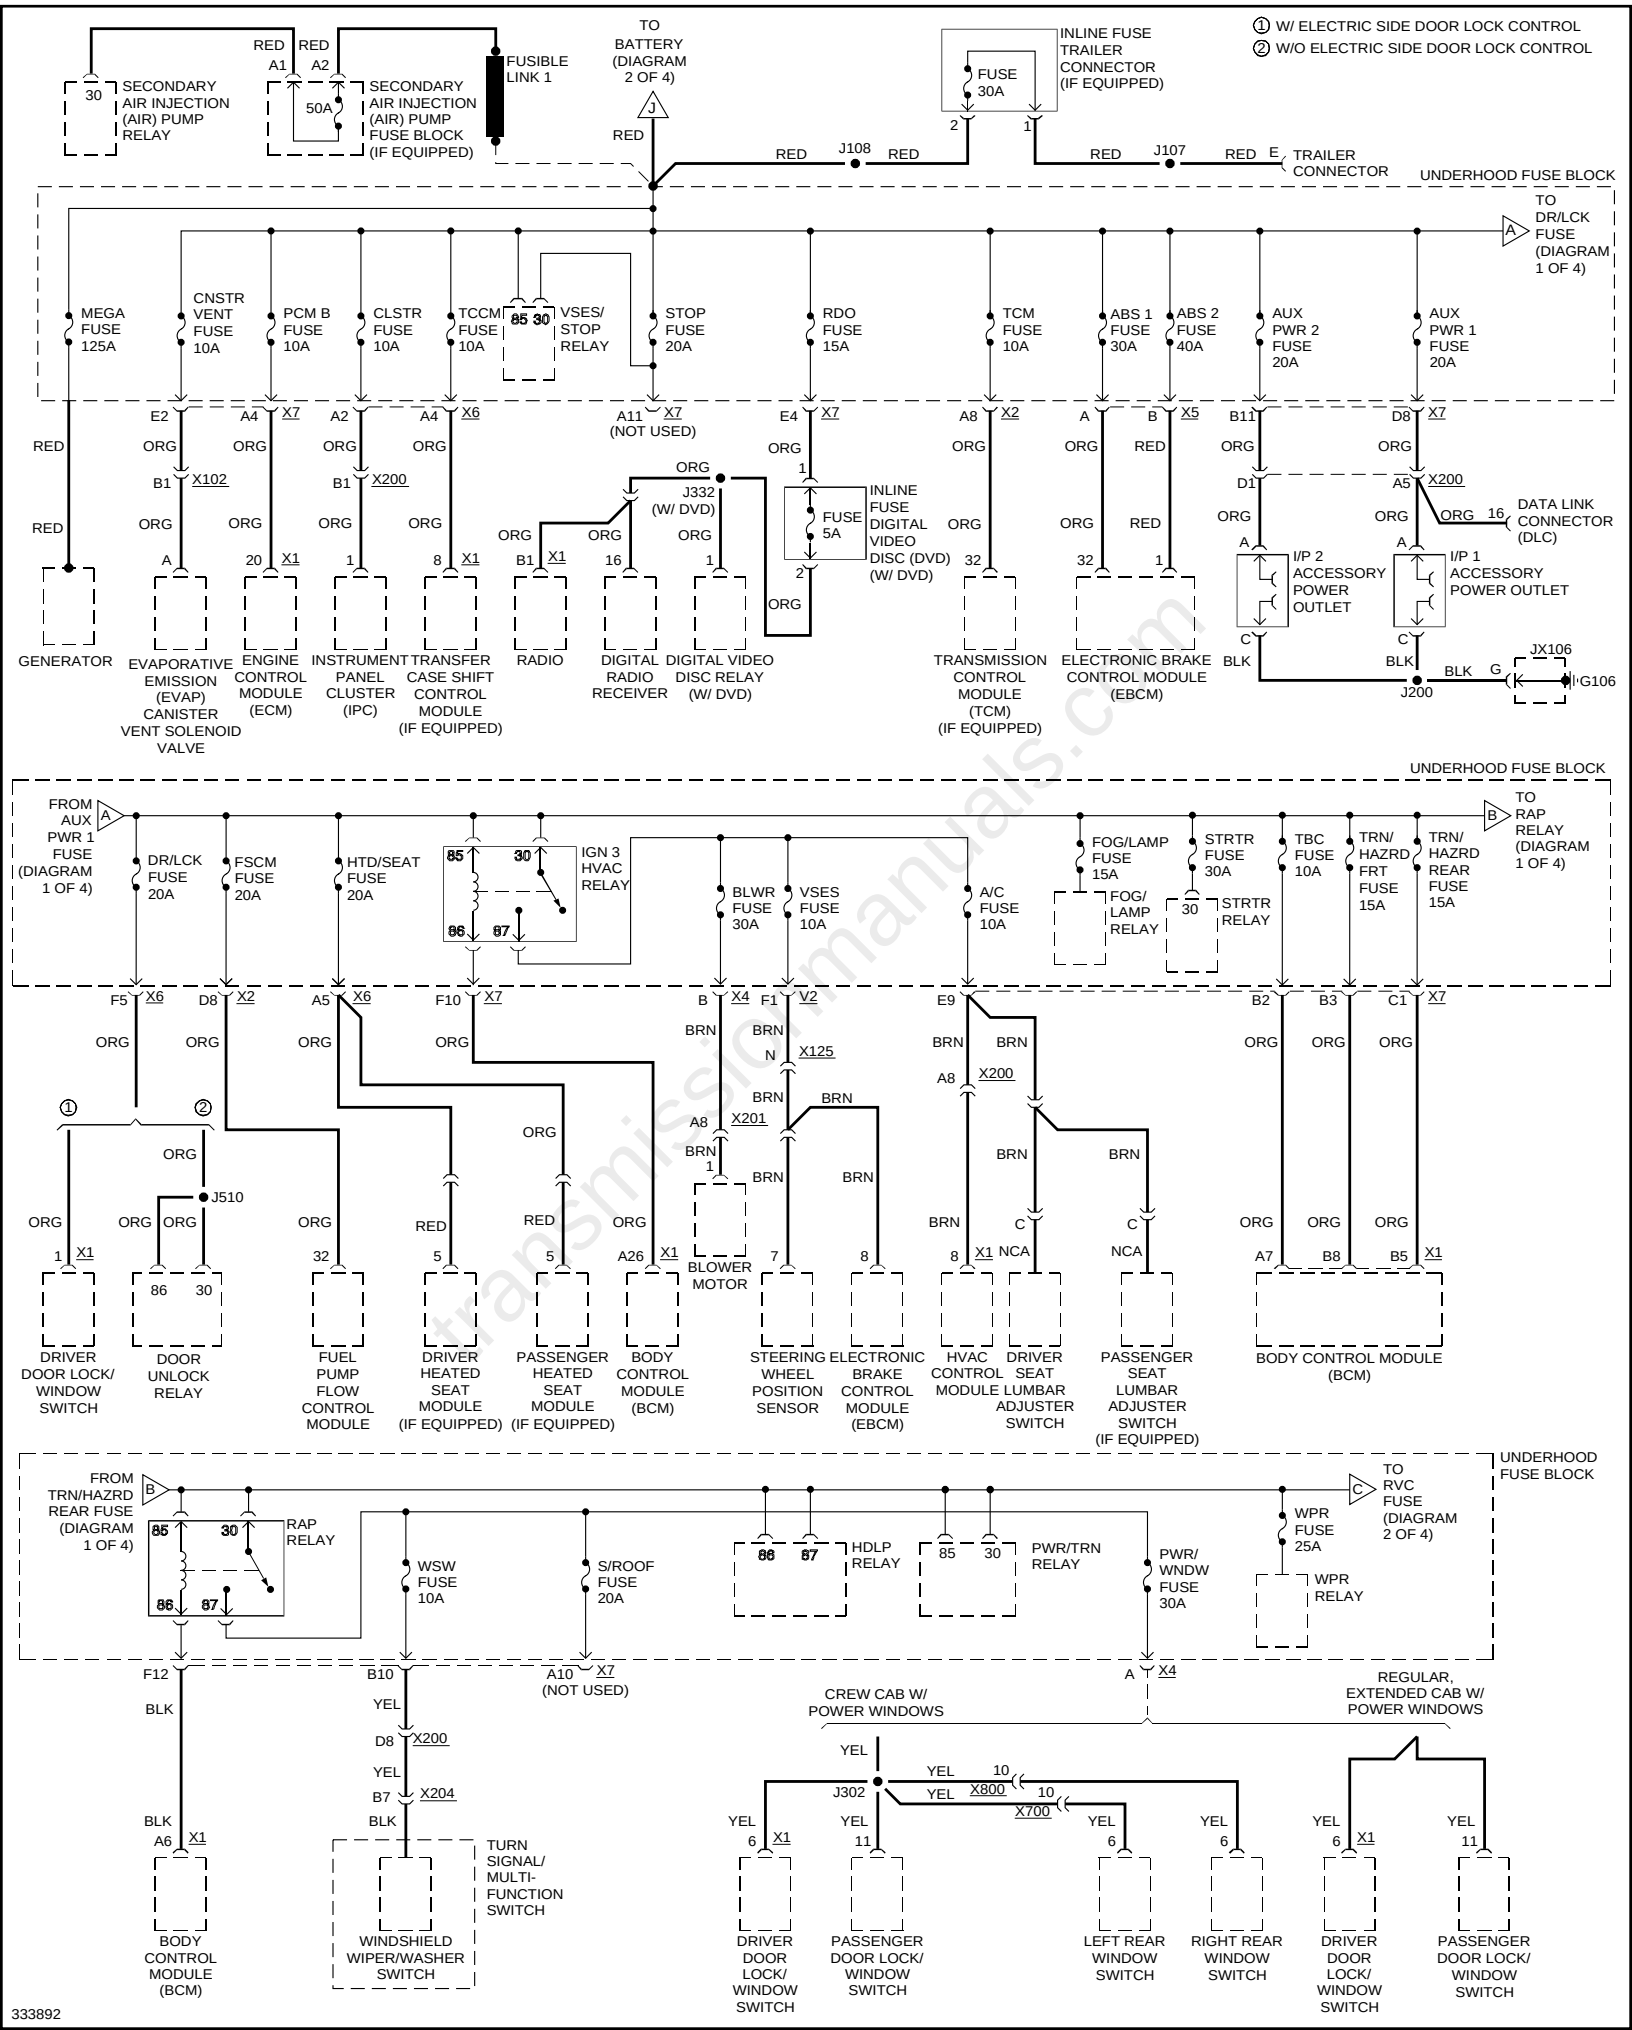
① W/ ELECTRIC SIDE DOOR LOCK CONTROL
② W/O ELECTRIC SIDE DOOR LOCK CONTROL
SECONDARY AIR INJECTION (AIR) PUMP RELAY
SECONDARY AIR INJECTION (AIR) PUMP FUSE BLOCK (IF EQUIPPED)
FUSIBLE LINK 1
TO BATTERY (DIAGRAM 2 OF 4)
INLINE FUSE TRAILER CONNECTOR (IF EQUIPPED)
FUSE 30A
TRAILER CONNECTOR
UNDERHOOD FUSE BLOCK
TO DR/LCK FUSE (DIAGRAM 1 OF 4)
MEGA FUSE 125A
CNSTR VENT FUSE 10A
PCM B FUSE 10A
CLSTR FUSE 10A
TCCM FUSE 10A
VSES/ STOP RELAY
STOP FUSE 20A
RDO FUSE 15A
TCM FUSE 10A
ABS 1 FUSE 30A
ABS 2 FUSE 40A
AUX PWR 2 FUSE 20A
AUX PWR 1 FUSE 20A
GENERATOR
EVAPORATIVE EMISSION (EVAP) CANISTER VENT SOLENOID VALVE
ENGINE CONTROL MODULE (ECM)
INSTRUMENT PANEL CLUSTER (IPC)
TRANSFER CASE SHIFT CONTROL MODULE (IF EQUIPPED)
RADIO
DIGITAL RADIO RECEIVER
DIGITAL VIDEO DISC RELAY (W/ DVD)
J332 (W/ DVD)
INLINE FUSE DIGITAL VIDEO DISC (DVD) (W/ DVD)
FUSE 5A
TRANSMISSION CONTROL MODULE (TCM) (IF EQUIPPED)
ELECTRONIC BRAKE CONTROL MODULE (EBCM)
I/P 2 ACCESSORY POWER OUTLET
I/P 1 ACCESSORY POWER OUTLET
DATA LINK CONNECTOR (DLC)
J200
JX106
G106
UNDERHOOD FUSE BLOCK
FROM AUX PWR 1 FUSE (DIAGRAM 1 OF 4)
TO RAP RELAY (DIAGRAM 1 OF 4)
DR/LCK FUSE 20A
FSCM FUSE 20A
HTD/SEAT FUSE 20A
IGN 3 HVAC RELAY
BLWR FUSE 30A
VSES FUSE 10A
A/C FUSE 10A
FOG/LAMP FUSE 15A
FOG/ LAMP RELAY
STRTR FUSE 30A
STRTR RELAY
TBC FUSE 10A
TRN/ HAZRD FRT FUSE 15A
TRN/ HAZRD REAR FUSE 15A
J510
DRIVER DOOR LOCK/ WINDOW SWITCH
DOOR UNLOCK RELAY
FUEL PUMP FLOW CONTROL MODULE
DRIVER HEATED SEAT MODULE (IF EQUIPPED)
PASSENGER HEATED SEAT MODULE (IF EQUIPPED)
BODY CONTROL MODULE (BCM)
BLOWER MOTOR
STEERING WHEEL POSITION SENSOR
ELECTRONIC BRAKE CONTROL MODULE (EBCM)
HVAC CONTROL MODULE
DRIVER SEAT LUMBAR ADJUSTER SWITCH
PASSENGER SEAT LUMBAR ADJUSTER SWITCH (IF EQUIPPED)
BODY CONTROL MODULE (BCM)
UNDERHOOD FUSE BLOCK
FROM TRN/HAZRD REAR FUSE (DIAGRAM 1 OF 4)
TO RVC FUSE (DIAGRAM 2 OF 4)
RAP RELAY
WSW FUSE 10A
S/ROOF FUSE 20A
HDLP RELAY
PWR/TRN RELAY
PWR/ WNDW FUSE 30A
WPR FUSE 25A
WPR RELAY
CREW CAB W/ POWER WINDOWS
REGULAR, EXTENDED CAB W/ POWER WINDOWS
BODY CONTROL MODULE (BCM)
TURN SIGNAL/ MULTI-FUNCTION SWITCH
WINDSHIELD WIPER/WASHER SWITCH
DRIVER DOOR LOCK/ WINDOW SWITCH
PASSENGER DOOR LOCK/ WINDOW SWITCH
LEFT REAR WINDOW SWITCH
RIGHT REAR WINDOW SWITCH
DRIVER DOOR LOCK/ WINDOW SWITCH
PASSENGER DOOR LOCK/ WINDOW SWITCH
333892