


[2009 Chevrolet Equinox](#) | [Equinox, Torrent \(VIN L\) Service Manual](#) | [Driver Information and Entertainment](#) | [Displays and Gages](#) | [Specifications](#) | **Document ID: 1726485**

Fastener Tightening Specifications


Application	Specification	
	Metric	English
Instrument Panel Cluster Screw	2.5 N·m	22 lb in

Ambient Air Temperature Sensor Replacement

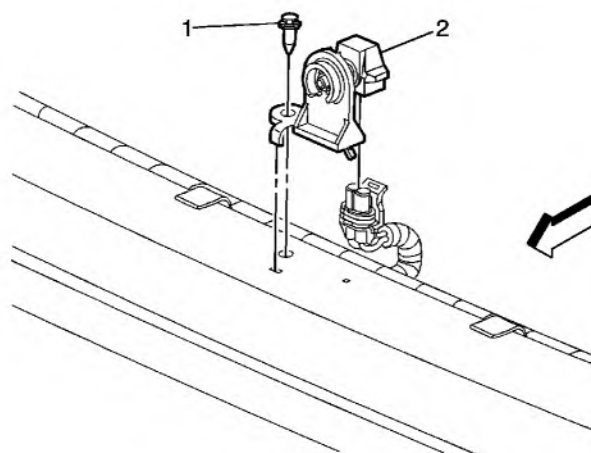


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
Remove the front fascia. Refer to Front Bumper Fascia Replacement .	
1	Ambient Air Temperature Sensor Retainer
2	Ambient Air Temperature Sensor
	Tip Disconnect the electrical connector.

Electronic Compass Module Replacement

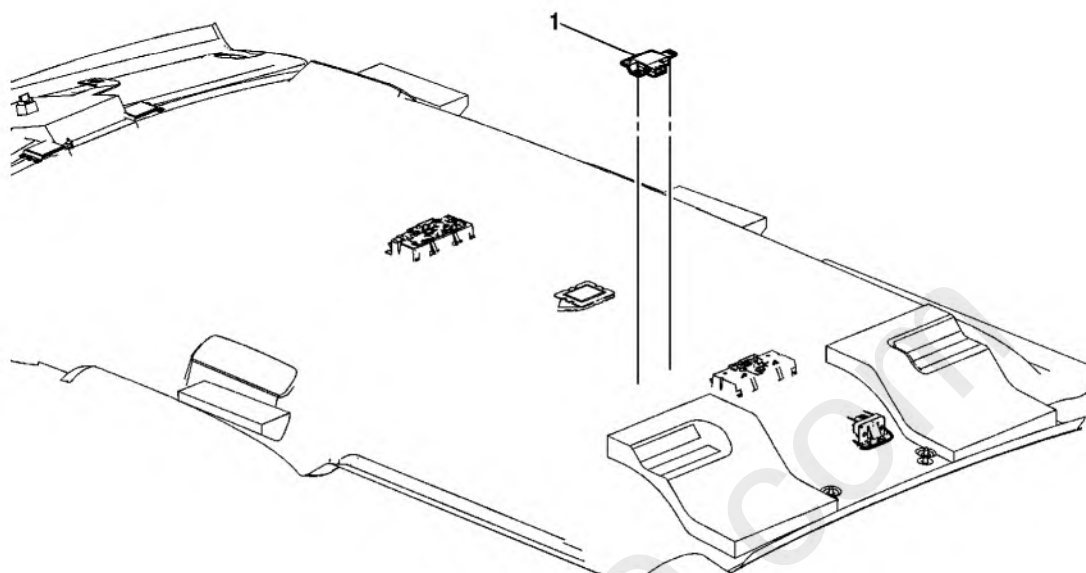


Callout	Component Name
Preliminary Procedure	
Lower the headliner to gain access. Refer to Headlining Trim Panel Replacement .	
1	Electronic Compass Module Procedure 1. Disconnect the electrical connector. 2. Unsnap the module from the headliner assembly. 3. Refer to Control Module References for programming and set up procedures.

Driver Information Display Switch Replacement

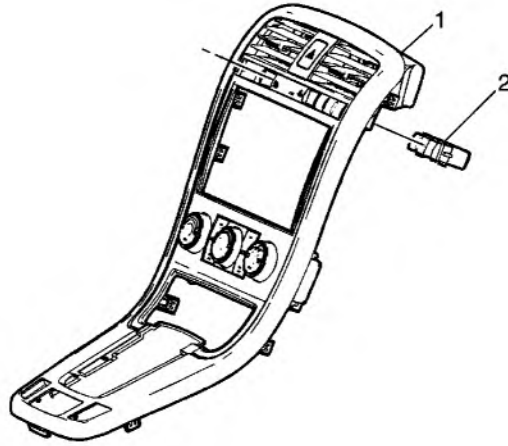

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Instrument Panel Accessory Trim Bezel Refer to Instrument Panel Accessory Bezel Replacement .
2	Driver Information Center Switch

Instrument Cluster Replacement

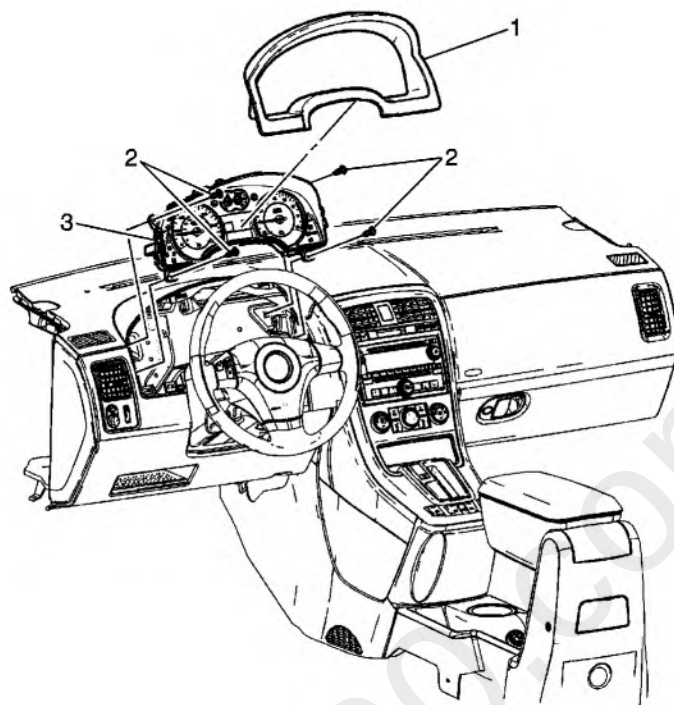

Callout	Component Name
Preliminary Procedures 1. Disable the SIR. Refer to SIR Disabling and Enabling . 2. Tilt the steering column to the lowest setting.	
1	Instrument Panel (I/P) Cluster Trim Plate Refer to Instrument Cluster Trim Panel Replacement .
2	I/P Cluster Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
3	I/P Cluster Procedure If a replacement I/P cluster is installed, program the cluster. Refer to Control Module References .

© 2010 General Motors Corporation. All rights reserved.