

2017 ACCESSORIES & EQUIPMENT**Interior Trim and Paneling - Encore, Trax****SPECIFICATIONS****FASTENER SPECIFICATIONS****Single Use Non-Threaded Fasteners/Components**

NOTE: <i>All fasteners/components listed in this table MUST BE DISCARDED and replaced with NEW after removal.</i>	
Application	
Luggage Shade Pivot	
Windshield Garnish Molding Tether Clip	

Reusable Threaded Fastener Tightening Specifications

NOTE: <i>All fasteners listed in this table can be reused after removal.</i>	
Application	Specification
	Metric (English)
Cargo Tie Down Hook Fastener	9 N.m (80 lb in)
Front Side Door Armrest Bracket Bolt	25 N.m (22 lb in)
Front Side Door Armrest Switch Mount Plate Fastener	25 N.m (22 lb in)
Front Side Door Trim Fastener	25 N.m (22 lb in)
Rear Side Door Accessory Switch Mount Plate Fastener	25 N.m (22 lb in)
Rear Side Door Armrest Bracket Bolt	25 N.m (22 lb in)
Rear Side Door Inside Handle Fastener	25 N.m (22 lb in)
Rear Side Door Pull Handle Fastener	25 N.m (22 lb in)
Roof Rail Assist Handle Fastener	25 N.m (22 lb in)
Roof Rail Front Stowage Compartment Fastener	6 N.m (53 lb in)
Roof Rail Rear Assist Handle Fastener	6 N.m (53 lb in)
Sunshade Fastener	2.5 N.m (22 lb in)
Sunshade Support Fastener	25 N.m (22 lb in)

REPAIR INSTRUCTIONS**REAR SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT (BUICK)**

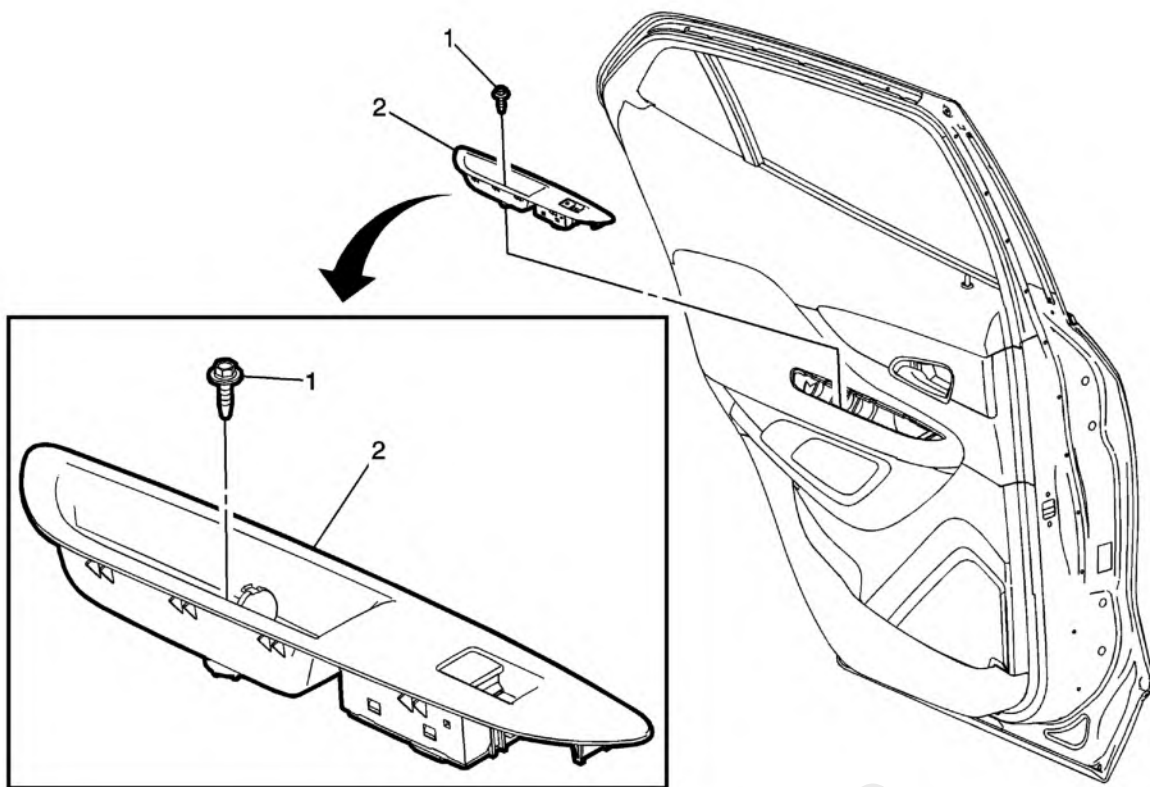


Fig. 1: Rear Side Door Accessory Switch Mount Plate (Encore)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Accessory Switch Mount Plate Fastener CAUTION: Refer to Fastener Caution . Procedure Use a flat-bladed tool to open the rear side door trim integral cap to access the fastener. Tighten 2.5 N.m (22 lb in)
2	Rear Side Door Accessory Switch Mount Plate Assembly Procedure 1. Use a flat-bladed plastic trim tool in order to release the rear side door accessory switch mount plate from the door trim assembly. 2. Disconnect the electrical connector, if equipped.

REAR SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT (CHEVROLET)

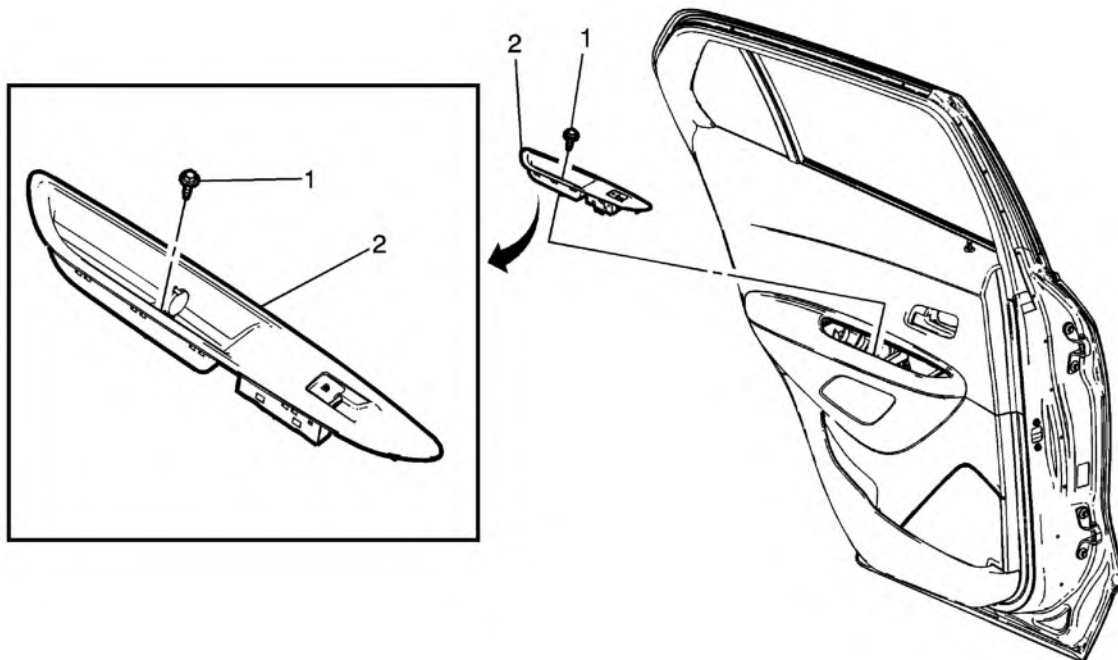


Fig. 2: Rear Side Door Accessory Switch Mount Plate (Trax)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Accessory Switch Mount Plate Fastener CAUTION: Refer to Fastener Caution . Procedure Use a flat-bladed tool to open the rear side door trim integral cap to access the fastener.
2	Rear Side Door Accessory Switch Mount Plate Assembly Procedure 1. Starting from the front portion of the switch mount plate, use a flat-bladed plastic trim tool in order to release the rear side door accessory switch mount plate from the door trim assembly. 2. Disconnect the electrical connector, if equipped. 3. Transfer parts as necessary.

FRONT SIDE DOOR ARMREST SWITCH MOUNT PLATE REPLACEMENT (DRIVER SIDE DOOR, BUICK)

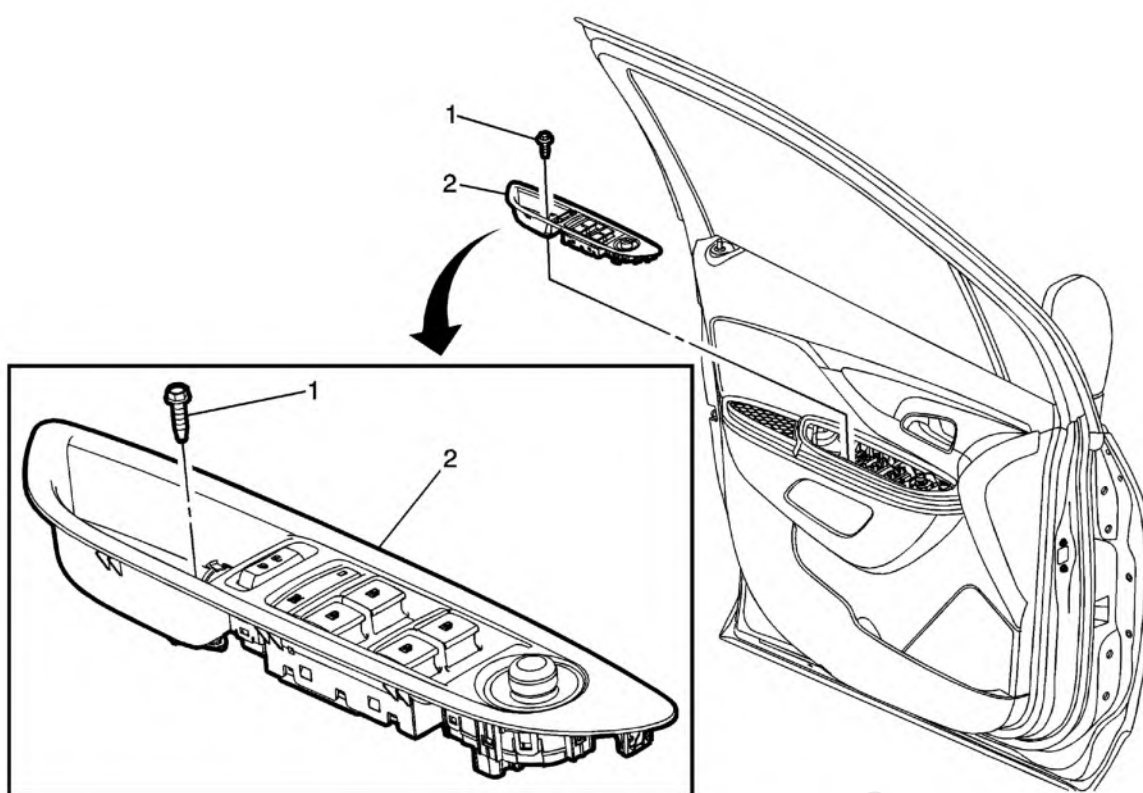


Fig. 3: Front Side Door Armrest Switch Mount Plate - Driver Side Door (Encore).

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Armrest Switch Mount Plate Fastener CAUTION: Refer to Fastener Caution . Procedure Use a small flat-bladed tool to open the front side door trim integral cap to access the fastener. Tighten 2.5 N.m (22 lb in)
2	Front Side Door Armrest Switch Mount Plate Assembly - Driver Side Door Procedure 1. Use a flat-bladed plastic trim tool in order to release the front side door accessory switch mount plate from the door trim assembly. 2. Disconnect the electrical connector.

FRONT SIDE DOOR ARMREST SWITCH MOUNT PLATE REPLACEMENT (PASSENGER SIDE DOOR, BUICK)

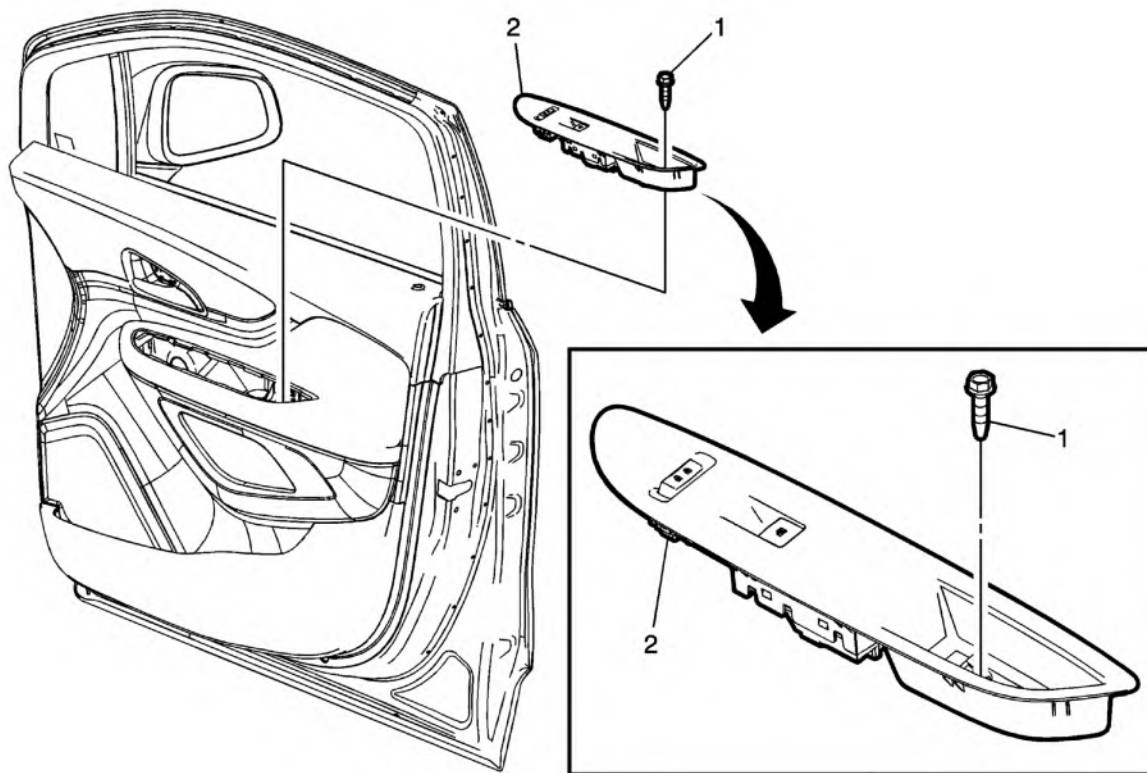


Fig. 4: Front Side Door Armrest Switch Mount Plate - Passenger Side Door (Encore).
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Trim Fastener CAUTION: Refer to Fastener Caution . Procedure Use a small flat-bladed tool to open the front side door trim integral cap to access the fastener. Tighten 2.5 N.m (22 lb in)
2	Front Side Door Armrest Switch Mount Plate Assembly - Passenger Side Door Procedure 1. Use the appropriate plastic trim tool to release the front side door armrest switch mount plate spring clips from the door trim panel. 2. Disconnect the electrical connector from the switch assembly. 3. Transfer parts as necessary.

FRONT SIDE DOOR ARMREST SWITCH MOUNT PLATE REPLACEMENT (DRIVER SIDE DOOR, CHEVROLET)

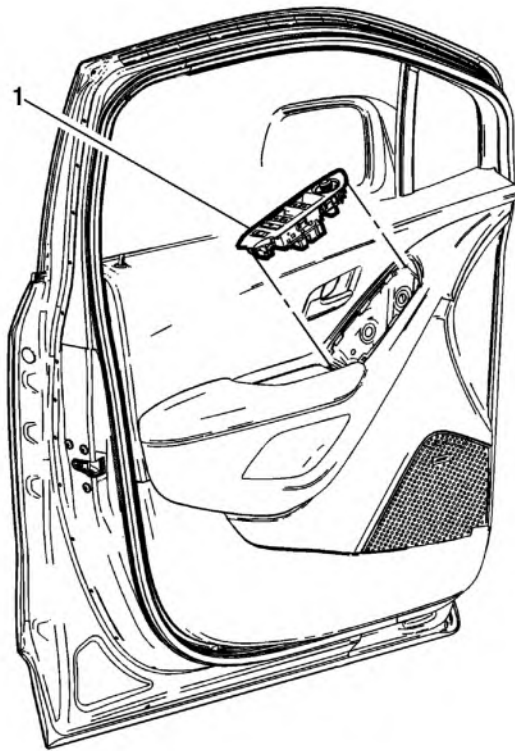


Fig. 5: Front Side Door Armrest Switch Mount Plate - Driver Side Door (Trax).
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
	Front Side Door Armrest Switch Mount Plate Assembly - Driver Side Door
1	Procedure 1. Starting from the bottom of the switch mount plate, use the appropriate plastic trim tool to release the front side door armrest switch mount plate spring clips from the door trim panel. Once the integral retainers are released, pull downward to disengage the integral plastic hook feature retaining the switch mount plate to the door trim panel. 2. Disconnect the electrical connectors from the switch assemblies. 3. Transfer parts as necessary.

FRONT SIDE DOOR ARMREST SWITCH MOUNT PLATE REPLACEMENT (PASSENGER SIDE DOOR, CHEVROLET)

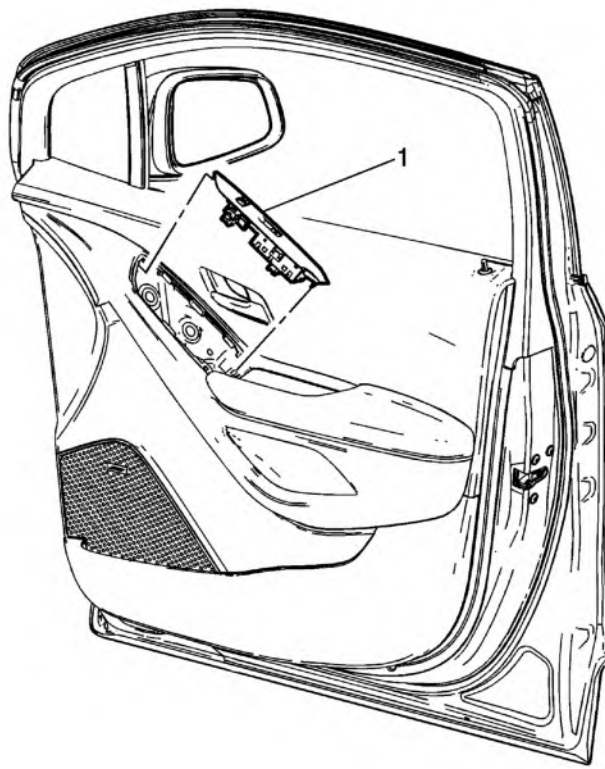


Fig. 6: Front Side Door Armrest Switch Mount Plate - Passenger Side Door (Trax).
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Armrest Switch Mount Plate Assembly - Passenger Side Door Procedure 1. Starting from the bottom of the switch mount plate, use the appropriate plastic trim tool to release the front side door armrest switch mount plate spring clips from the door trim panel. Once the integral retainers are released, pull downward to disengage the integral plastic hook feature retaining the switch mount plate to the door trim panel. 2. Disconnect the electrical connector from the switch assembly. 3. Transfer parts as necessary.

REAR SIDE DOOR ARMREST PULL CUP BRACKET REPLACEMENT

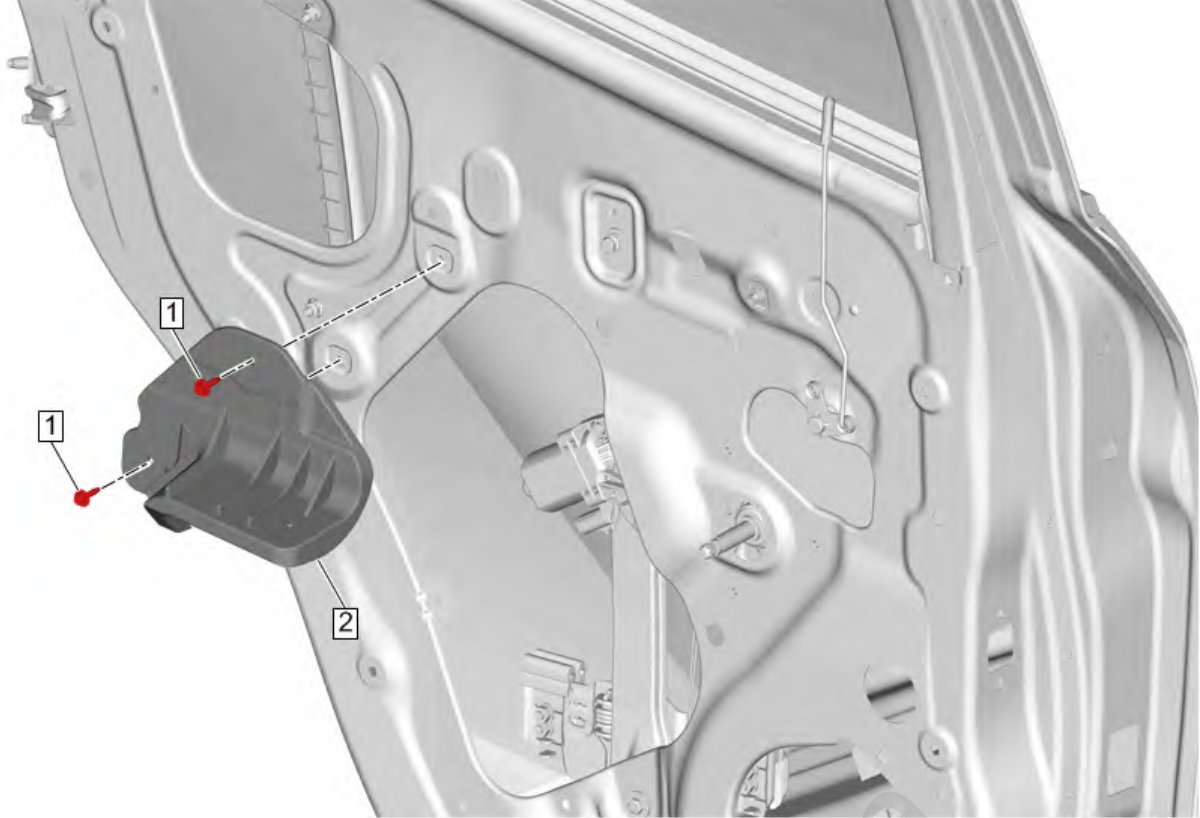


Fig. 7: Rear Side Door Armrest Pull Cup Bracket
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Side Door Trim Replacement</u>	
1	Rear Side Door Armrest Bracket Bolt (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Rear Side Door Armrest Pull Cup Bracket

FRONT SIDE DOOR TRIM REPLACEMENT (BUICK)

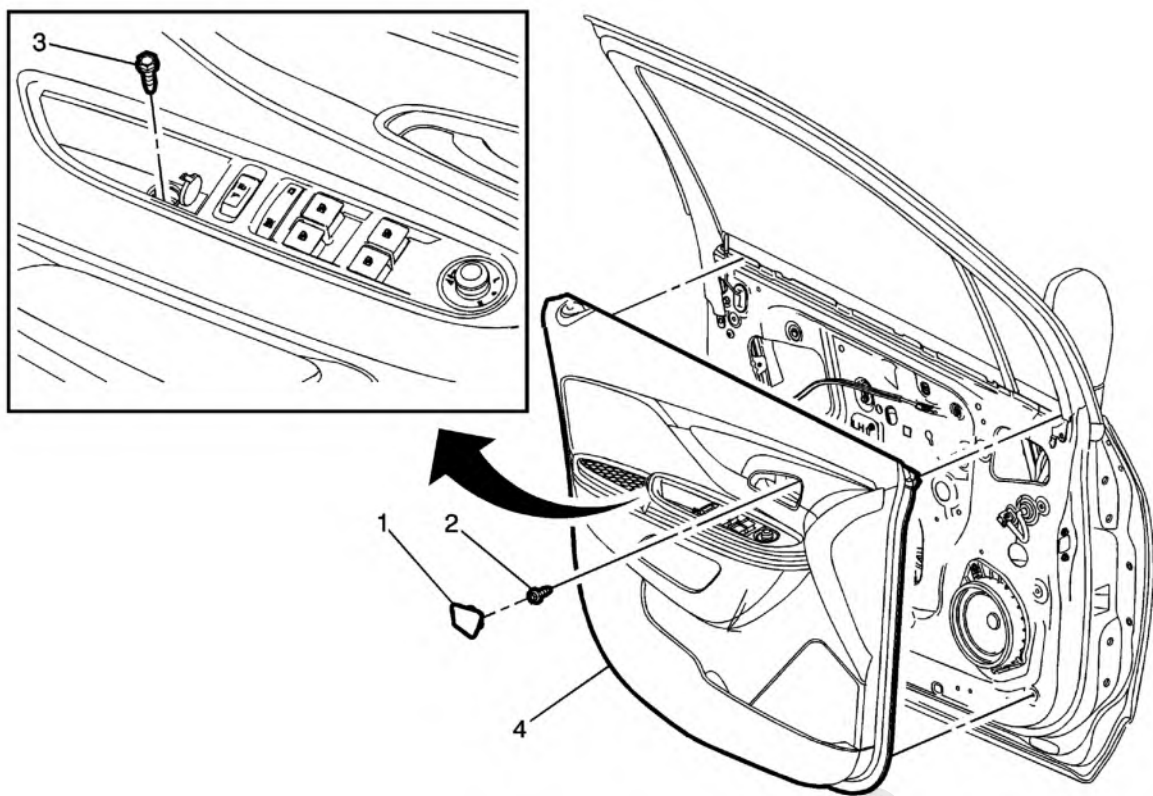


Fig. 8: Front Side Door Trim (Encore)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Inside Handle Bolt Finish Cap Procedure Pull the handle back to remove the cap. Use a suitable tool to unsnap.
2	Front Side Door Inside Handle Fastener CAUTION: Refer to Fastener Caution .
3	Front Side Door Trim Fastener Procedure Use a small flat-bladed tool to open the front side door trim integral cap to access the fastener.
4	Front Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

FRONT SIDE DOOR TRIM REPLACEMENT (CHEVROLET)

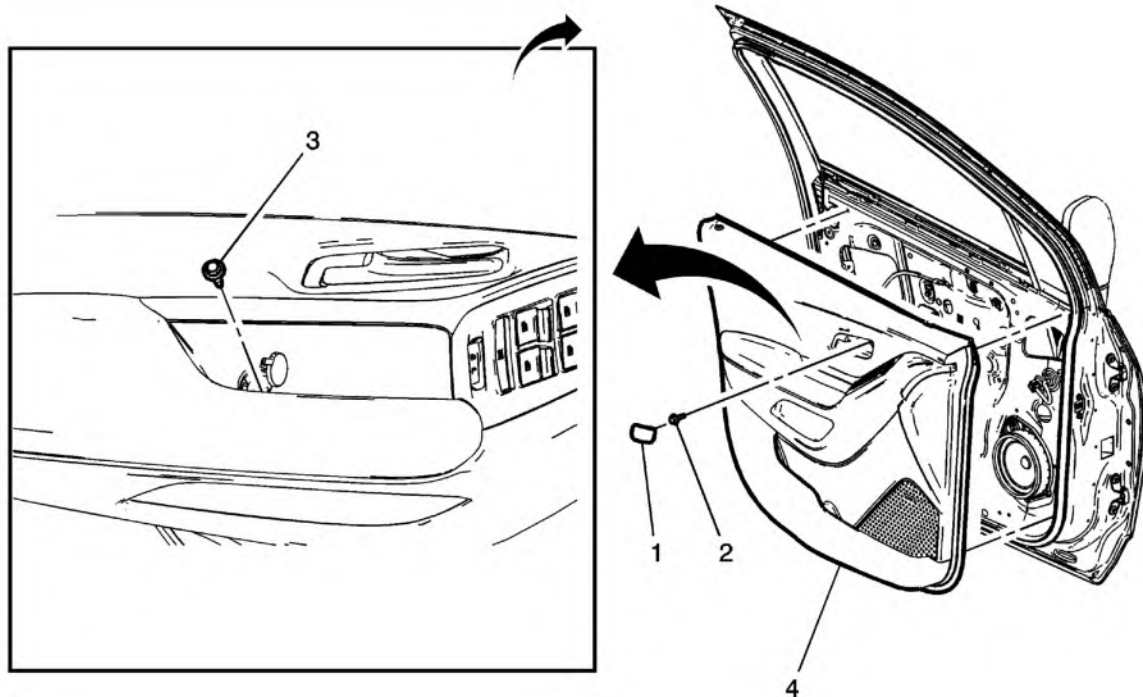


Fig. 9: Front Side Door Trim (Trax)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Inside Handle Bolt Finish Cap Procedure Pull the handle back to remove the cap. Use a suitable tool to unsnap.
2	Front Side Door Inside Handle Fastener CAUTION: Refer to Fastener Caution .
3	Front Side Door Trim Fastener Procedure Use a small flat-bladed tool to open the front side door trim integral cap to access the fastener.
4	Front Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

FRONT SIDE DOOR WATER DEFLECTOR REPLACEMENT

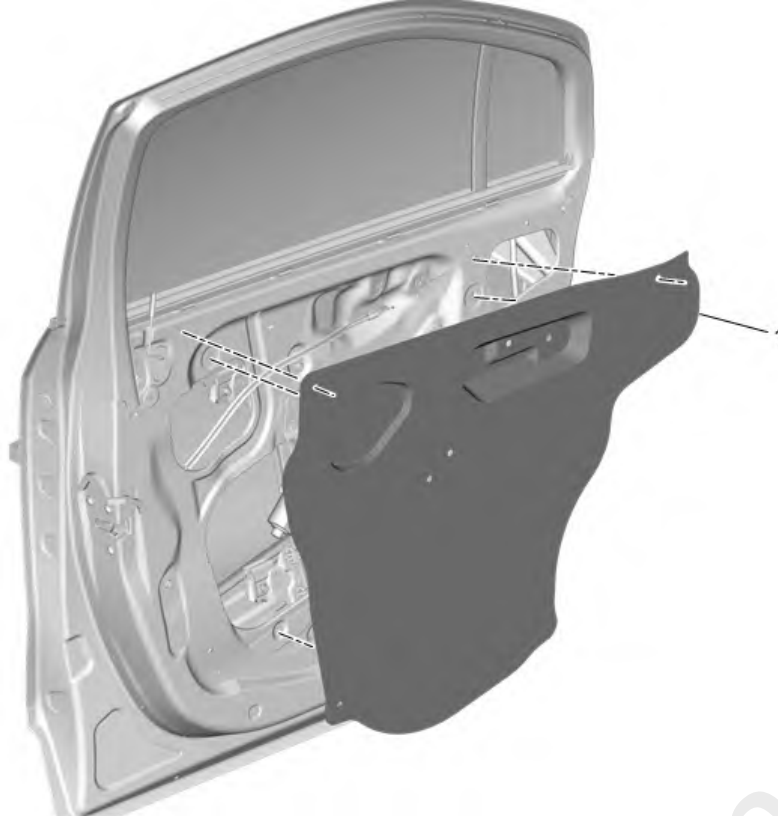


Fig. 10: Front Side Door Water Deflector
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
<u>Front Side Door Armrest Bracket Replacement</u>	
1	Front Side Door Water Deflector

REAR SIDE DOOR WATER DEFLECTOR REPLACEMENT

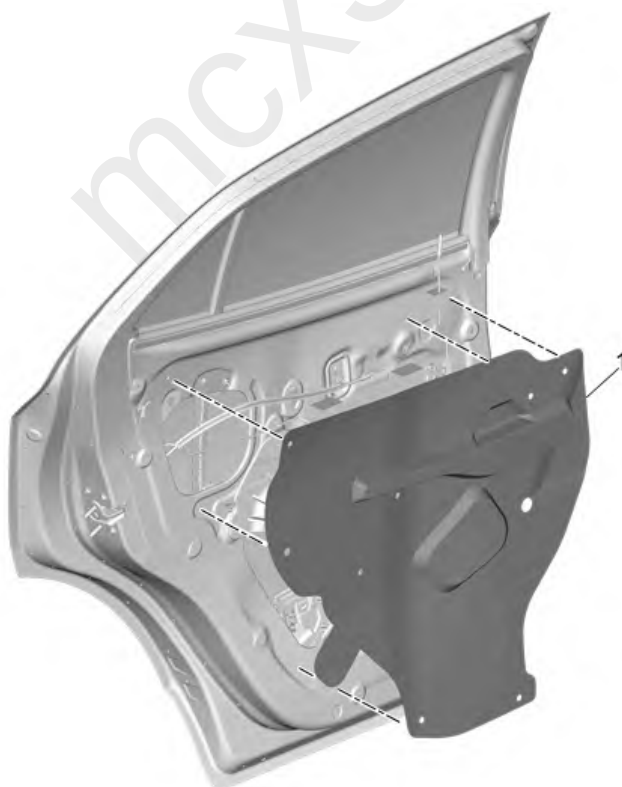


Fig. 11: Rear Side Door Water Deflector
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

Callout	Component Name
Preliminary Procedure	
<u>Rear Side Door Armrest Pull Cup Bracket Replacement</u>	
1	Rear Side Door Water Deflector

REAR SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT (BUICK)

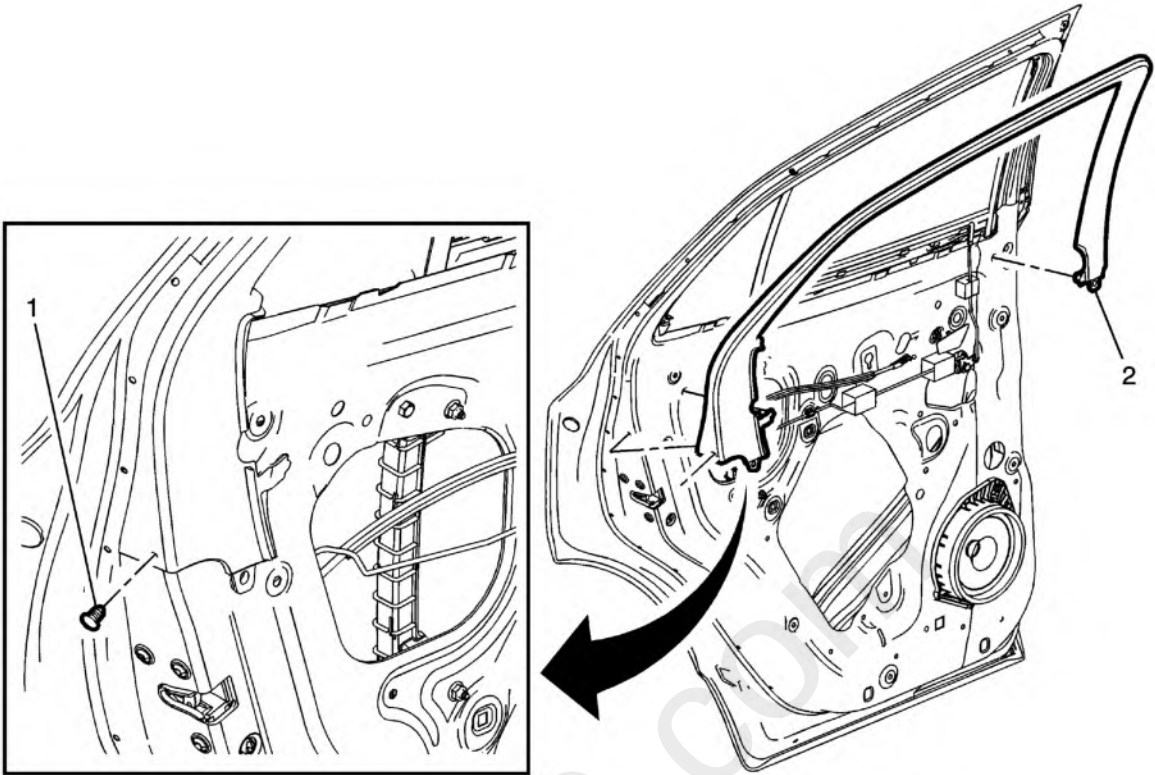


Fig. 12: Rear Side Door Window Garnish Molding (Encore).
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
Remove the rear side door trim. Refer to <u>Rear Side Door Trim Replacement</u> .	
1	Rear Side Door Window Garnish Molding Retainer Procedure Use a door trim panel removal tool or equivalent to aid in the removal of the retainer.
2	Rear Side Door Window Garnish Molding Assembly Procedure Pull outward starting at the front and moving slowly rearward to release the integral tabs from the rear side door inner panel.

REAR SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT (CHEVROLET)

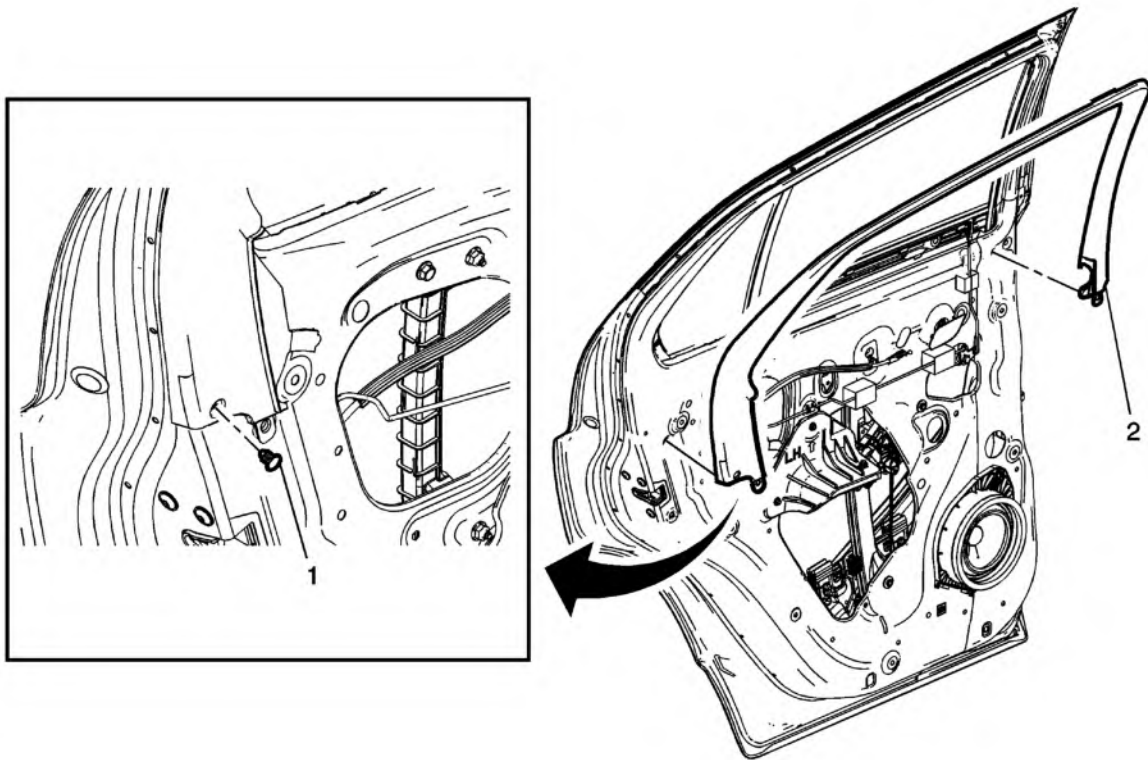


Fig. 13: Rear Side Door Window Garnish Molding.(Trax).

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear side door trim. Refer to Rear Side Door Trim Replacement .	
1	Rear Side Door Window Garnish Molding Retainer Procedure Use a door trim panel removal tool or equivalent to aid in the removal of the retainer.
2	Rear Side Door Window Garnish Molding Assembly Procedure Pull outward starting at the front and moving slowly rearward to release the integral tabs from the rear side door inner panel.

FRONT SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT

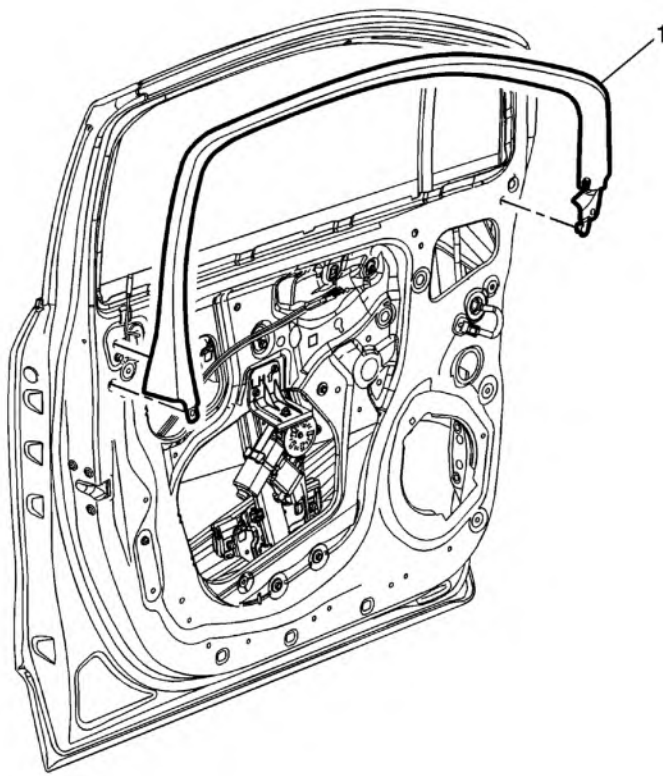


Fig. 14: Front Side Door Window Garnish Molding
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to Front Side Door Trim Replacement (Buick) Front Side Door Trim Replacement (Chevrolet) .	
1	Front Side Door Window Garnish Molding Assembly Procedure Pull outward starting at the front and moving slowly rearward to release the integral tabs from the front side door inner panel.

FRONT SIDE DOOR ARMREST BRACKET REPLACEMENT

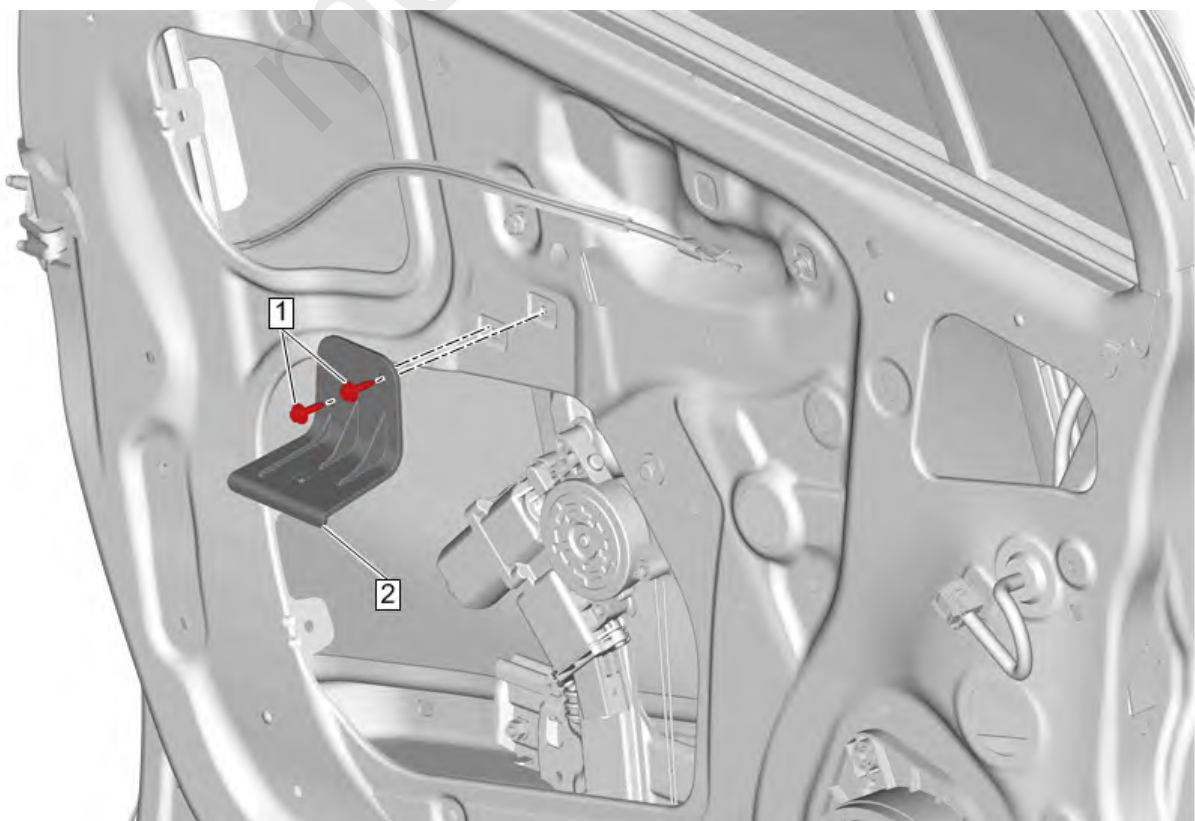


Fig. 15: Front Side Door Armrest Bracket
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Front Side Door Trim Replacement (Buick)</u> <u>Front Side Door Trim Replacement (Chevrolet)</u>	
1	Front Side Door Armrest Bracket Bolt (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Front Side Door Armrest Bracket

ROOF RAIL FRONT STOWAGE COMPARTMENT REPLACEMENT (BUICK)

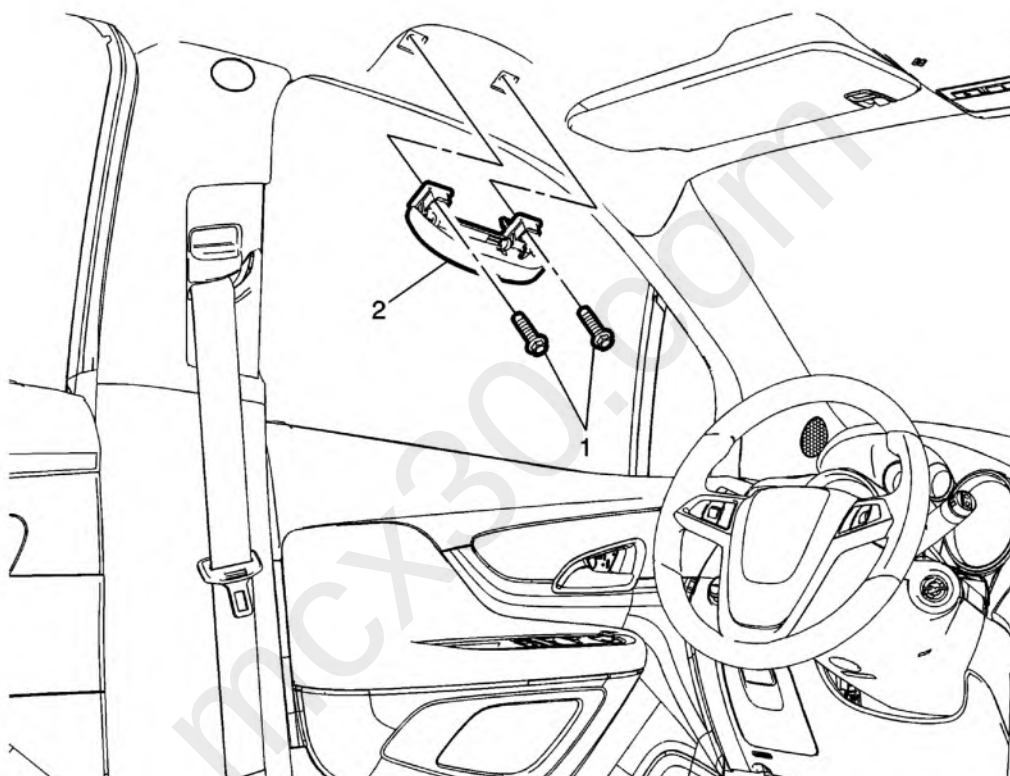


Fig. 16: Roof Rail Front Stowage Compartment
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Front Stowage Compartment Fastener (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to release the cover to access the fastener. Tighten 6 N.m (53 lb in)
2	Roof Rail Front Stowage Compartment Assembly

ROOF RAIL FRONT STOWAGE COMPARTMENT REPLACEMENT (CHEVROLET)

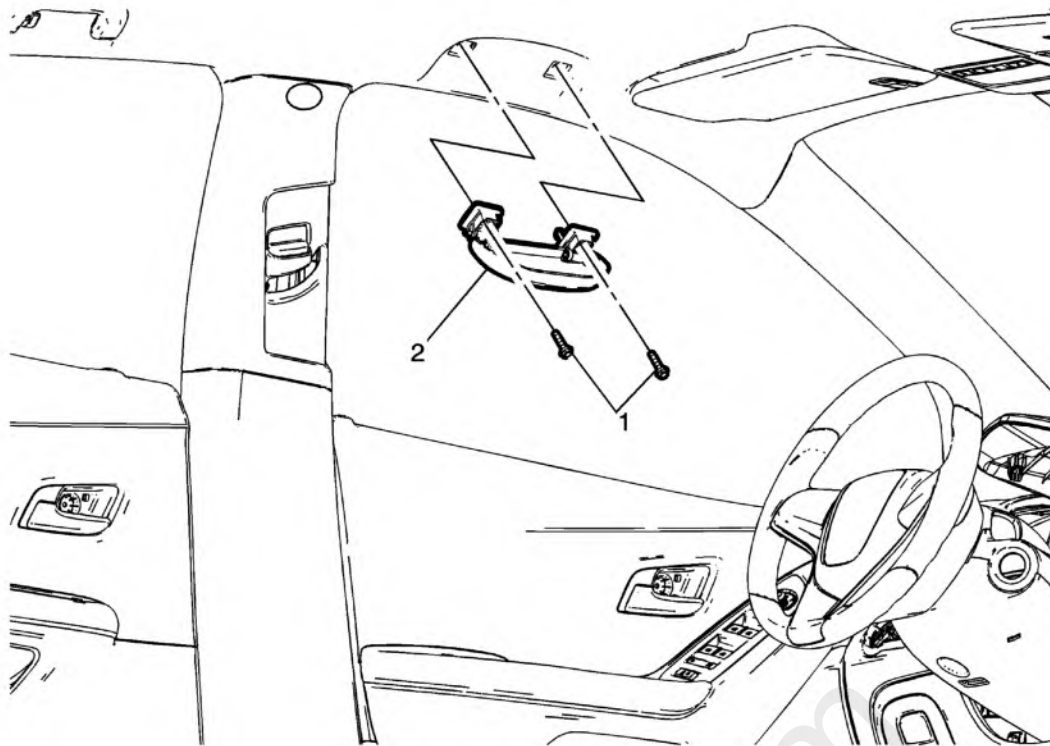


Fig. 17: Roof Rail Front Stowage Compartment
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Front Stowage Compartment Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to release the cover to access the fastener. Tighten 6 N.m (53 lb in)
2	Roof Rail Front Stowage Compartment Assembly

ROOF RAIL ASSIST HANDLE REPLACEMENT (BUICK)

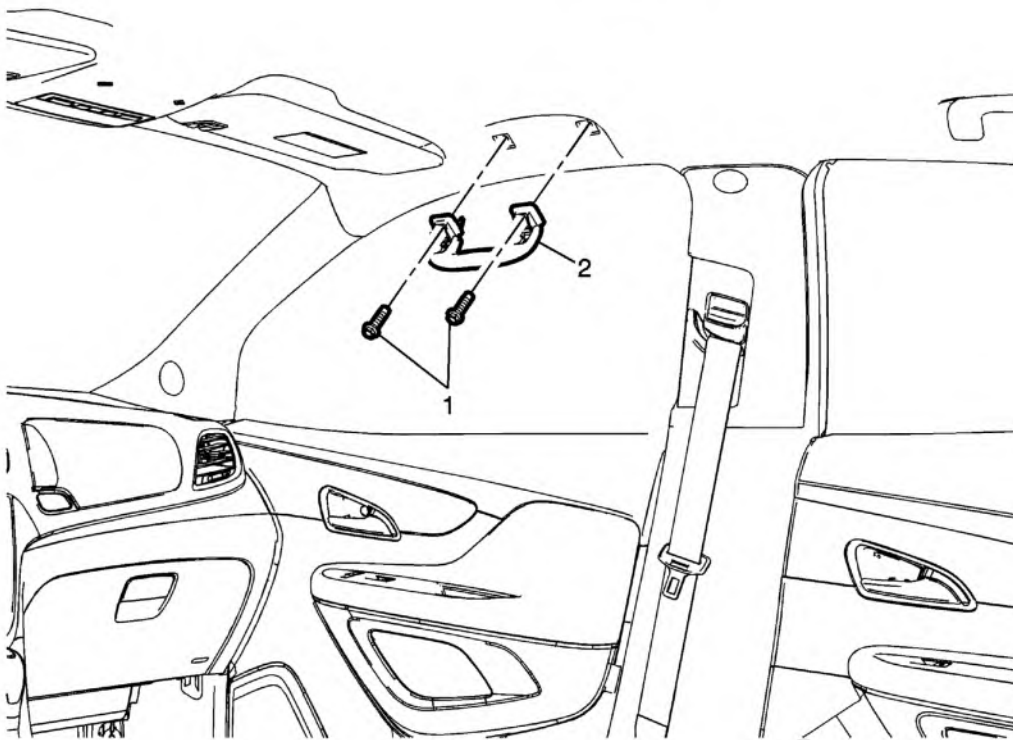


Fig. 18: Roof Rail Assist Handle Assembly
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N.m (53 lb in)
2	Roof Rail Assist Handle Assembly

ROOF RAIL ASSIST HANDLE REPLACEMENT (CHEVROLET)

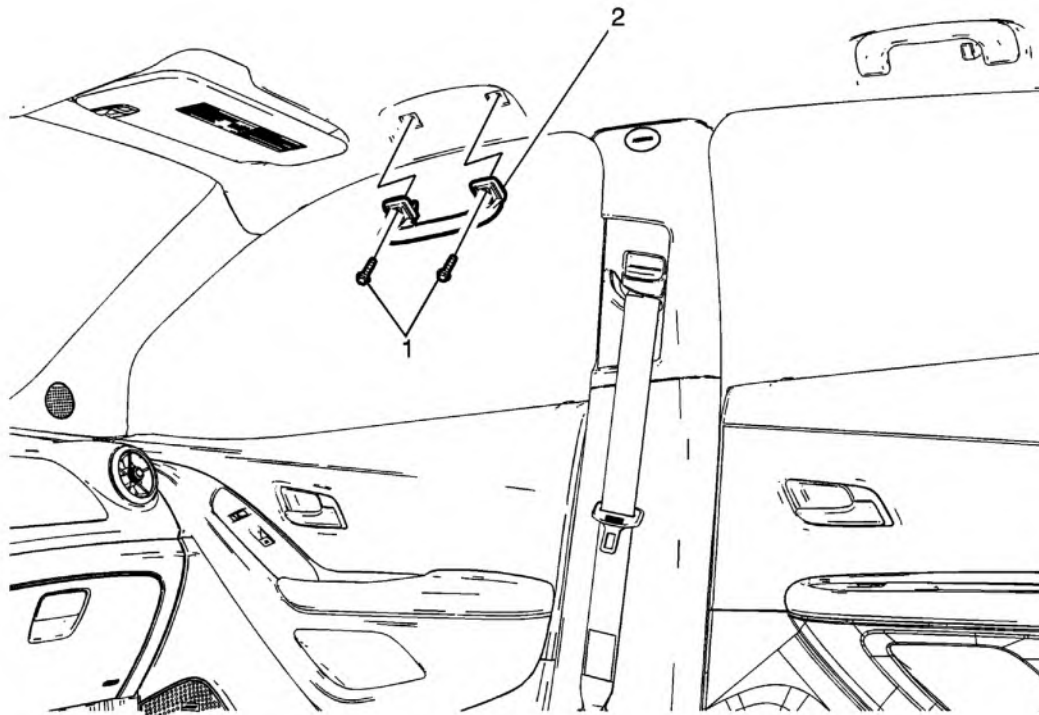


Fig. 19: Roof Rail Assist Handle Assembly
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N.m (53 lb in)
2	Roof Rail Assist Handle Assembly

ROOF RAIL REAR ASSIST HANDLE REPLACEMENT (BUICK)

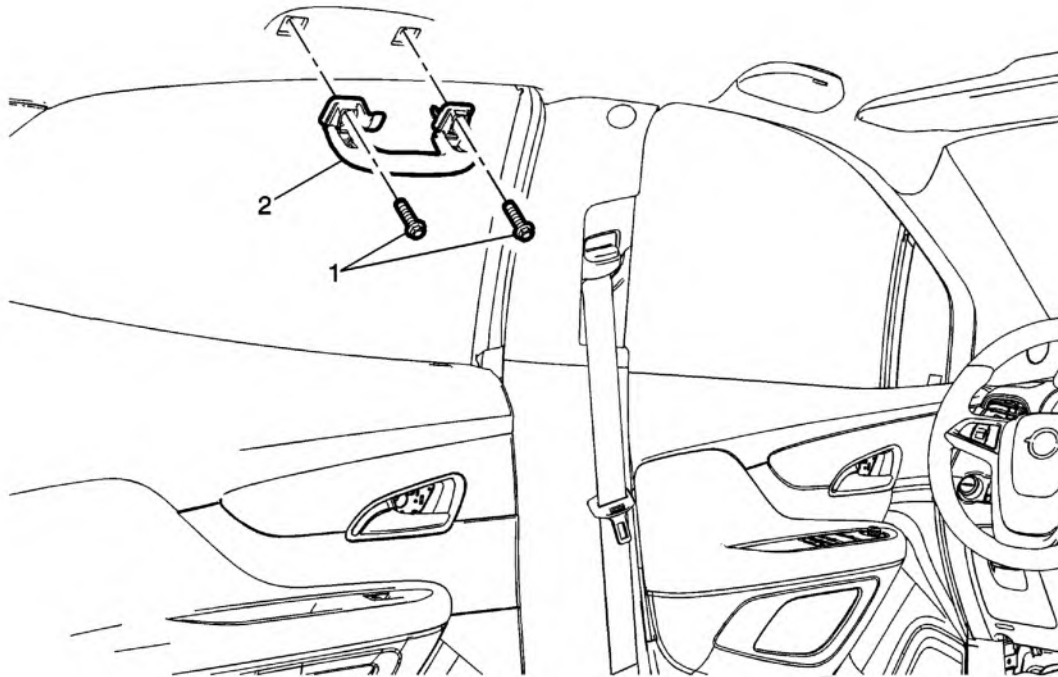


Fig. 20: Roof Rail Rear Assist Handle Assembly.
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Rear Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N.m (53 lb in)
2	Roof Rail Rear Assist Handle Assembly

ROOF RAIL REAR ASSIST HANDLE REPLACEMENT (CHEVROLET)

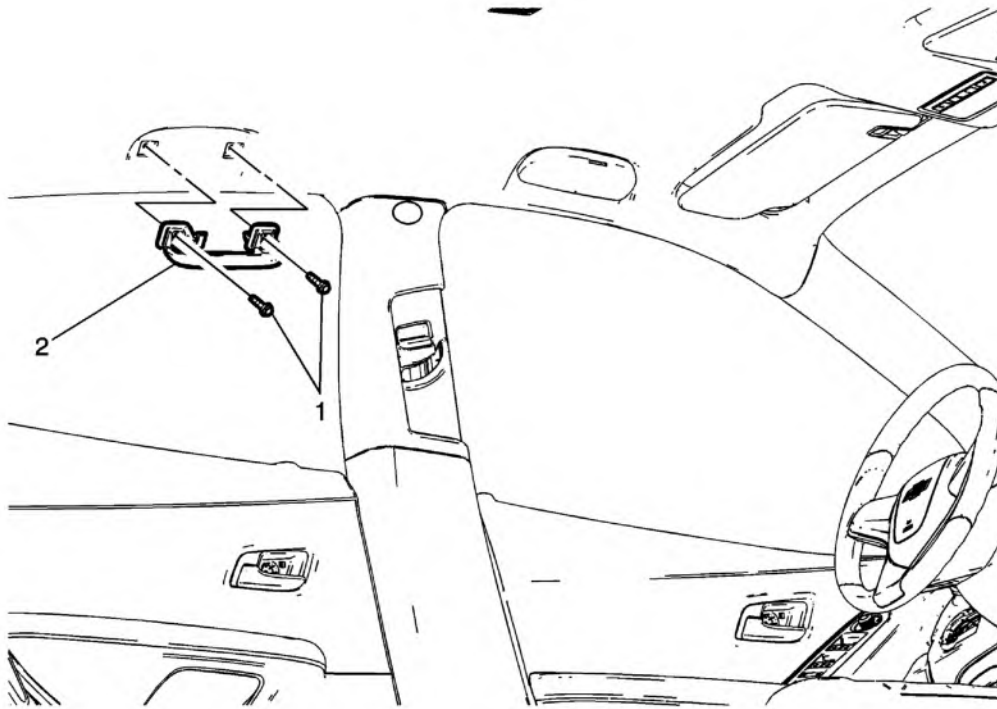


Fig. 21: Roof Rail Rear Assist Handle Assembly.
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Rear Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N.m (53 lb in)
2	Roof Rail Rear Assist Handle Assembly

SUNSHADE REPLACEMENT (BUICK)

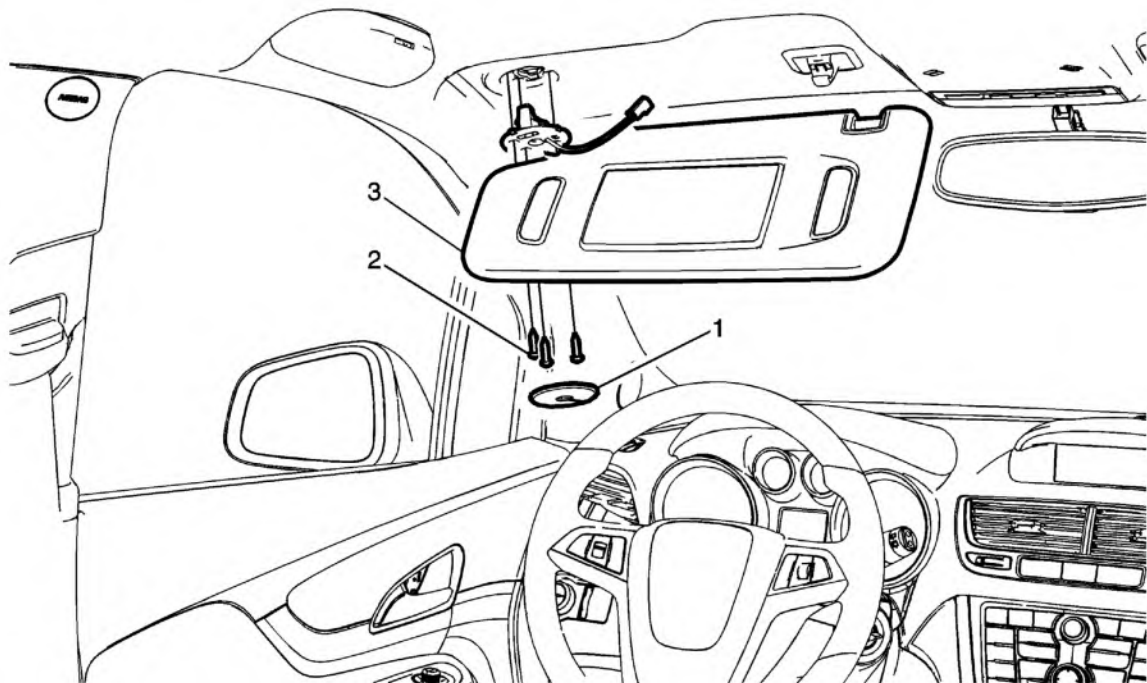


Fig. 22: Sunshade Assembly.

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Lower the front of the headliner to access the sunshade electrical connector, if necessary. Refer to Headlining Trim Panel Replacement (Without Sunroof, Buick) , Headlining Trim Panel Replacement (With Sunroof, Buick) .	
1	Sunshade Cover
2	Sunshade Fastener (Qty: 3) CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Sunshade Assembly Procedure 1. Squeeze the tabs at the base of the sunshade assembly to remove from the headliner. 2. Disconnect the electrical connector.

SUNSHADE REPLACEMENT (CHEVROLET)

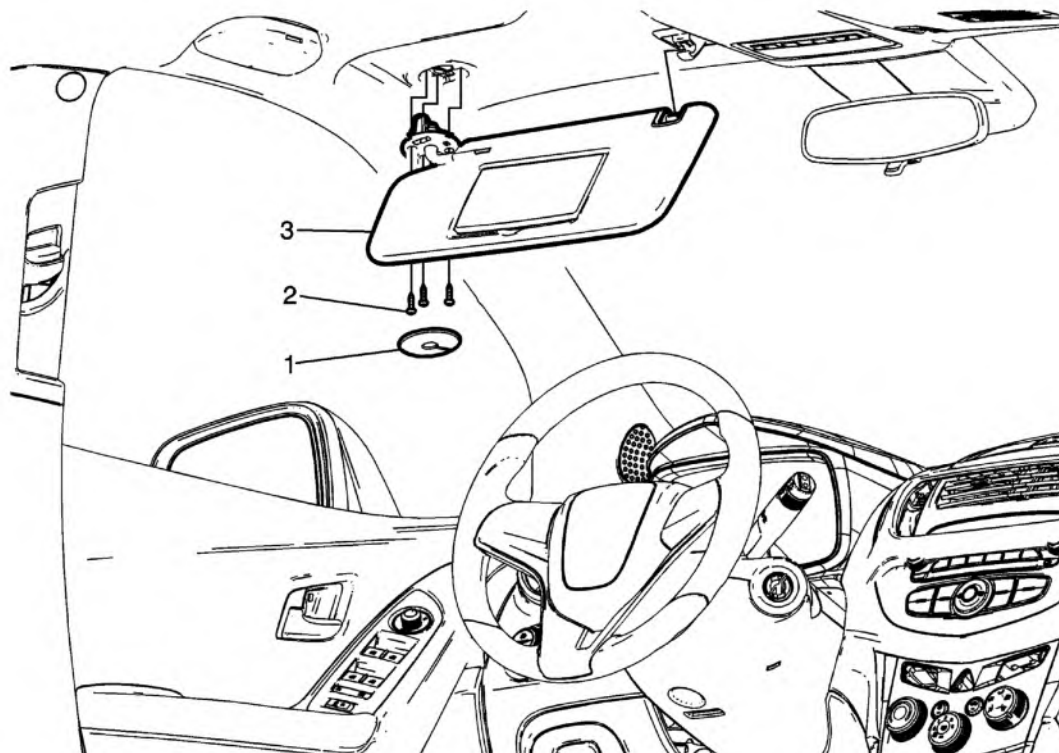


Fig. 23: Sunshade Assembly.

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Lower the front portion of the headliner to access the sunshade electrical connector and sunshade retainer. Refer to Headlining Trim Panel Replacement (With Sunroof, Chevrolet) Headlining Trim Panel Replacement (Without Sunroof, Chevrolet) .	
1	Sunshade Cover
2	Sunshade Fastener (Qty: 3) CAUTION: Refer to Fastener Caution .
3	Sunshade Assembly Procedure 1. Squeeze the tabs at the base of the sunshade assembly to detach it from the roof panel and allow the headliner with the sunshade attached to be lowered. 2. Disconnect the electrical connector.

SUNSHADE SUPPORT REPLACEMENT (BUICK)

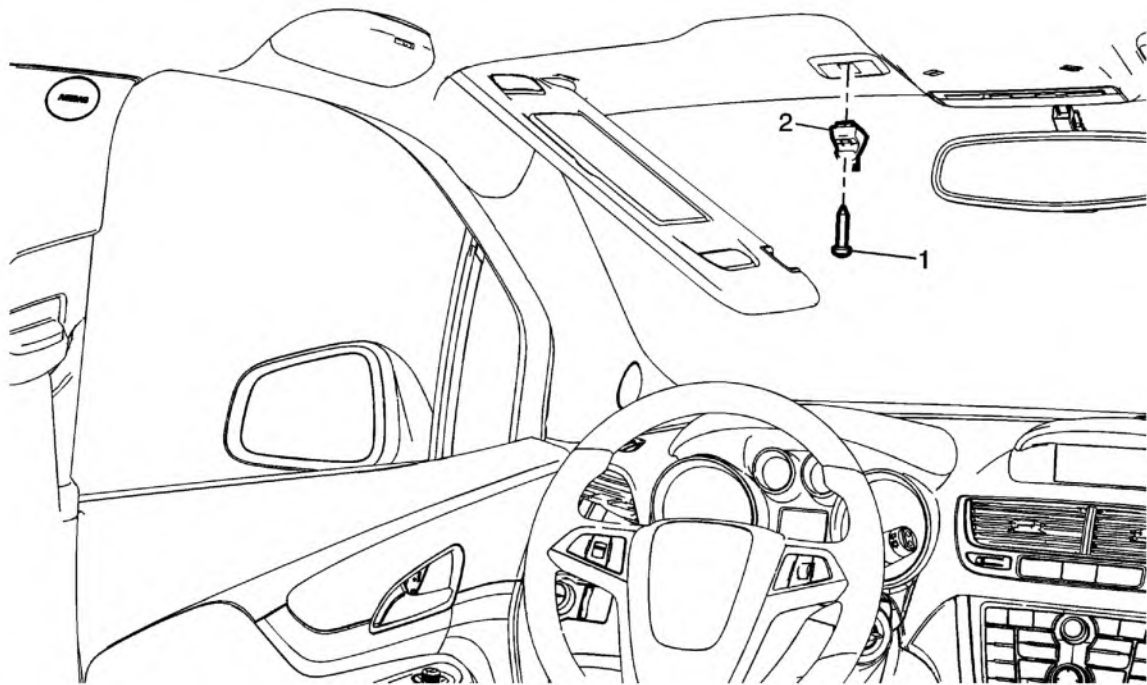


Fig. 24: Sunshade Support Assembly.
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Sunshade Support Fastener CAUTION: Refer to Fastener Caution . NOTE: Pull the cover downward to access the fastener. Tighten 2.5 N.m (22 lb in)
2	Sunshade Support Assembly Procedure Unclip the sunshade from the support and reposition.

SUNSHADE SUPPORT REPLACEMENT (CHEVROLET)

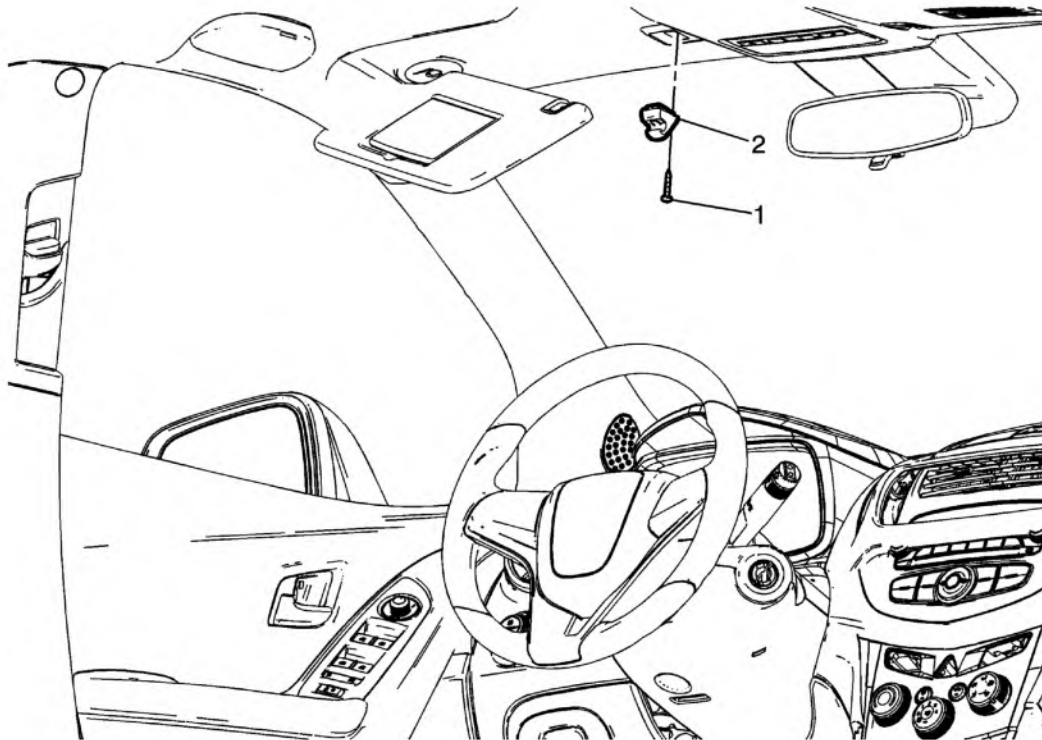


Fig. 25: Sunshade Support Assembly.
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Sunshade Support Fastener CAUTION: Refer to Fastener Caution . NOTE: Open the cover at the bottom and push upward to access the fastener. Tighten 2.5 N.m (22 lb in)
2	Sunshade Support Assembly Procedure Unclip the sunshade from the support and reposition.

WINDSHIELD GARNISH MOLDING REPLACEMENT (BUICK)

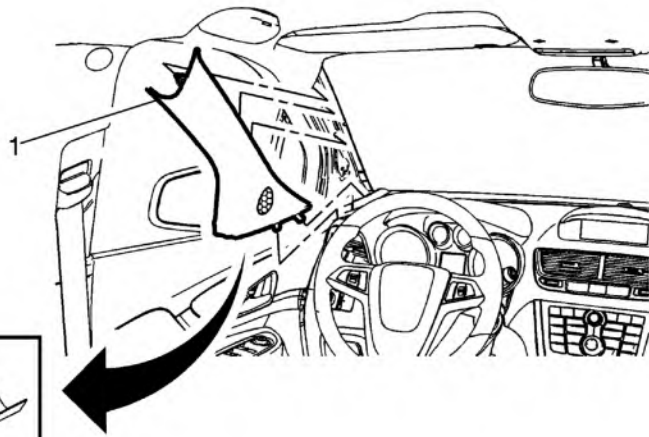
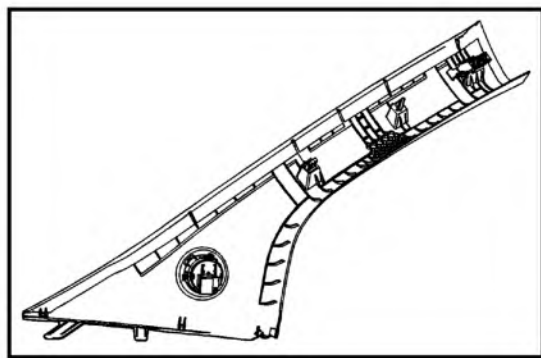


Fig. 26: Windshield Garnish Molding Assembly.
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Windshield Garnish Molding Assembly Procedure 1. Tabs must be installed prior to retainers. 2. Tabs to be fully seated in the instrument panel (I/P) trim panel retainer and valance panel. 3. Disconnect the electrical connector. 4. The tether clip at the upper portion of the garnish molding MUST be replaced every time the windshield side garnish molding is removed.

WINDSHIELD GARNISH MOLDING REPLACEMENT (CHEVROLET)

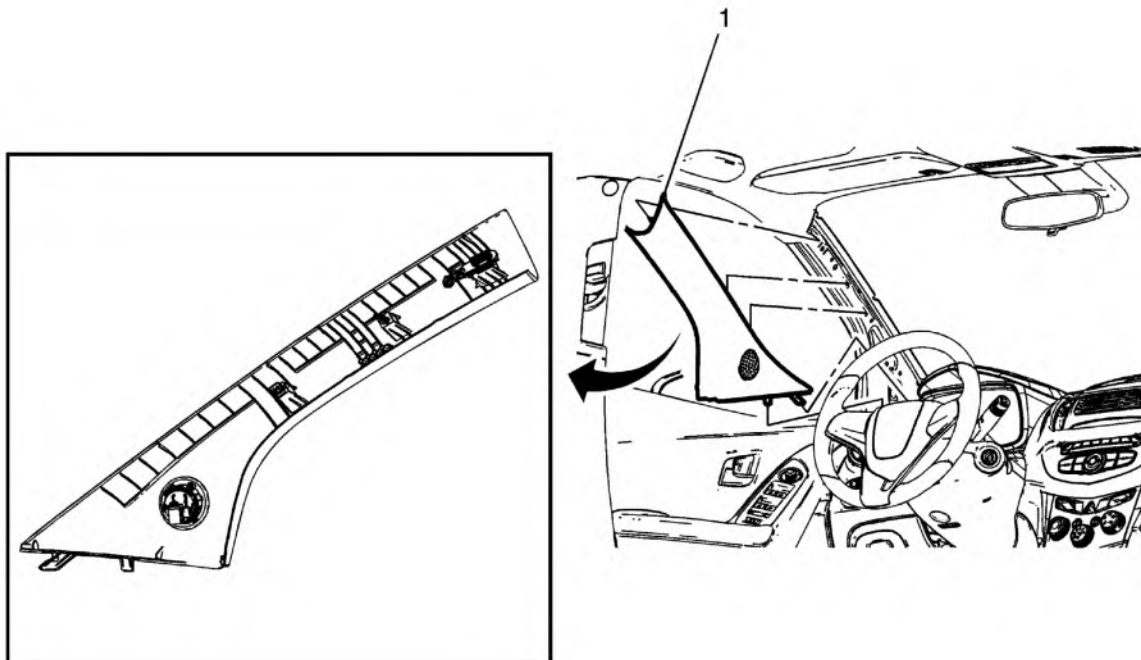


Fig. 27: Windshield Garnish Molding Assembly.
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Windshield Garnish Molding Assembly Procedure 1. Tabs must be installed prior to retainers. 2. Tabs to be fully seated in the instrument panel (I/P) trim panel retainer and valance panel. 3. Disconnect the electrical connector. 4. The tether clip at the upper portion of the garnish molding MUST be replaced every time the windshield side garnish molding is removed.

CENTER PILLAR UPPER TRIM PANEL REPLACEMENT (BUICK)

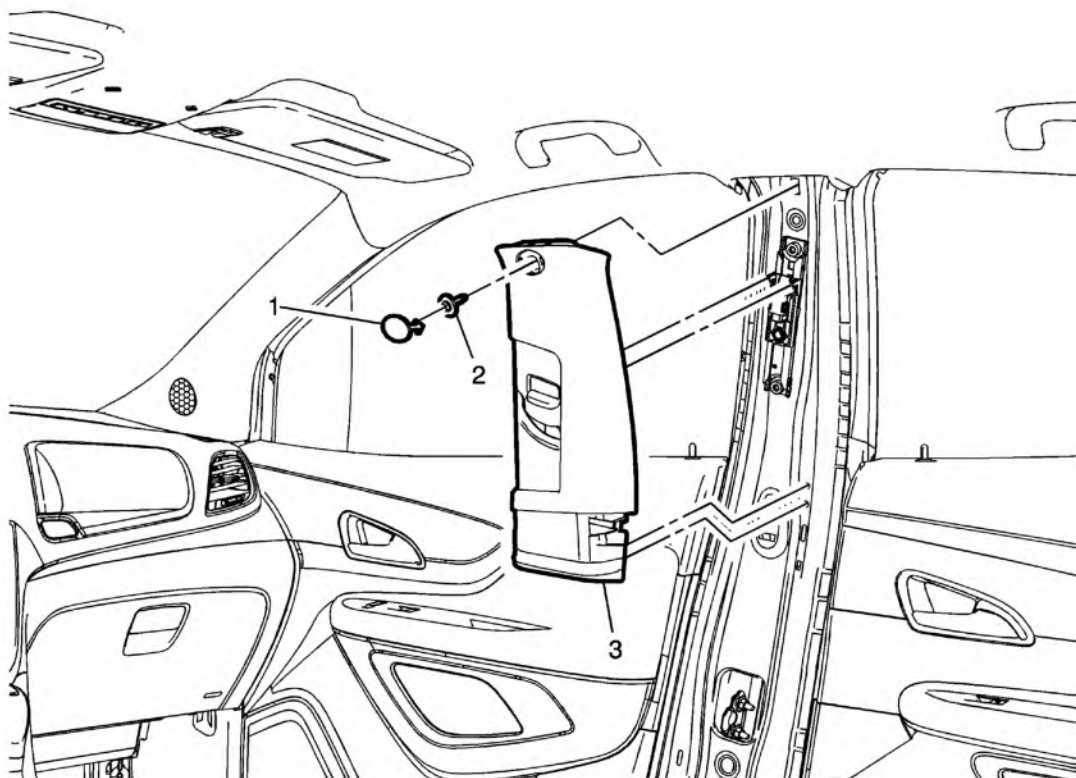


Fig. 28: Center Pillar Upper Trim Panel Assembly.
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Disable the roof rail SIR system. Refer to SIR Disabling and Enabling . 2. Remove the seat belt tensioner fastener and feed seat belt through center pillar upper trim panel. Refer to Front Seat Belt Anchor Plate Tensioner Replacement . 3. Remove the center pillar lower trim panel. Refer to Center Pillar Lower Trim Panel Replacement (Buick). 4. Move the driver or passenger seat to the full forward position.	
1	Center Pillar Upper Trim Panel Bolt Cap
2	Center Pillar Upper Trim Panel Fastener CAUTION: Refer to Fastener Caution .
3	Center Pillar Upper Trim Panel Assembly Procedure 1. Pull the trim panel toward the inside of the vehicle to disengage the retainers. 2. When replacing the center pillar upper trim panel, feed the seat belt through the panel. 3. Check the seat belt guide adjustment in both directions: • Lower direction: seat belt guide adjuster has to lock into place and can only unlock with the releasing device. • Upper direction: continuously adjustable without releasing device.

CENTER PILLAR UPPER TRIM PANEL REPLACEMENT (CHEVROLET)

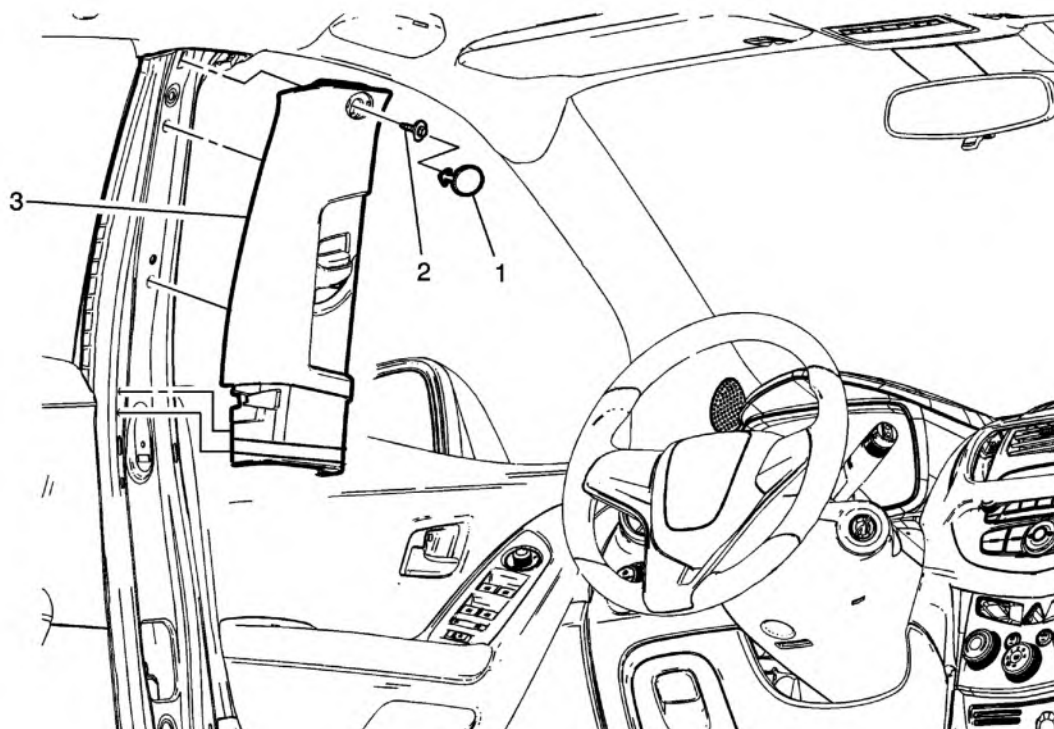


Fig. 29: Center Pillar Upper Trim Panel Assembly.
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Disable the roof rail SIR system. Refer to SIR Disabling and Enabling . 2. Remove the seat belt tensioner fastener and feed seat belt through center pillar upper trim panel. Refer to Front Seat Belt Anchor Plate Tensioner Replacement . 3. Remove the center pillar lower trim panel. Refer to Center Pillar Lower Trim Panel Replacement (Chevrolet). 4. Move the driver or passenger seat to the full forward position.	
1	Center Pillar Upper Trim Panel Bolt Cap
2	Center Pillar Upper Trim Panel Fastener CAUTION: Refer to Fastener Caution .
3	Center Pillar Upper Trim Panel Assembly Procedure 1. Pull the trim panel toward the inside of the vehicle to disengage the retainers. 2. When replacing the center pillar upper trim panel, feed the seat belt through the panel. 3. Check the seat belt guide adjustment in both directions: • Lower direction: seat belt guide adjuster has to lock into place and can only unlock with the releasing device. • Upper direction: continuously adjustable without releasing device.

CENTER PILLAR LOWER TRIM PANEL REPLACEMENT (BUICK)

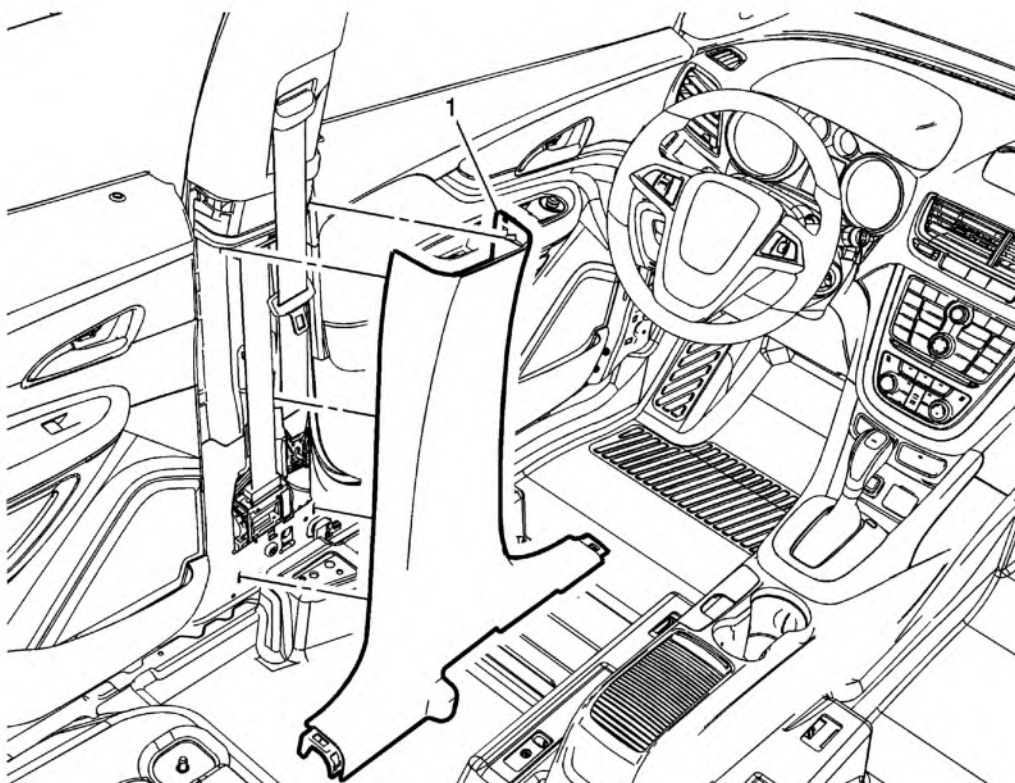


Fig. 30: Center Pillar Lower Trim Panel (Encore)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the floor auxiliary mat lower retainer. Refer to Floor Auxiliary Mat Lower Retainer Replacement (Buick) . 2. Remove the rear side door step mat retainer. Refer to Rear Side Door Step Mat Retainer Replacement . 3. Move seat to full forward position.	
1	Center Pillar Lower Trim Panel Assembly Procedure Ensure the seat belt webbing does not become trapped during installation.

CENTER PILLAR LOWER TRIM PANEL REPLACEMENT (CHEVROLET)

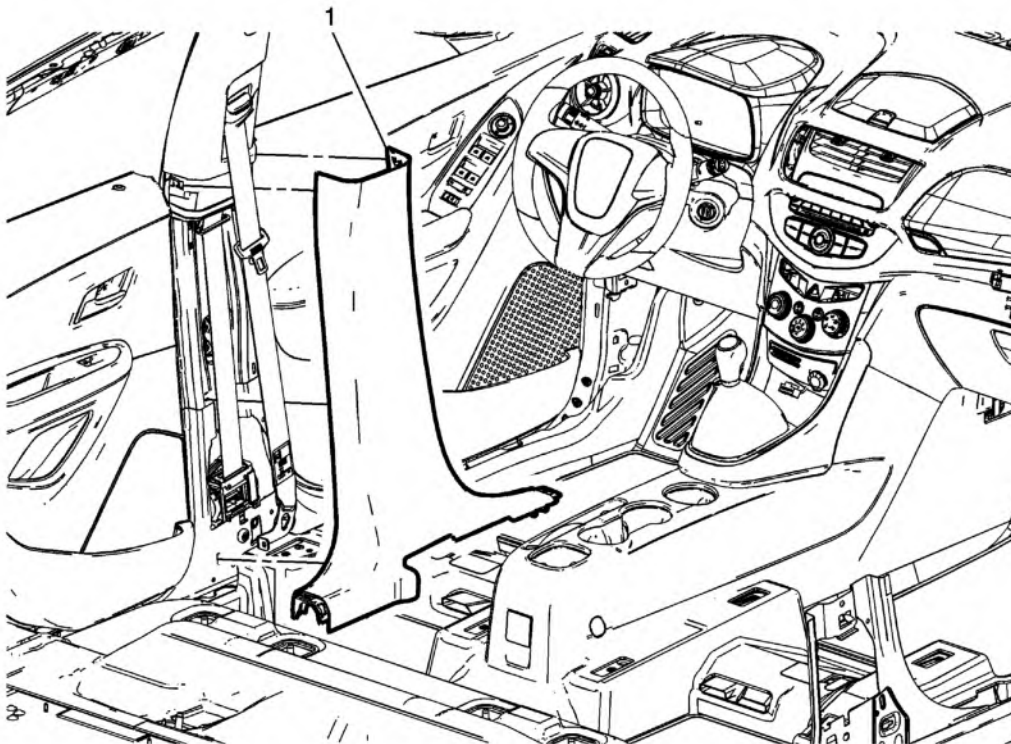


Fig. 31: Center Pillar Lower Trim Panel (Trax)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the floor auxiliary mat lower retainer. Refer to Floor Auxiliary Mat Lower Retainer Replacement (Chevrolet). 2. Remove the rear side door step mat retainer. Refer to Rear Side Door Step Mat Retainer Replacement. 3. Move seat to full forward position.	
1	Center Pillar Lower Trim Panel Assembly Procedure Ensure the seat belt webbing does not become trapped during installation.

BODY LOCK PILLAR UPPER TRIM PANEL REPLACEMENT

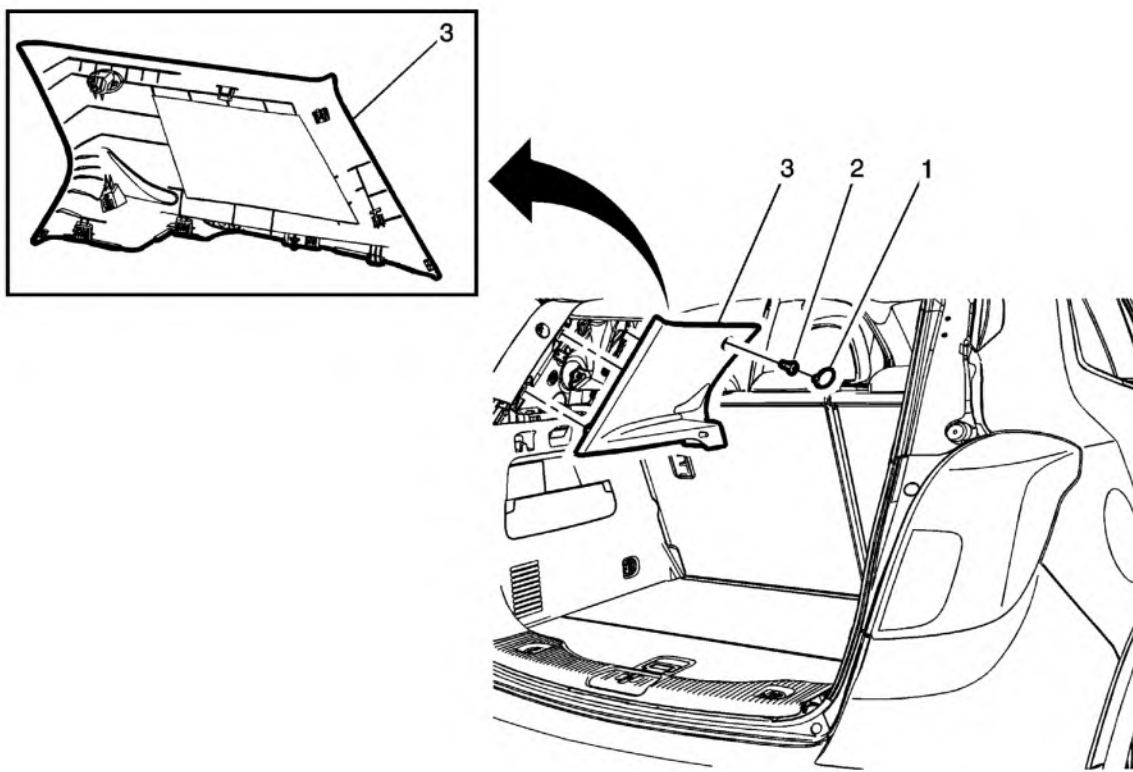


Fig. 32: Body Lock Pillar Upper Trim Panel
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the luggage shade. Refer to Luggage Shade Replacement (Buick)Luggage Shade Replacement (Chevrolet). 3. Remove the rear seat lower anchor plate bolt on the side of the trim panel being replaced.. Refer to Rear Seat Belt Retractor Replacement .	
1	Body Lock Pillar Upper Trim Panel Bolt Cap
2	Body Lock Pillar Upper Trim Panel Fastener CAUTION: Refer to Fastener Caution .
3	Body Lock Pillar Upper Trim Panel Assembly Procedure 1. Grasp the top of the upper trim panel and gently pull the panel away from the body to release the retainers. 2. Route the rear seat retractor side belt through the opening in the body lock pillar upper trim panel.

QUARTER LOWER REAR TRIM PANEL REPLACEMENT

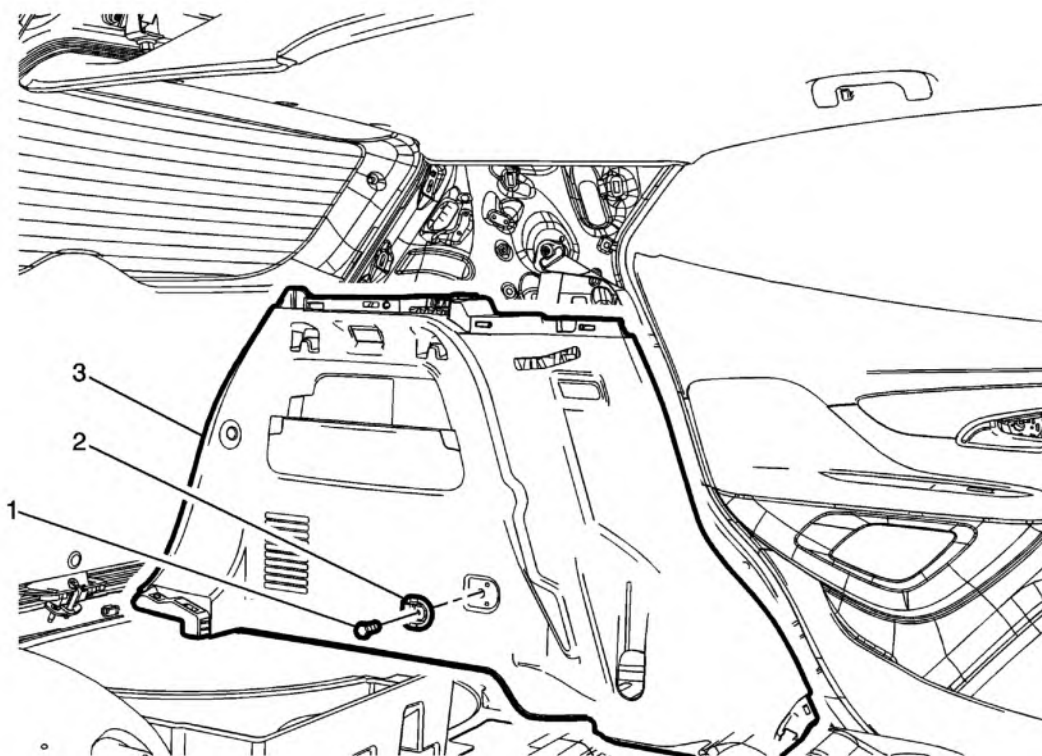


Fig. 33: Quarter Lower Rear Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the load floor front trim panel support. Refer to Load Floor Front Trim Panel Support Replacement (Buick)Load Floor Front Trim Panel Support Replacement (Chevrolet). 2. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement. 3. Remove the load floor panel rear extension panel. Refer to Load Floor Panel Rear Extension Panel Replacement (Buick)Load Floor Panel Rear Extension Panel Replacement (Chevrolet). 4. Remove the luggage shade. Refer to Luggage Shade Replacement (Buick)Luggage Shade Replacement (Chevrolet). 5. Remove the rear side door step mat retainer. Refer to Rear Side Door Step Mat Retainer Replacement. 6. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Removal and Installation (40%) Rear Seat Back Cushion Removal and Installation (60%).	
1	Cargo Tie Down Hook Fastener CAUTION: Refer to Fastener Caution . Tighten 9 N.m (80 lb in)
2	Cargo Tie Down Hook Assembly

Callout	Component Name
3	Quarter Lower Rear Trim Panel Assembly Procedure 1. Release the rear seat belt anchor bracket from the rear seat. 2. Use a flat-bladed plastic trim tool to release the quarter lower rear trim panel from the quarter inner panel. 3. Disconnect the electrical connectors.

QUARTER STOWAGE POCKET DOOR REPLACEMENT (LEFT SIDE)

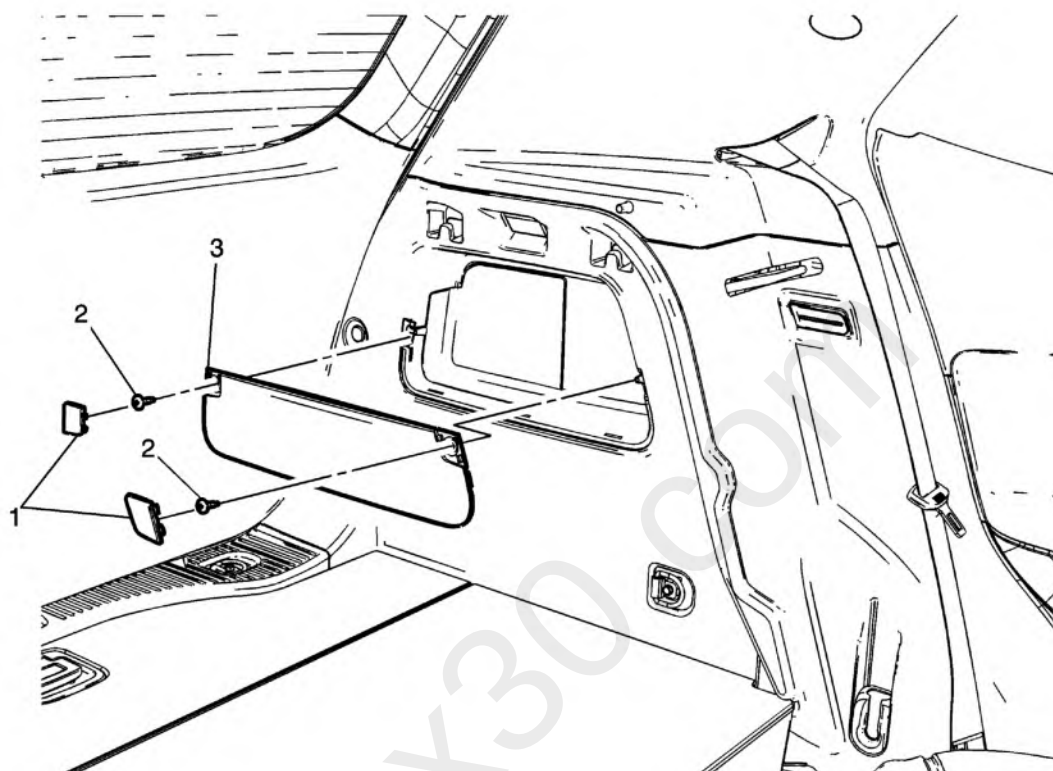


Fig. 34: Quarter Stowage Pocket Door - Left Side Outer
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Quarter Stowage Pocket Door Cap (Qty: 2)
2	Quarter Stowage Pocket Door Fastener (Qty: 2) CAUTION: Refer to Fastener Caution .
3	Quarter Stowage Pocket Door Assembly Left Side Outer Procedure Use a flat-bladed trim tool to aid in the removal of the quarter stowage pocket door left side from the quarter inner trim finish panel.

QUARTER STOWAGE POCKET DOOR REPLACEMENT (RIGHT SIDE)

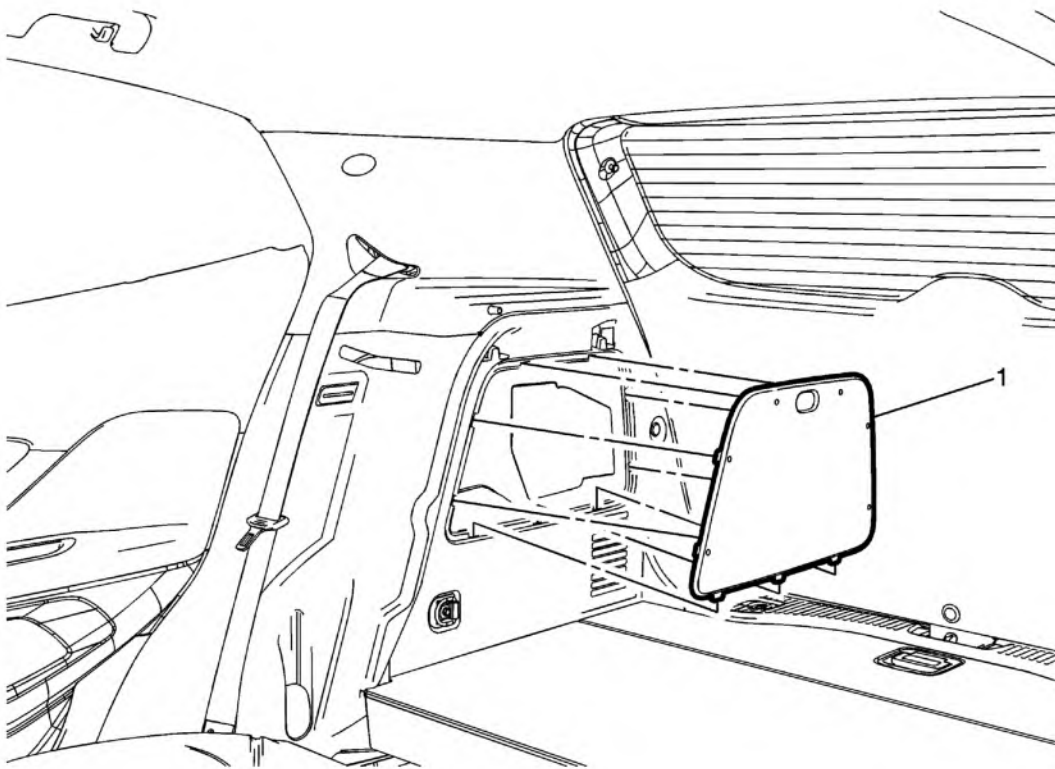


Fig. 35: Quarter Stowage Pocket Door - Right Side Outer
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Quarter Stowage Pocket Door Assembly Right Side Procedure Use a flat-bladed trim tool to aid in the removal of the quarter stowage pocket door from the quarter inner trim finish panel right side.

TOOL STOWAGE COMPARTMENT REPLACEMENT

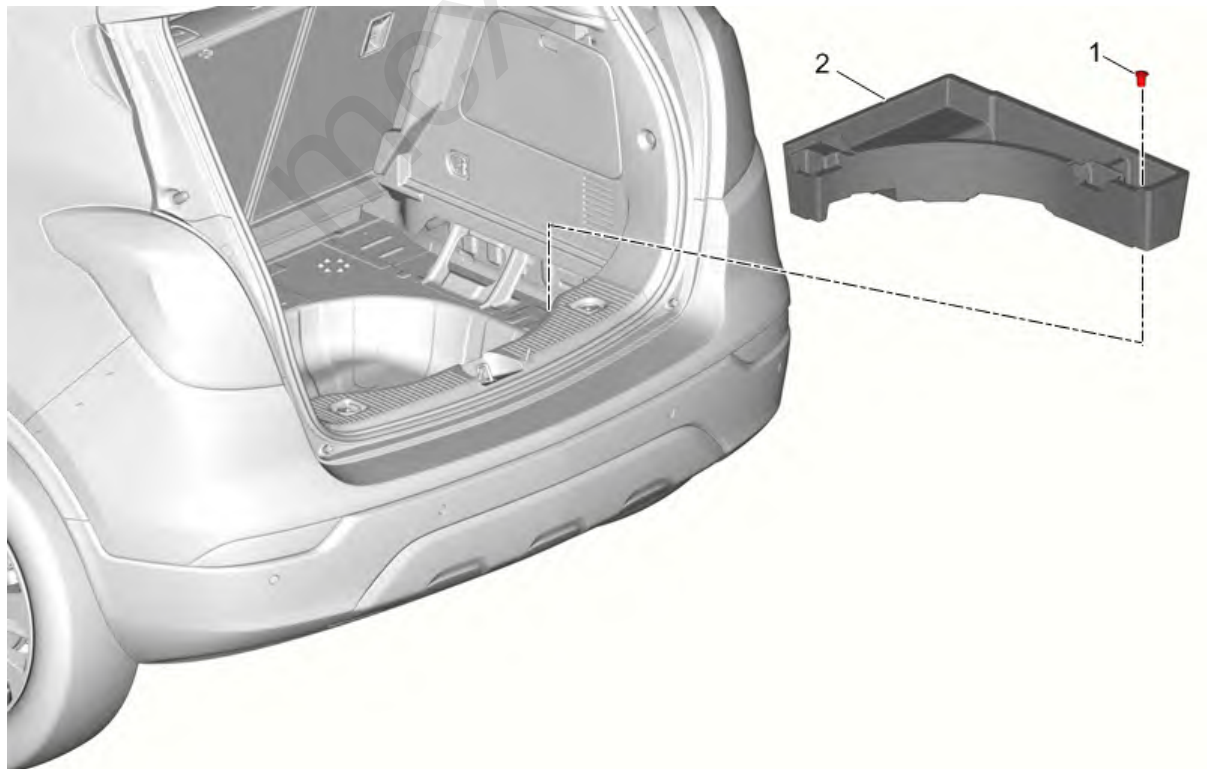


Fig. 36: Tool Stowage Compartment
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Load Floor Stowage Compartment Cover Replacement (Buick)</u> <u>Load Floor Stowage Compartment Cover Replacement (Chevrolet)</u>	
1	Rear Compartment Floor Stowage Compartment Divider Retainer
2	Tool Stowage Compartment Procedure Transfer components as necessary.

LOAD FLOOR FRONT TRIM PANEL SUPPORT REPLACEMENT (BUICK)

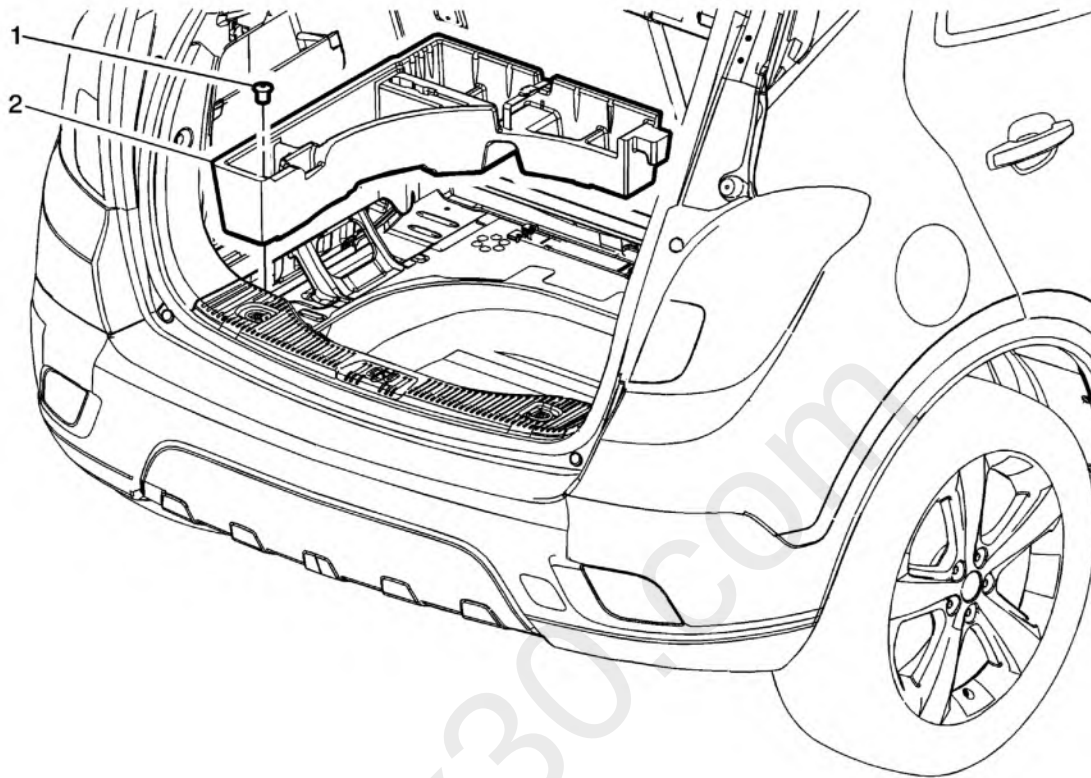


Fig. 37: Load Floor Front Trim Panel Support (Encore)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the load floor stowage compartment cover. Refer to <u>Load Floor Stowage Compartment Cover Replacement (Buick)</u> .	
1	Rear Compartment Floor Stowage Compartment Divider Retainer
2	Load Floor Front Trim Panel Support NOTE: Load floor front trim panel support on left side must be removed prior to removal of right side load floor front trim panel support, due to overlap.

LOAD FLOOR FRONT TRIM PANEL SUPPORT REPLACEMENT (CHEVROLET)

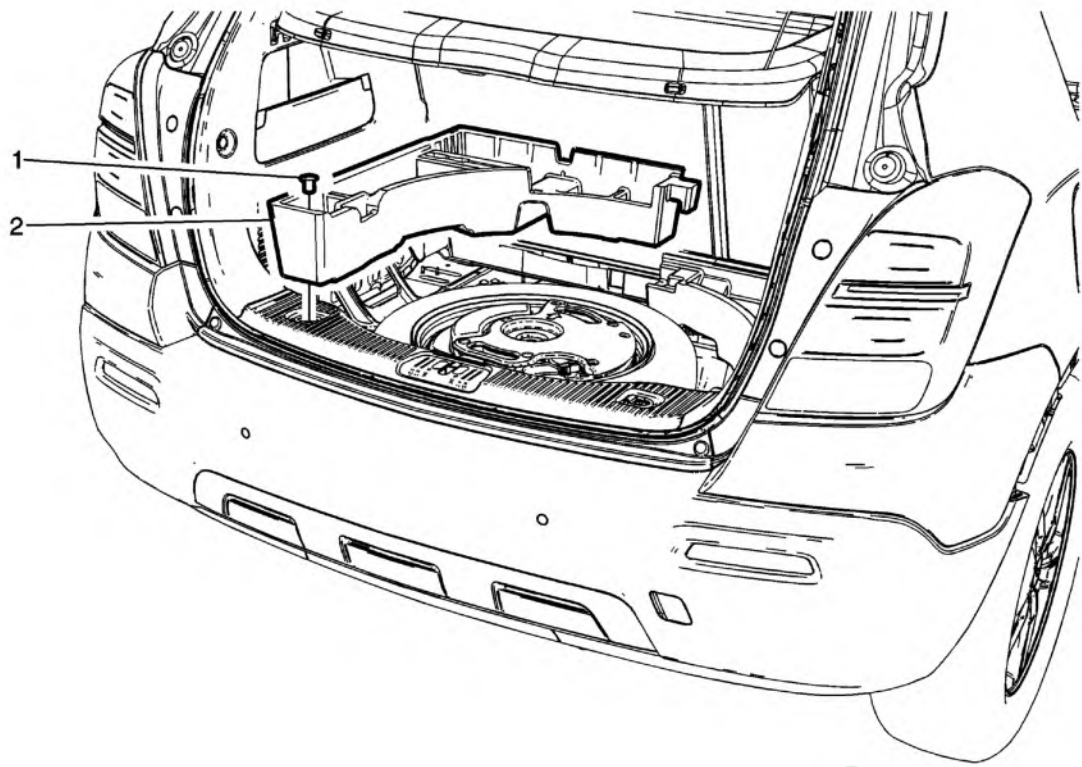


Fig. 38: Load Floor Front Trim Panel Support (Trax)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the load floor stowage compartment cover. Refer to Load Floor Stowage Compartment Cover Replacement (Chevrolet) .	
1	Rear Compartment Floor Stowage Compartment Divider Retainer
2	Load Floor Front Trim Panel Support NOTE: Load floor front trim panel support on left side must be removed prior to removal of right side load floor front trim panel support, due to overlap.

LOAD FLOOR PANEL CENTER SUPPORT REPLACEMENT (BUICK)

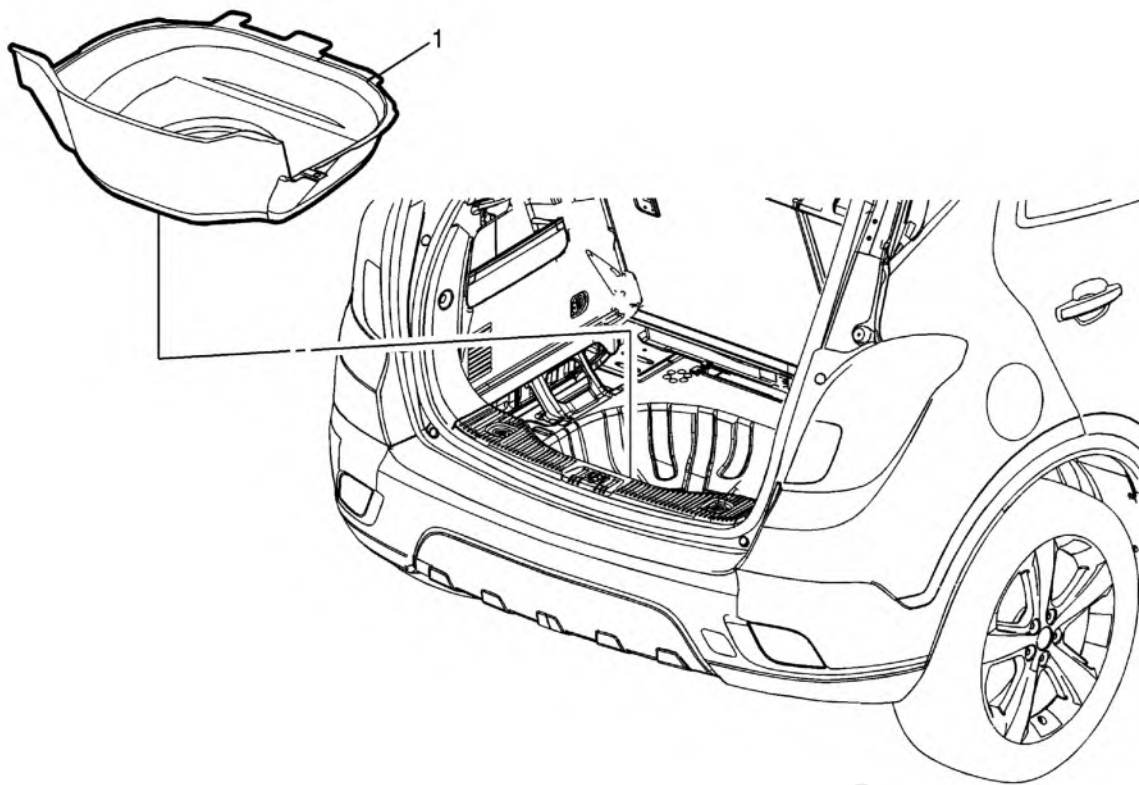


Fig. 39: Load Floor Panel Center Support (Encore)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the load floor front trim panel support. Refer to Load Floor Front Trim Panel Support Replacement (Buick) .	
1	Load Floor Panel Center Support Assembly

LOAD FLOOR PANEL REAR EXTENSION PANEL REPLACEMENT (BUICK)

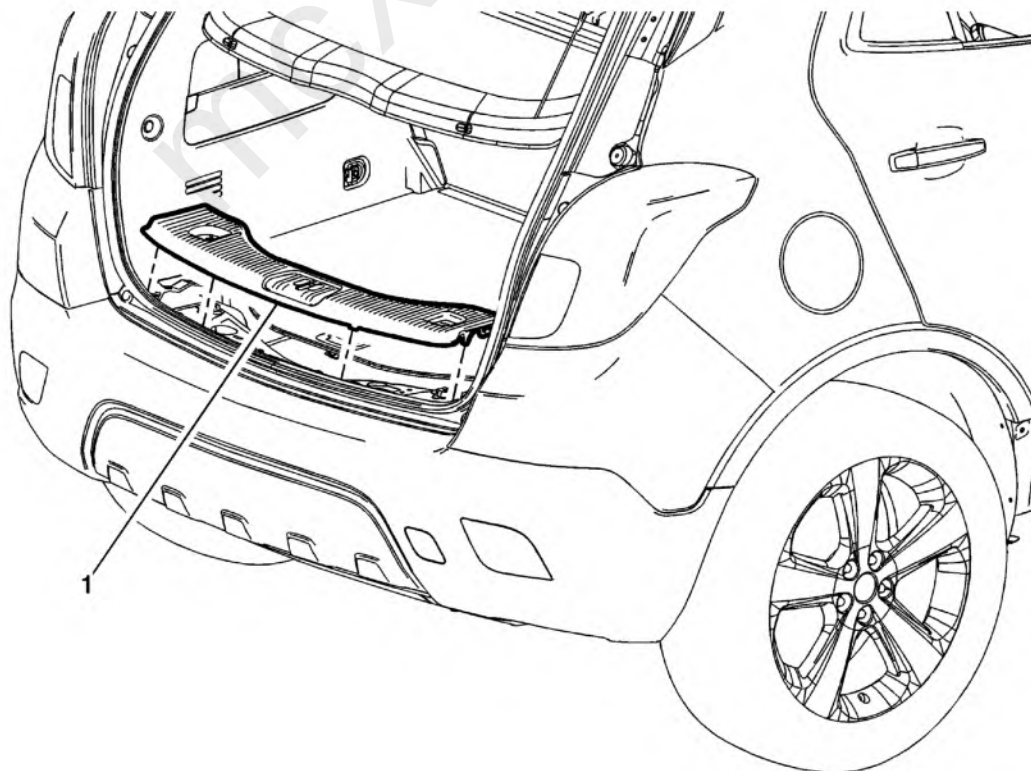


Fig. 40: Load Floor Panel Rear Extension Panel (Encore)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the cargo tie down hooks. Refer to Cargo Tie Down Loop Replacement (Buick) .	
1	Load Floor Panel Rear Extension Panel Assembly Procedure Grasp and gently pull up on the load floor panel rear extension panel in order to release the integral retaining clips.

LOAD FLOOR PANEL REAR EXTENSION PANEL REPLACEMENT (CHEVROLET)

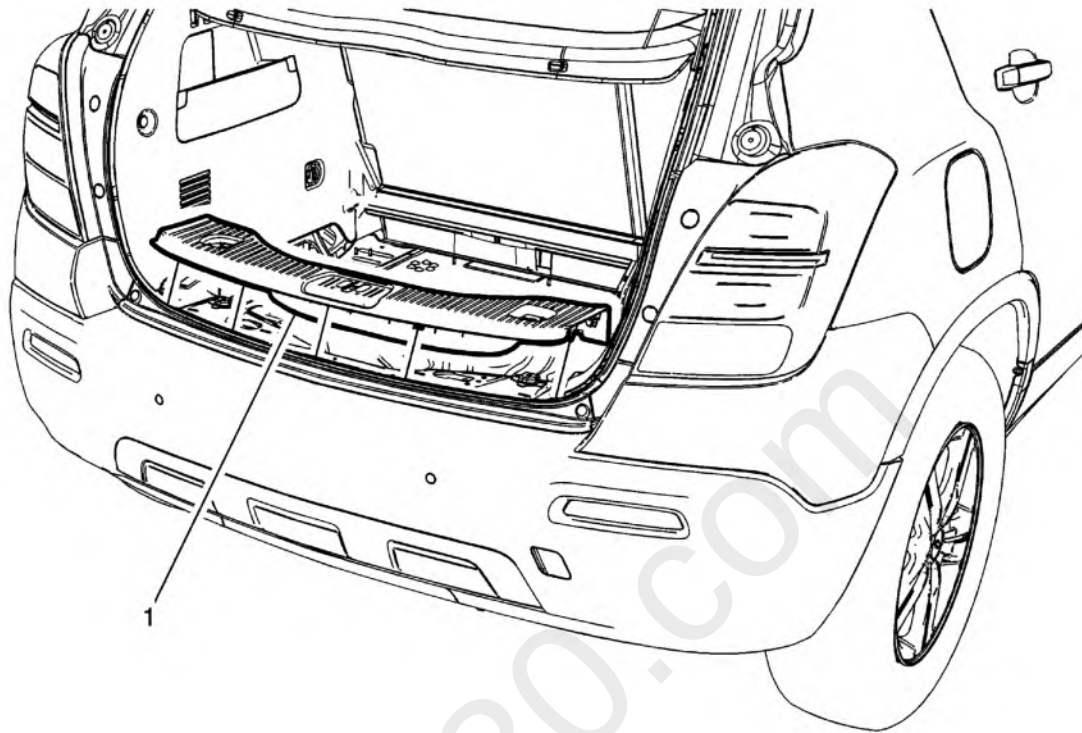


Fig. 41: Load Floor Panel Rear Extension Panel (Trax).
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the load floor stowage compartment cover. Refer to Load Floor Stowage Compartment Cover Replacement (Chevrolet). 2. Remove the cargo tie down hooks. Refer to Cargo Tie Down Loop Replacement (Chevrolet).	
1	Load Floor Panel Rear Extension Panel Assembly Procedure Grasp and gently pull up on the load floor panel rear extension panel in order to release the integral retaining clips.

REAR SIDE DOOR TRIM REPLACEMENT

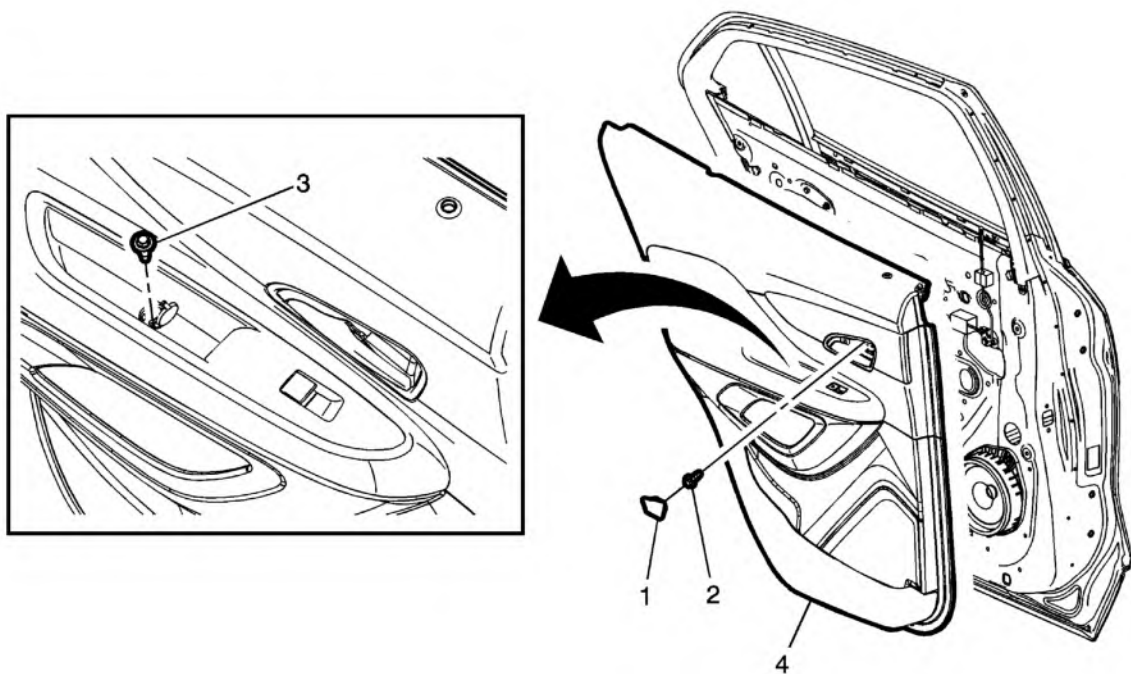


Fig. 42: Rear Side Door Trim

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Inside Handle Bolt Finish Cap Procedure Pull handle back to remove cap. Use suitable tool to unsnap.
2	Rear Side Door Inside Handle Fastener CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Rear Side Door Pull Handle Fastener Procedure Use a small flat-bladed tool to open the rear side door trim integral cap to access the fastener. Tighten 2.5 N.m (22 lb in)
4	Rear Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

LUGGAGE SHADE REPLACEMENT (BUICK)

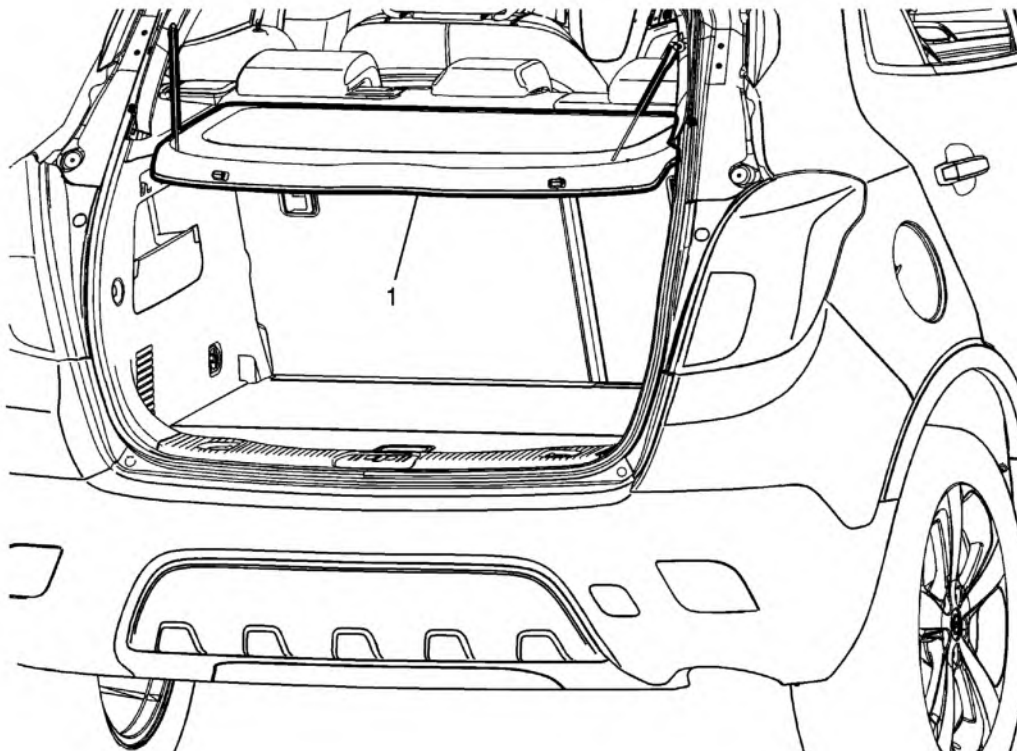


Fig. 43: Luggage Shade (Encore)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Luggage Shade Assembly Procedure 1. Release the luggage shade straps from the liftgate. 2. Pull gently upon the luggage shade to disengage from the body lock pillar upper trim panel. Release the luggage shade from the pivot supports.

LUGGAGE SHADE REPLACEMENT (CHEVROLET)

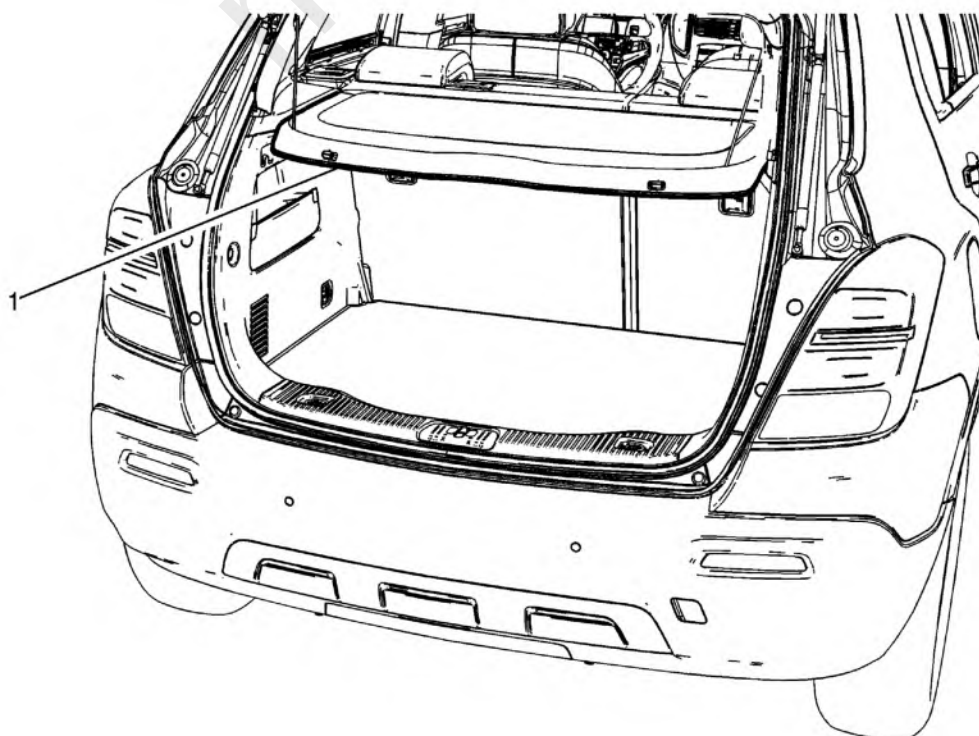


Fig. 44: Luggage Shade (Trax).
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Luggage Shade Assembly Procedure 1. Release the luggage shade straps from the liftgate. 2. Pull gently upon the luggage shade to disengage from the body lock pillar upper trim panel. Release the luggage shade from the pivot supports.

LUGGAGE SHADE PIVOT REPLACEMENT (BODY SIDE)

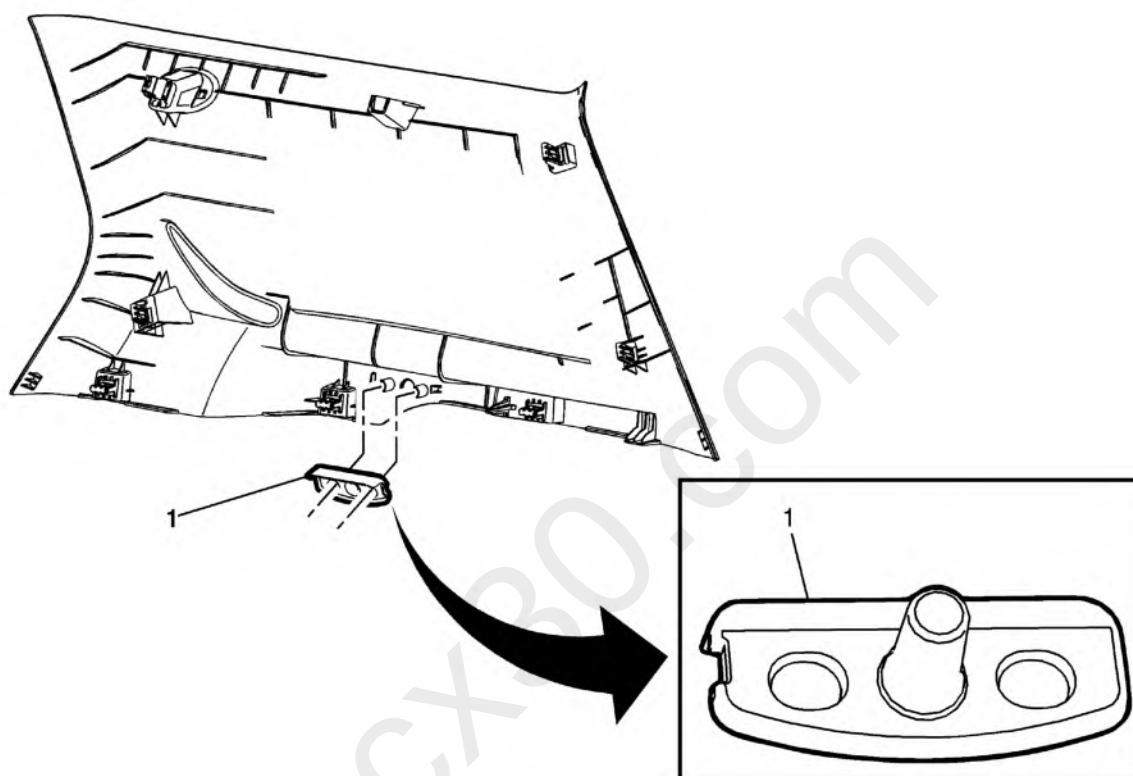


Fig. 45: Luggage Shade Pivot (Body Side).
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement .	
1	Luggage Shade Pivot Procedure Use a flat bladed tool to release the luggage shade pivot from the backside of the body lock pillar upper trim panel.

LUGGAGE SHADE PIVOT REPLACEMENT (LUGGAGE SHADE)

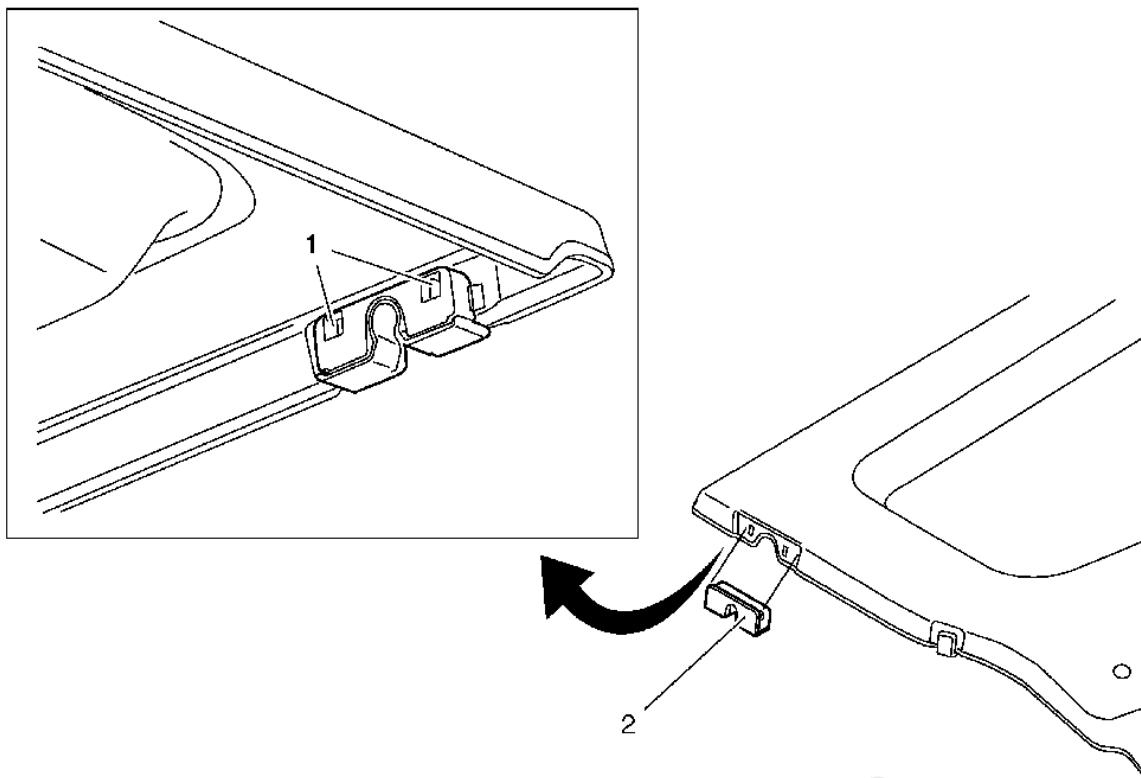


Fig. 46: Luggage Shade Pivot (Luggage Shade)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Luggage Shade Pivot Retainer (Qty: 2) Procedure Use a flat-bladed tool to release the luggage shade pivot locking retainer from the luggage shade.
2	Luggage Shade Pivot Procedure Pull gently the luggage shade pivot to disengage from the luggage shade.

LUGGAGE SHADE PIVOT REPLACEMENT (LIFTGATE)

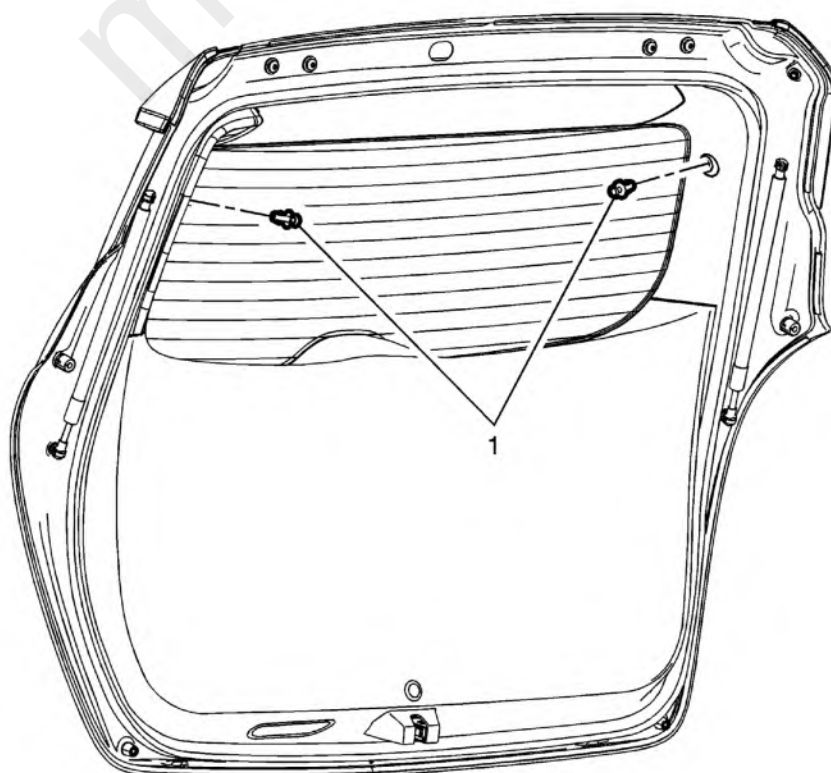


Fig. 47: Luggage Shade Pivot - Liftgate
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Luggage Shade Pivot Procedure Release the luggage shade strap. NOTE: The luggage shade pivots are a one-time use component and will break upon removal.

LIFTGATE UPPER CENTER TRIM FINISH PANEL REPLACEMENT

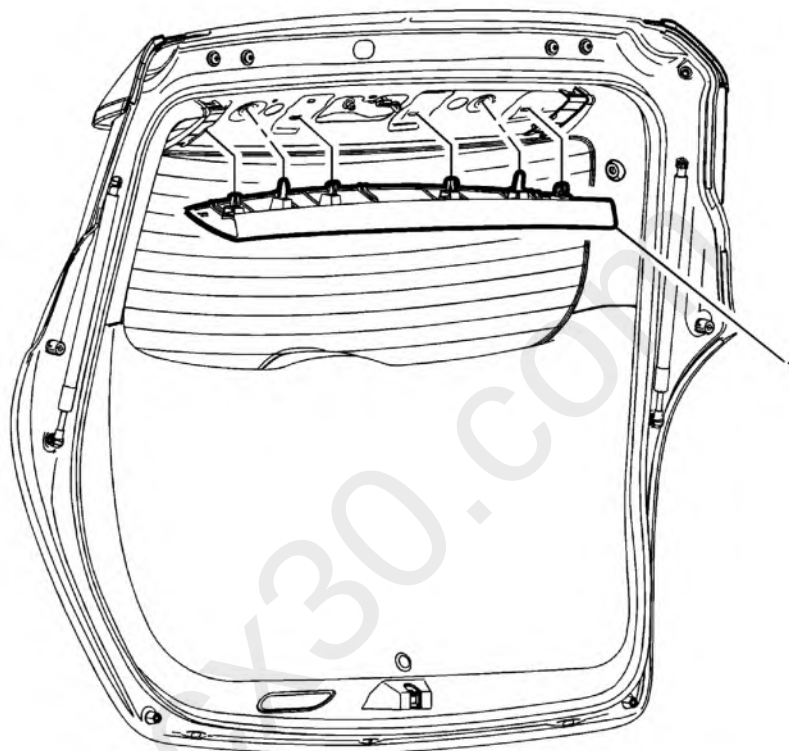


Fig. 48: Liftgate Upper Center Trim Finish Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Liftgate Upper Center Trim Finish Panel Assembly Procedure The left and right outboard lower ends of the trim finish panel snap into the liftgate upper side trim finish panels.

LIFTGATE UPPER SIDE TRIM FINISH PANEL REPLACEMENT

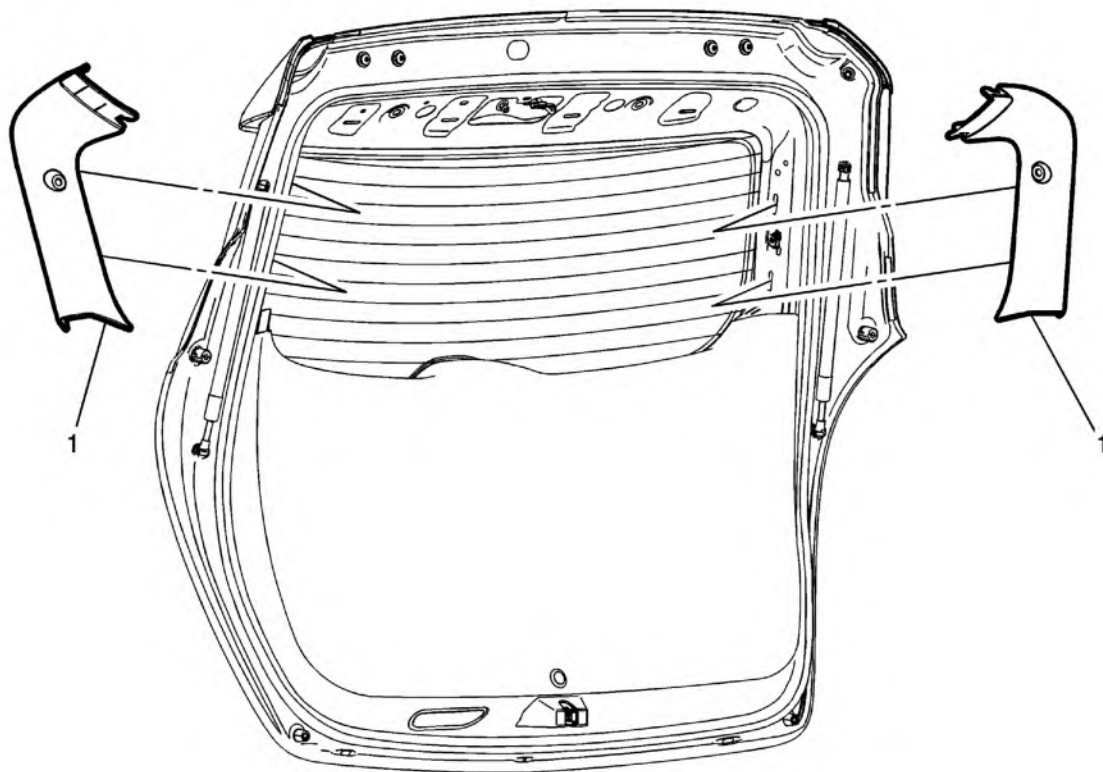


Fig. 49: Liftgate Upper Side Trim Finish Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the liftgate upper center trim finish panel. Refer to Liftgate Upper Center Trim Finish Panel Replacement. 2. Remove the luggage shade pivot. Refer to Luggage Shade Pivot Replacement (Body Side)Luggage Shade Pivot Replacement (Luggage Shade)Luggage Shade Pivot Replacement (Liftgate).	
1	Liftgate Upper Side Trim Finish Panel Assembly (Qty: 2) Procedure The outboard lower end of the liftgate upper side trim finish panel snaps into the liftgate lower trim finish panel.

LIFTGATE LOWER TRIM FINISH PANEL REPLACEMENT

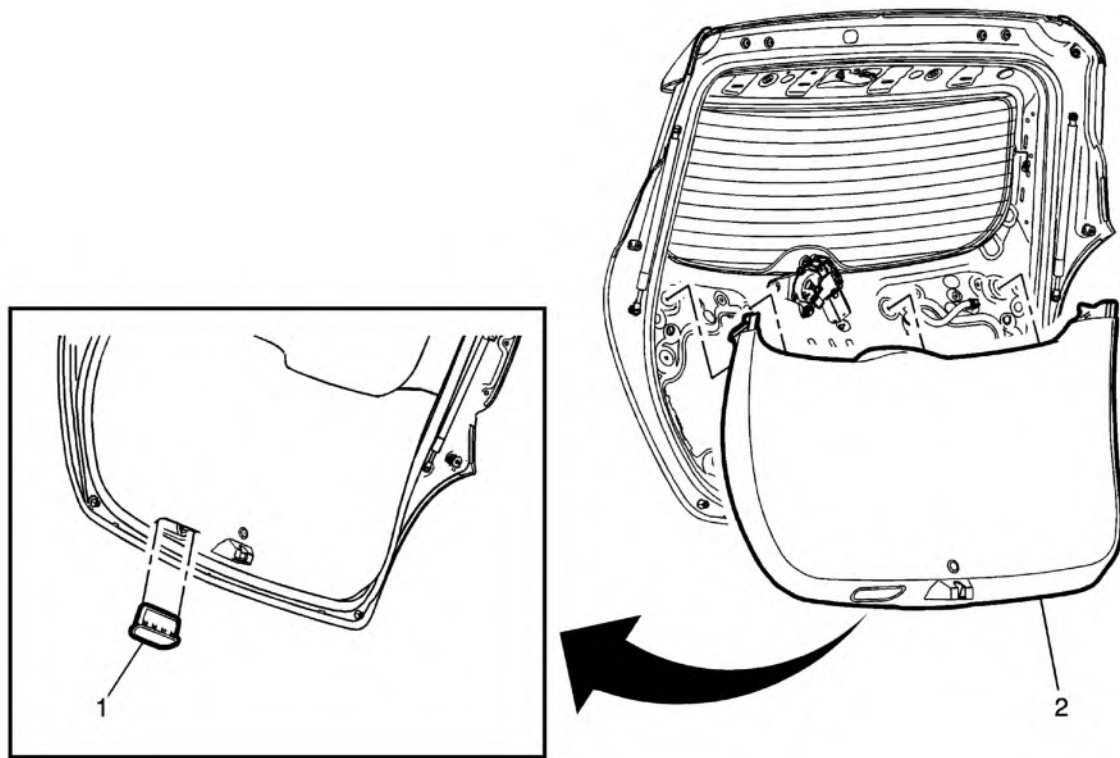


Fig. 50: Liftgate Lower Trim Finish Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the liftgate upper side trim finish panel. Refer to Liftgate Upper Side Trim Finish Panel Replacement .	
1	Liftgate Inside Pull Handle Procedure Squeeze and pull the inside handle to disengage from liftgate trim finish panel.
2	Liftgate Lower Trim Finish Panel Assembly Procedure 1. Use a trim panel removal tool to aid in the removal of the trim panel from the liftgate assembly. 2. Start at the top clip on the right-hand side of liftgate lower trim finish panel. 3. Disconnect the electrical connector, if equipped.

CARGO TIE DOWN LOOP REPLACEMENT (BUICK)

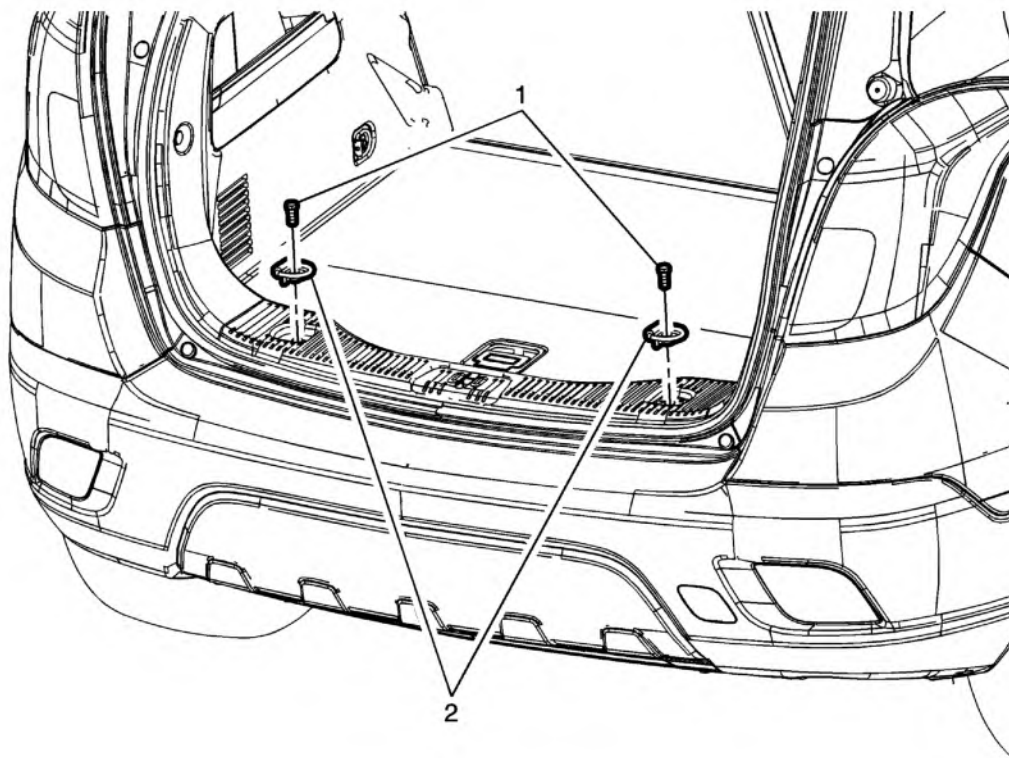


Fig. 51: Cargo Tie Down Loop (Encore)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Cargo Tie Down Hook Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Tighten 9 N.m (80 lb in)
2	Cargo Tie Down Hook Assembly (Qty: 2)

CARGO TIE DOWN LOOP REPLACEMENT (CHEVROLET)

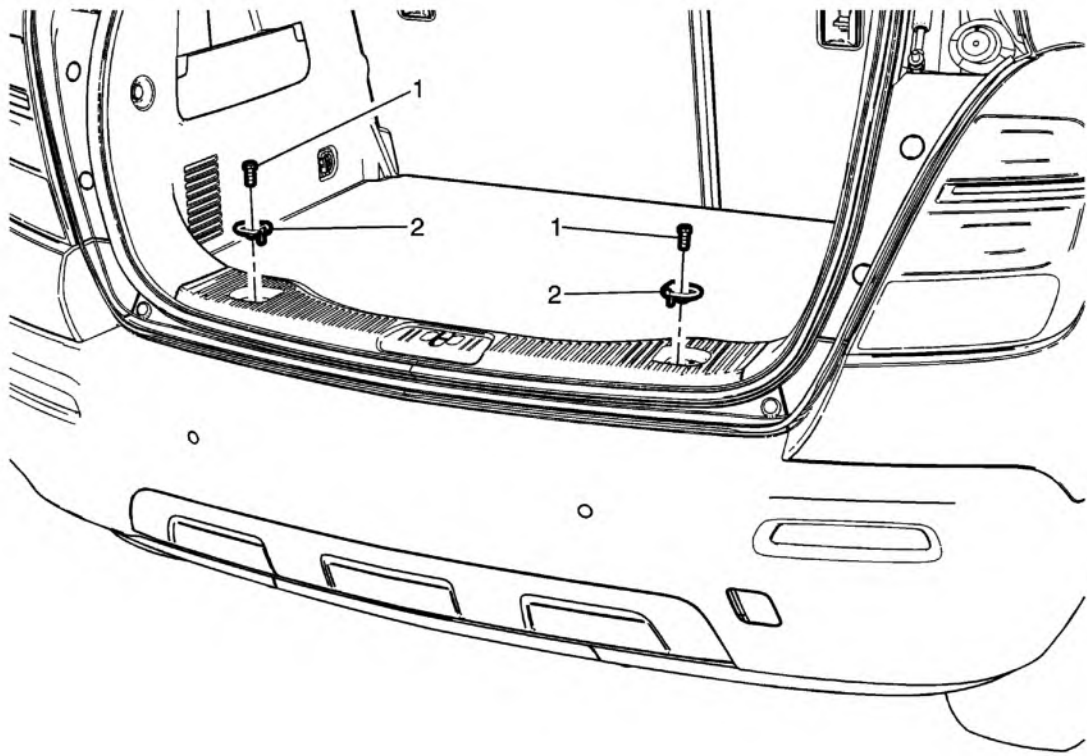


Fig. 52: Cargo Tie Down Loop

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Cargo Tie Down Hook Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Tighten 9 N.m (80 lb in)
2	Cargo Tie Down Hook Assembly (Qty: 2)

BODY PRESSURE RELIEF VALVE REPLACEMENT



Fig. 53: Body Pressure Relief Valve
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure <u>Rear Bumper Fascia Replacement (Chevrolet), Rear Bumper Fascia Replacement (Buick).</u>	
1	Body Pressure Relief Valve (Qty: 2) Procedure 1. Use a flat-bladed tool to release the locking tabs on the body pressure relief valve at the two upper, and two lower locations. 2. Press the body pressure relief valve into the quarter panel until the locking tabs lock in place at both the upper, and lower locations.