



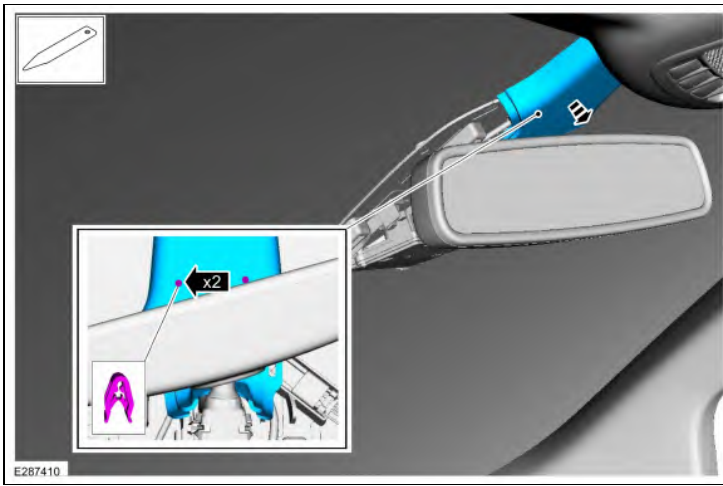

6. If equipped.
Disconnect the headliner wiring harness electrical connector(s).

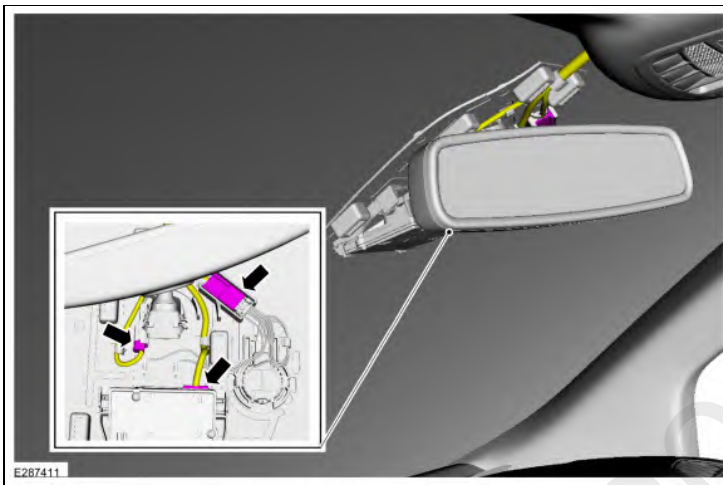


7. **NOTE:** RH side shown, LH side similar.

On both sides.

Remove both sun visors.

1. Remove the sun visor retainer cover.
2. Remove the sun visor retainer.
3. Remove sun visor.
4. If equipped.
Disconnect the sun visor electrical connector and remove the sun visor.



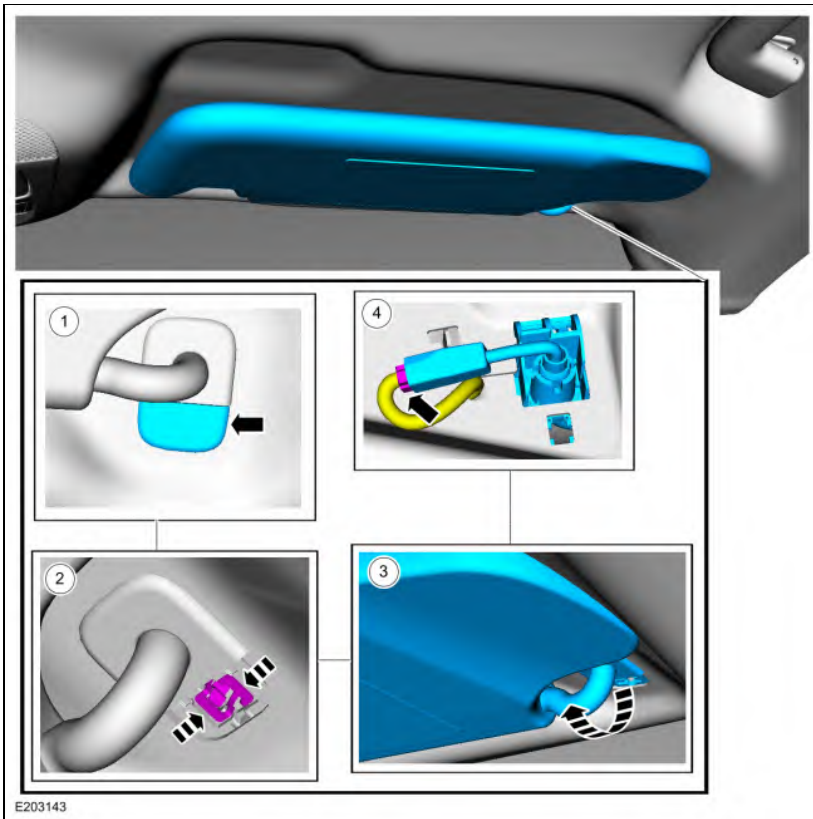


8. **NOTE:** *RH side shown, LH side similar.*

On both sides.

Remove the retainer and the sun visor clip.



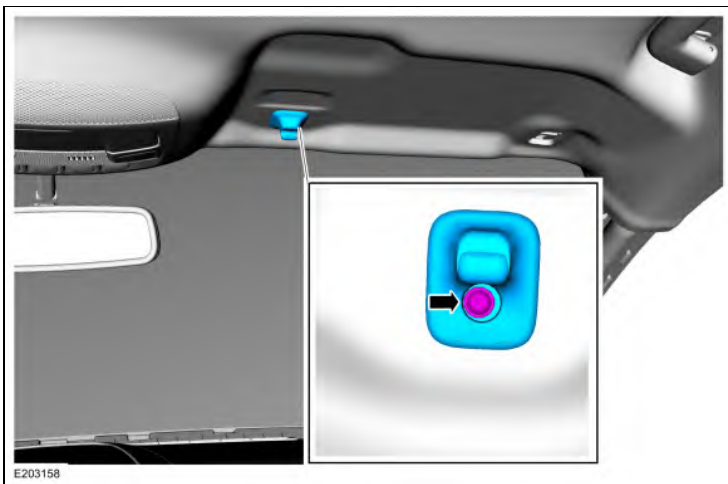


9. **NOTE:** *RH side shown, LH side similar.*

On both sides.

Remove the front grab handles.

1. Remove the bolt covers.
2. Remove the retainers and the grab handle.

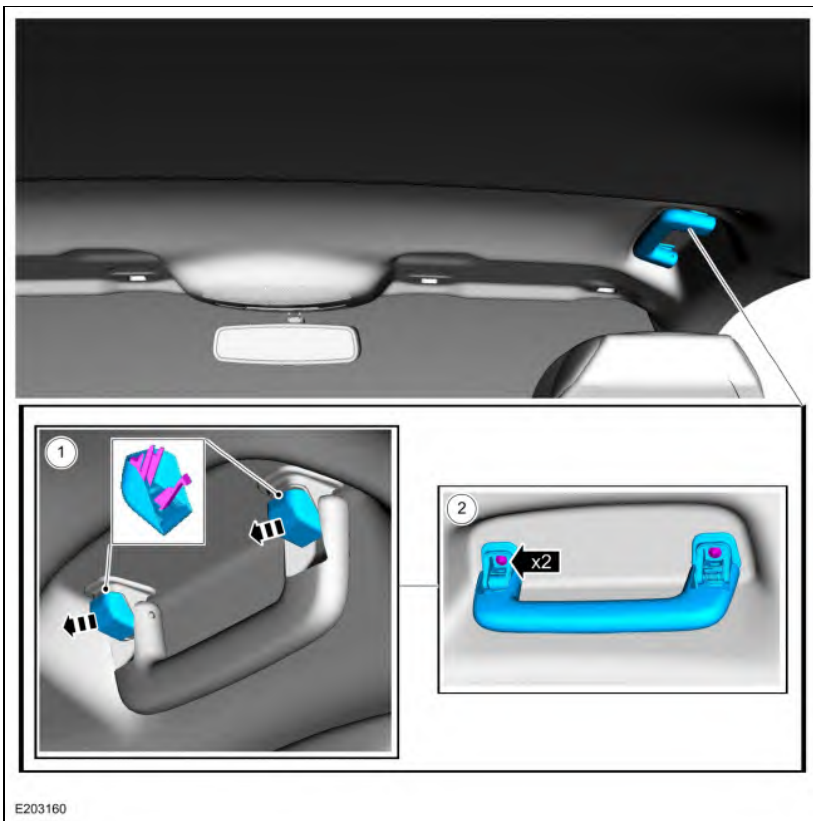


10. **NOTE:** *RH side shown, LH side similar.*

On both sides.


Remove the rear grab handles.

1. Remove the bolt covers.
2. Remove the retainers and the rear grab handle.

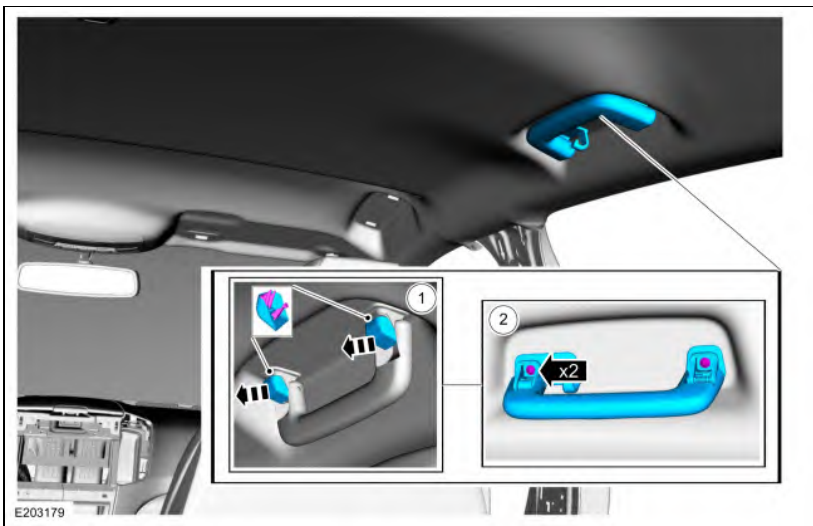

11. **NOTE:** Headliner with roof opening panel shown, others similar.


Release the magnets and lower the headliner down.

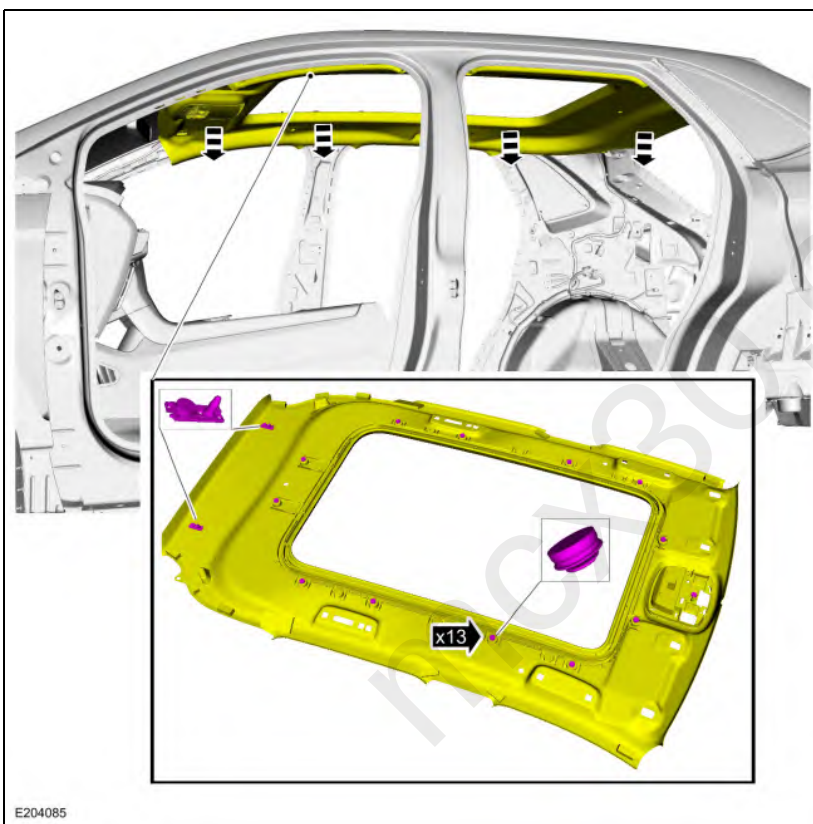


Liftgate Trim Panel

Removal


1. Release the clips and remove the liftgate upper center trim panel.

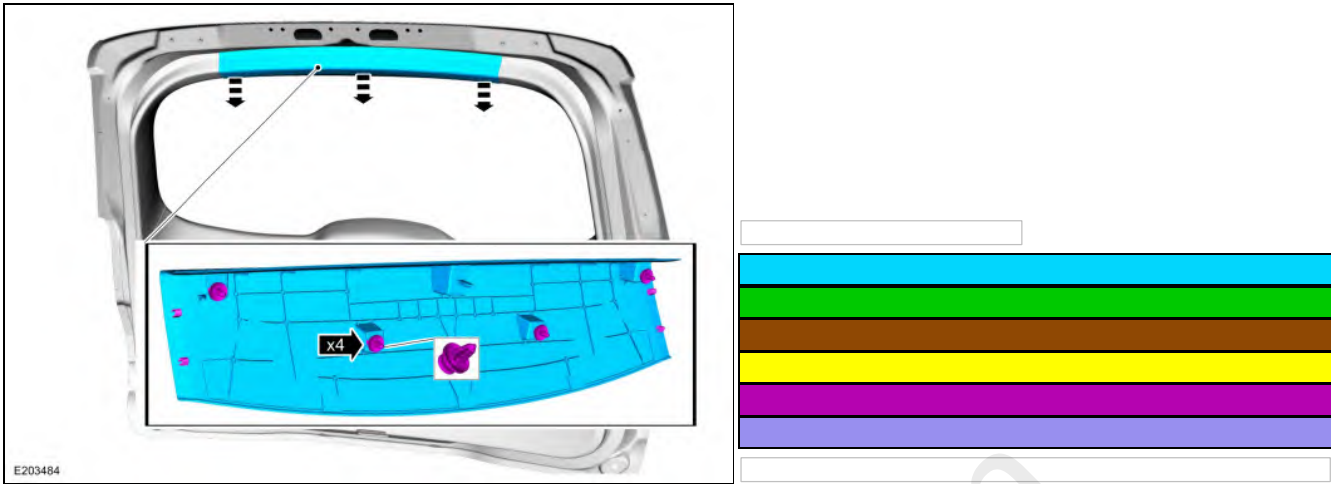

2. Release the clips and remove the liftgate grab handle cover.

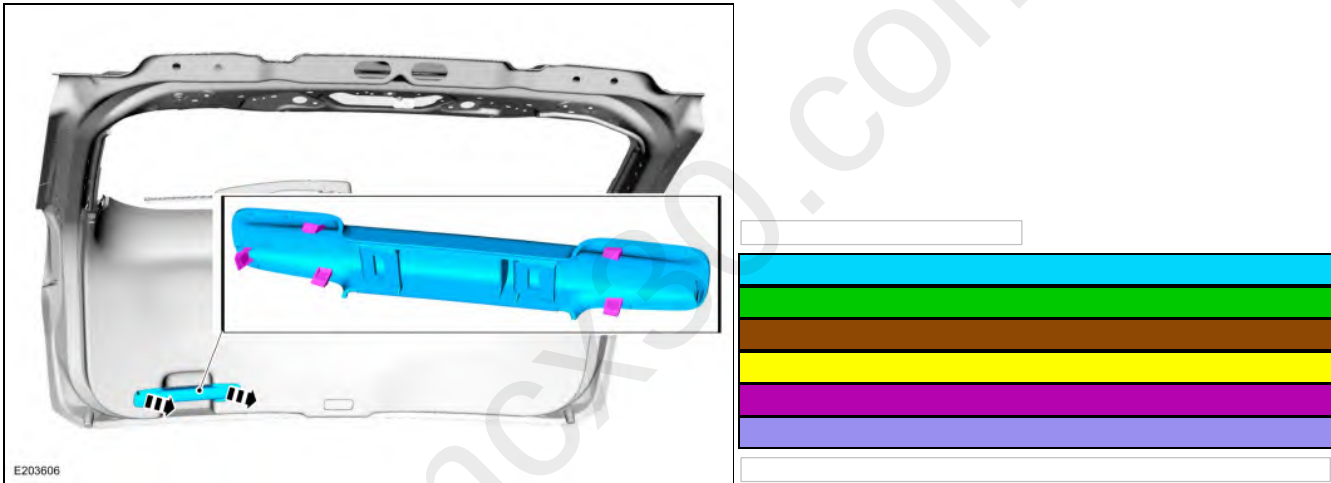

3. Remove the liftgate grab handle screws.

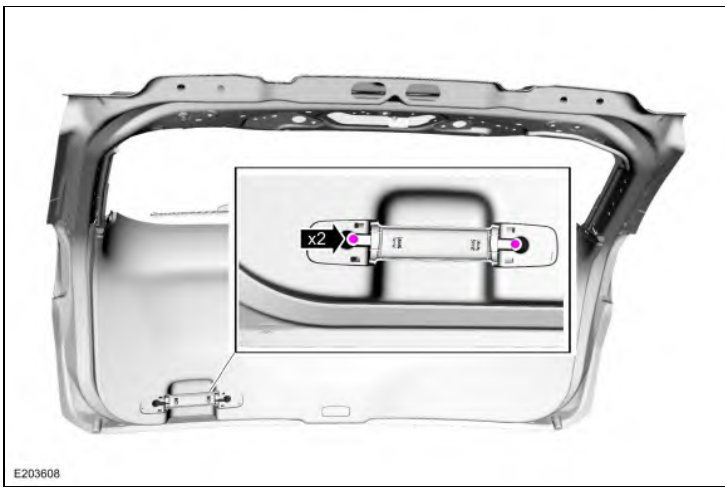

4. Remove the lower and side liftgate trim panels as an assembly.
 1. On both sides.
Release side liftgate trim panel upper retainer.
 2. On both sides.
Release the side liftgate trim panel middle retainers.
 3. Release the retainers and remove the side and lower liftgate trim panels as an assembly.
 4. If equipped.
Disconnect the power liftgate switch electrical connector.

mcx30.com