

Occupant Classification System (OCS) Sensor

Removal

WARNING: The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.

NOTICE: To prevent system failure, carry out the OCS reset when a front passenger seat cushion is disassembled, a new trim cover is installed or an OCS service kit is installed. Use a scan tool to carry out the OCS reset command.


NOTICE: The cushion heater mat on a front outboard passenger seat is not serviced separately. If a new cushion heater mat is needed on the front passenger seat, install an OCS service kit equipped with a heater mat. Failure to follow this instruction may result in incorrect operation of the OCS.

NOTE: OCS components (seat cushion foam pad, bladder with OCSM) are calibrated to each other and are serviced as an assembly. The OCS components are not to be installed separately. If a new OCS, OCS component or seat cushion foam pad are needed, a new OCS service kit (seat cushion foam pad, bladder with OCSM) must be installed as an assembly.

NOTE: Removal steps in this procedure may contain installation details.

All seats

1. Remove the front passenger seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).
2. If equipped.
Remove the clip and the recliner handle.

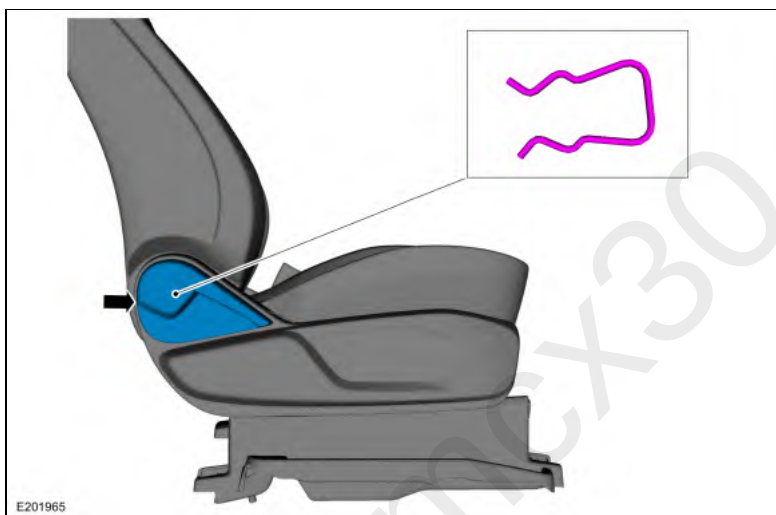

3. Remove the side shield screws.