



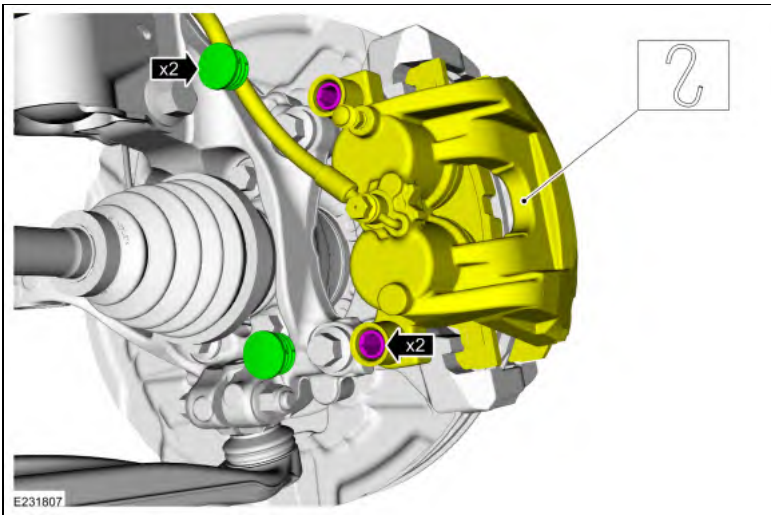

4. **NOTICE:** Brake pads with adhesive on the insulator are one-time use only. When the brake pads are separated from the brake caliper, new brake pads must be installed to prevent brake noise and shudder.

Separate the outboard brake pad from the brake caliper. Discard the brake pad.

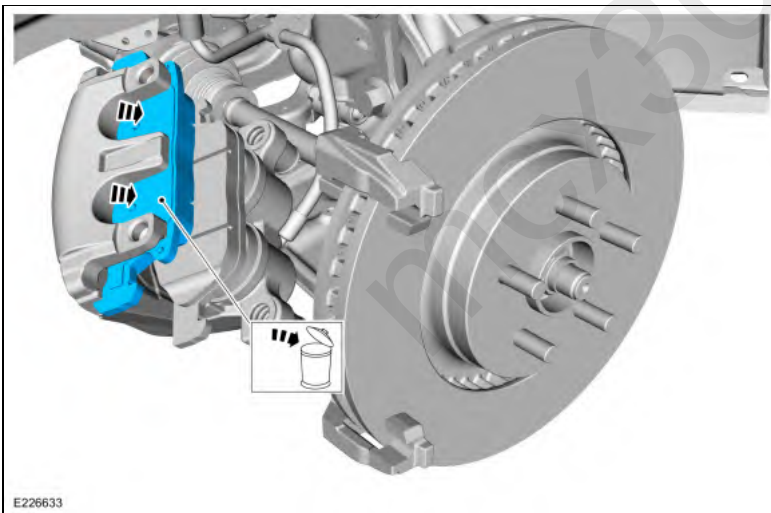

5. **NOTICE:** Protect the caliper pistons and boots when pushing the caliper piston into the caliper piston bores or damage to components may occur.

Use a C-clamp and a worn brake pad to compress the disc brake caliper pistons into the brake caliper bore.