




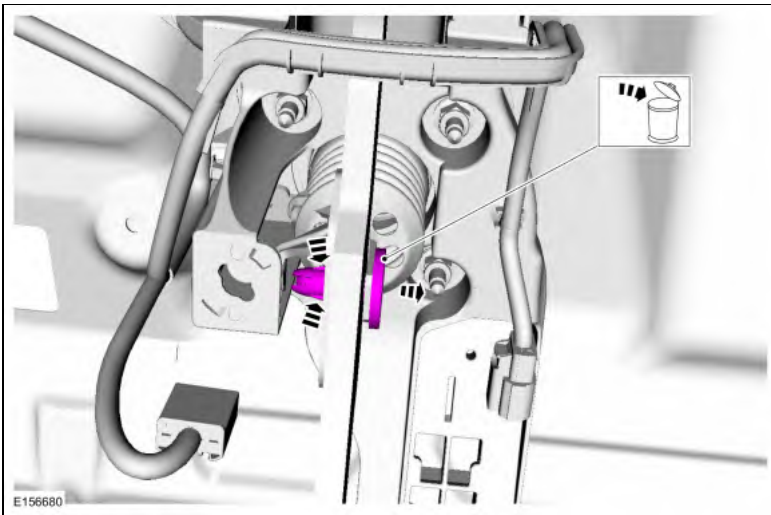

7. Remove the screws, detach the wiring retainers and position the wiring aside.

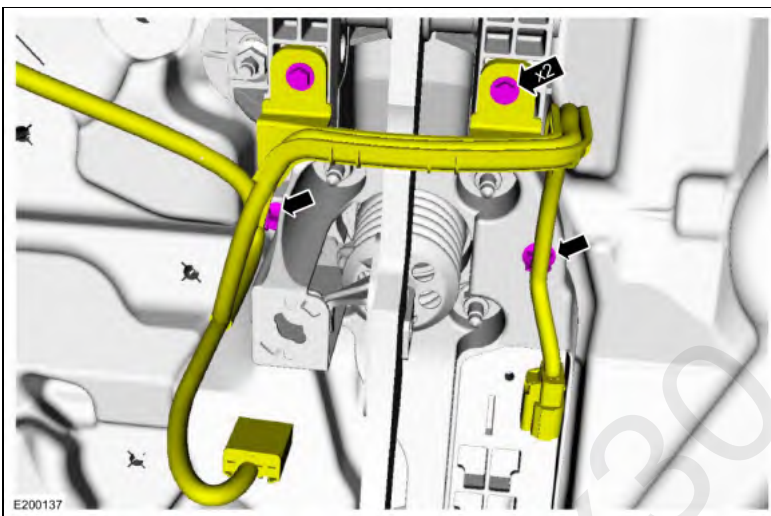

8. Remove the nut, bolts and the brake pedal and bracket. Discard the nuts and bolts.
Torque: 17 lb.ft (23 Nm)

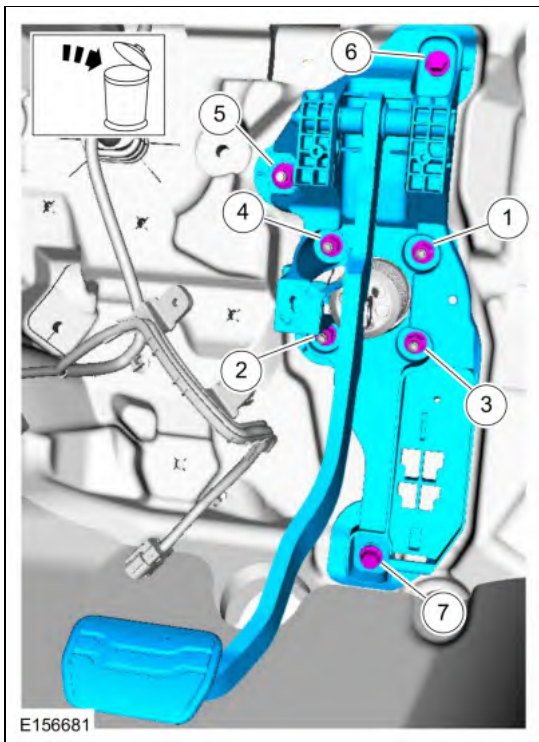

Installation

1. **NOTICE:** Do not press, pull or otherwise move the brake pedal while installing the stoplamp switch. The switch must be installed with the booster push rod attached to the brake pedal and with the brake pedal in the at-rest position. Installing the switch with the brake pedal in any other position will result in incorrect adjustment and may damage the switch.

To install, reverse the removal procedure.

206-07 Power Brake Actuation

Diagnosis and Testing