


3	W500210	Heat shield bolt
4	7F469	Heat shield
5	â€”	PTU to engine bracket bolts. Unique parts for each powertrain.
6	7B664	PTU to engine bracket. Unique parts for each powertrain.
7	7B696	Oil temperature sensor harness bracket (If equipped).
8	W500210	Oil temperature sensor harness bracket bolt

Power Transfer Unit (PTU) Intermediate Shaft

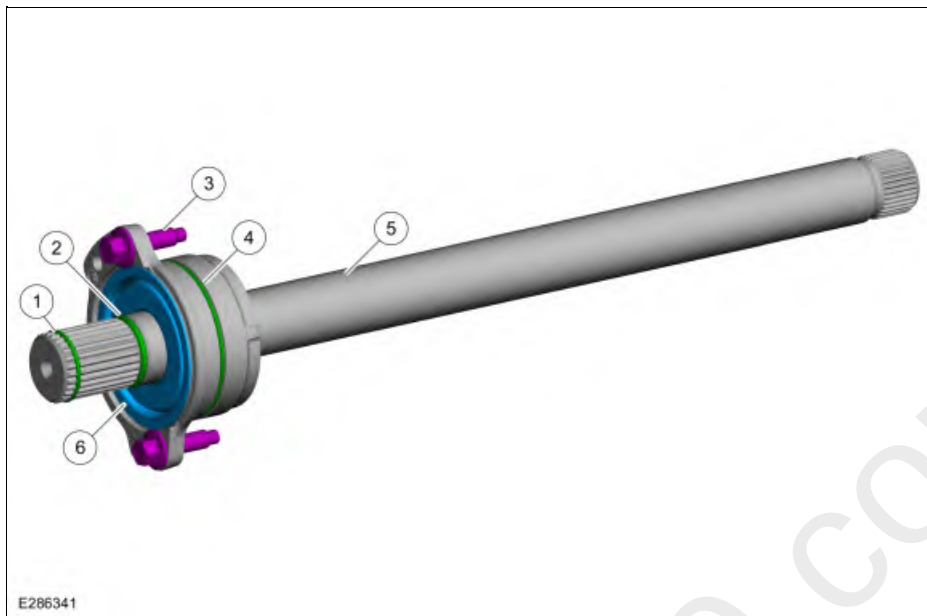

Item	Part Number	Description
1	4B422	Halfshaft circlip. One-time use. Part of 4C198 kit.
2	4C199	Halfshaft to intermediate shaft D-Ring. One-time use. Use 4C197 (assembly aid plastic part) to assemble this 4C199. Both parts are in 4C198 kit.
3	W719767	Intermediate shaft bolt. One-time use.
4	3B470	Intermediate shaft bearing to PTU O-ring. One-time use.
5	3K183	Intermediate shaft. Unique designs for MMT6 & 8F57. Same design for 8F35 & 8F40
6	â€”	Intermediate shaft seal. Serviced with intermediate shaft.

Power Transfer Unit (PTU) Cooling Systems â€” If Equipped