



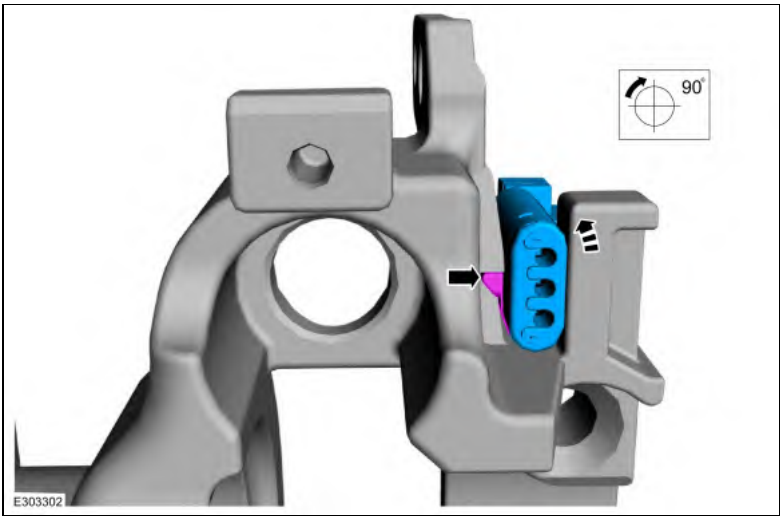

7. Remove the park position switch and the brake shift interlock actuator.

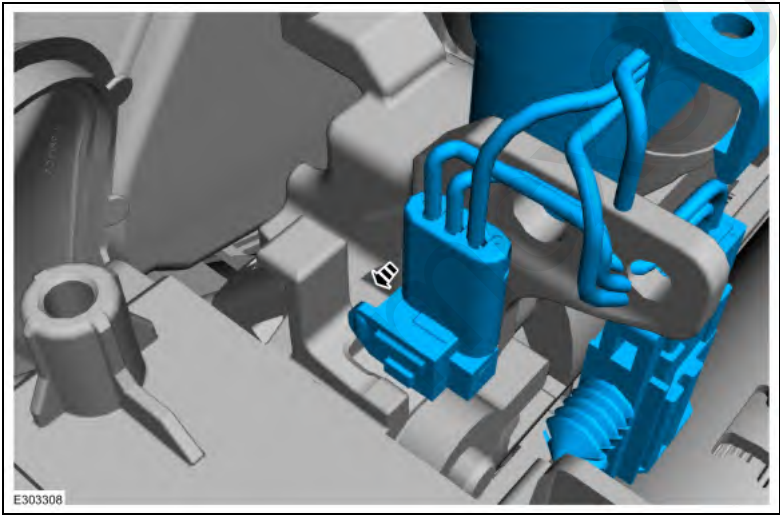

Installation


- 1. To install, reverse the removal procedure.

Selector Lever Assembly


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the steering column shrouds.
Refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the selector lever electrical connector.

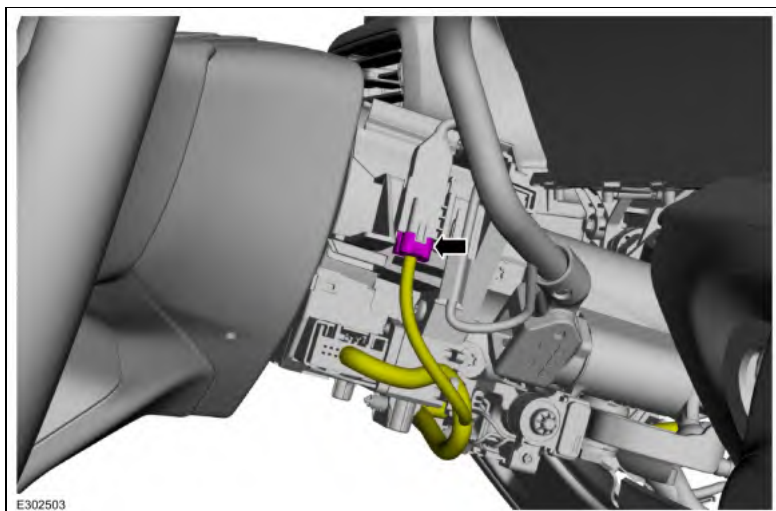

3. Detach the electrical connector and wire harness retainers.

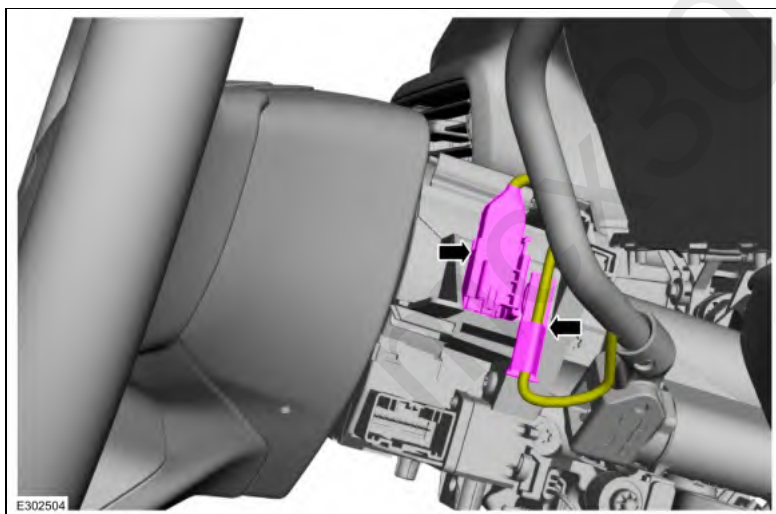

4. Remove the bolt and the selector lever.
Torque: 89 lb.in (10 Nm)

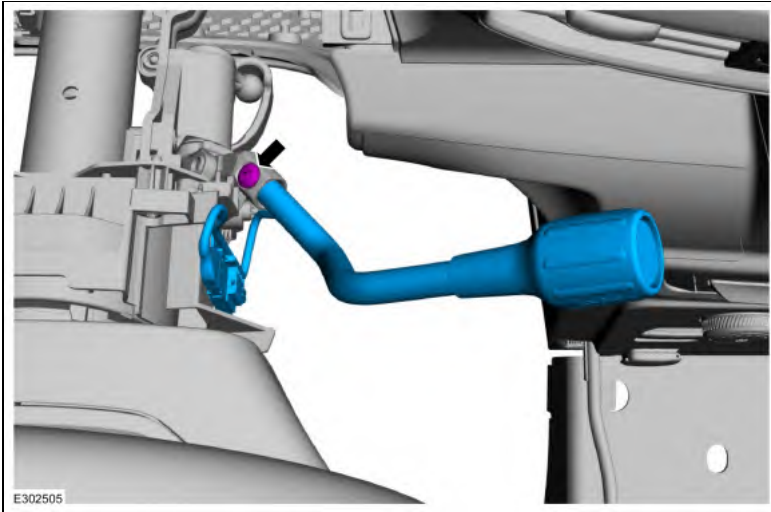

Installation

- 1. To install, reverse the removal procedure.

mcx30.com