




6. While applying the brakes, release the parking brake.

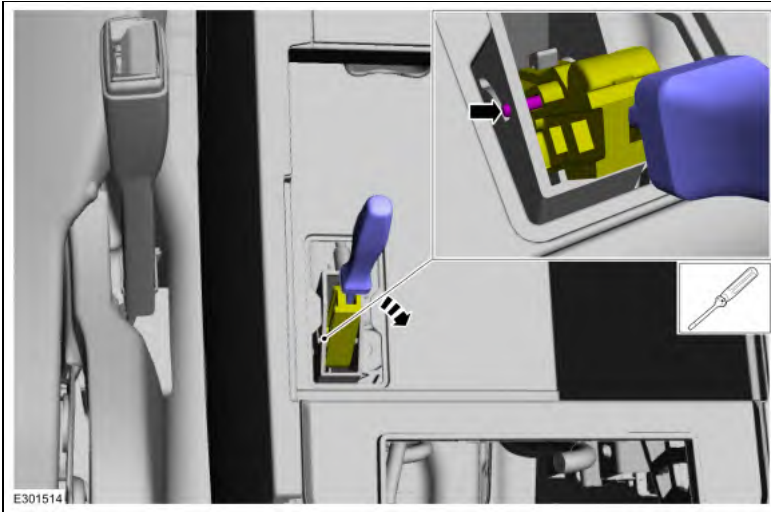

Deactivation


1. **NOTE:** *If the vehicle has a discharged battery, an external power source is required.*

Apply the parking brake.





2. **NOTE:** The brakes must be applied from the driver's seat while releasing the vehicle from park.



While applying the brakes, insert the screwdriver into the MPR (Manual Park Release) lever slot. Push the screwdriver downward. The lever will move forward allowing the vehicle to go back into the P position.

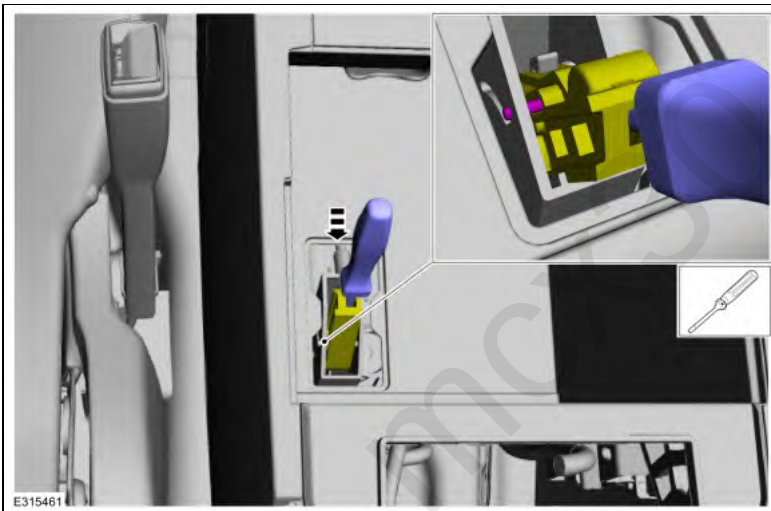

3. Install the access panel.

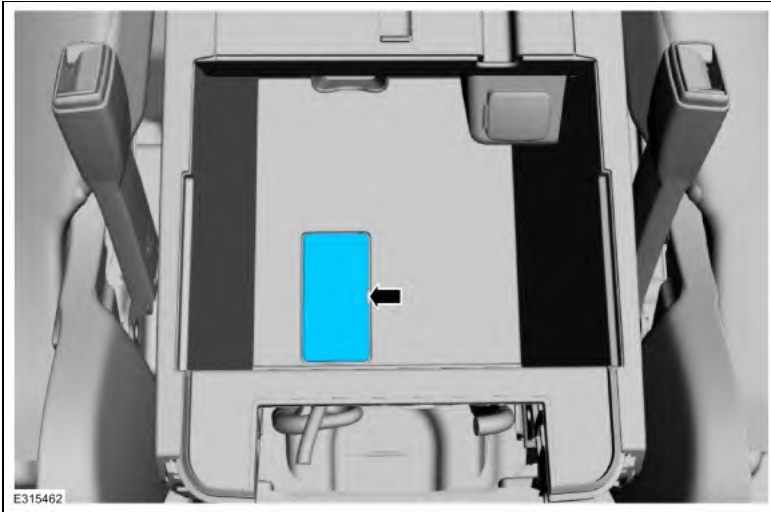

4. Install the console mat.

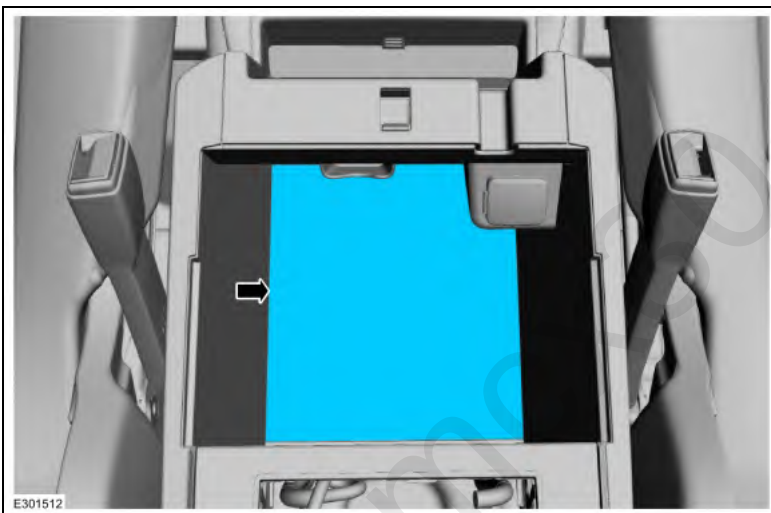

5. While applying the brakes, release the parking brake.



mcx30.com

Removal and Installation


mcx30.com

Brake Shift Interlock Actuator


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the steering column shrouds.
Refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the brake shift interlock actuator electrical connector.

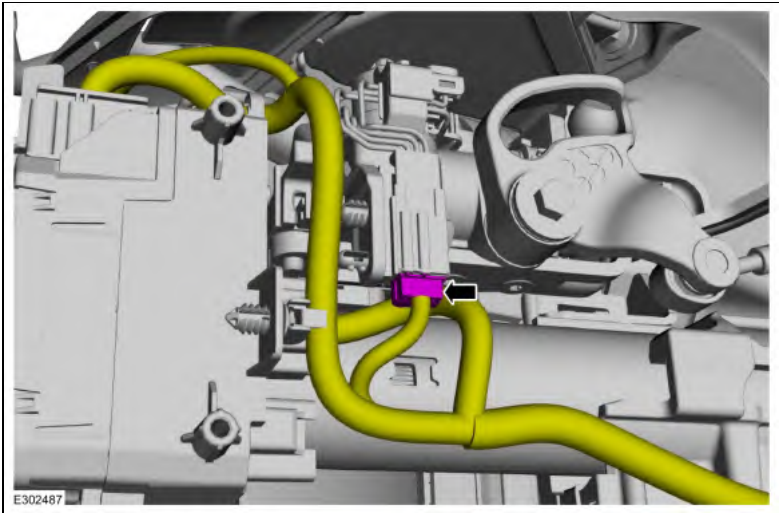

3. Detach the electrical connector retainer.

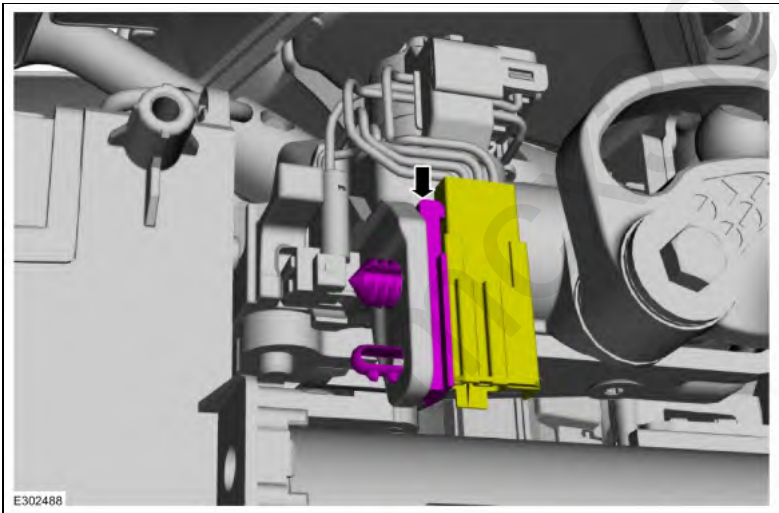

4. Remove the brake shift interlock actuator bolt.