


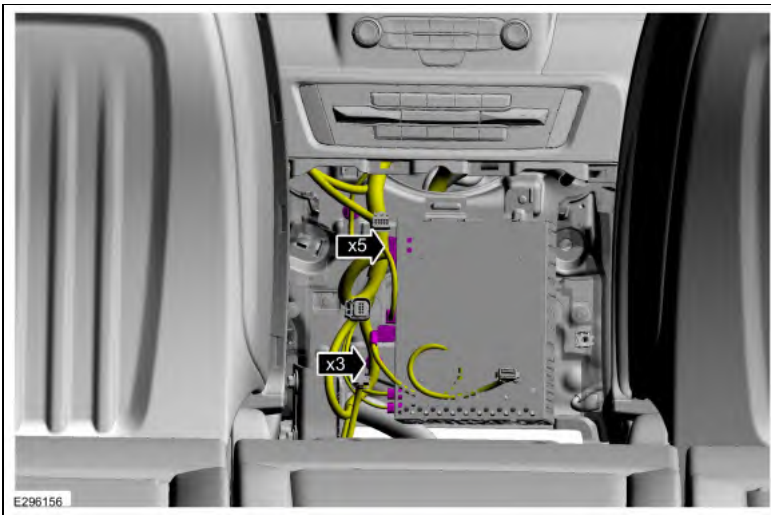


7. Remove the bolt, the screws and the ACM.

Torque:

ACM screws: 22 lb.in (2.5 Nm)

ACM bolt: 106 lb.in (12 Nm)

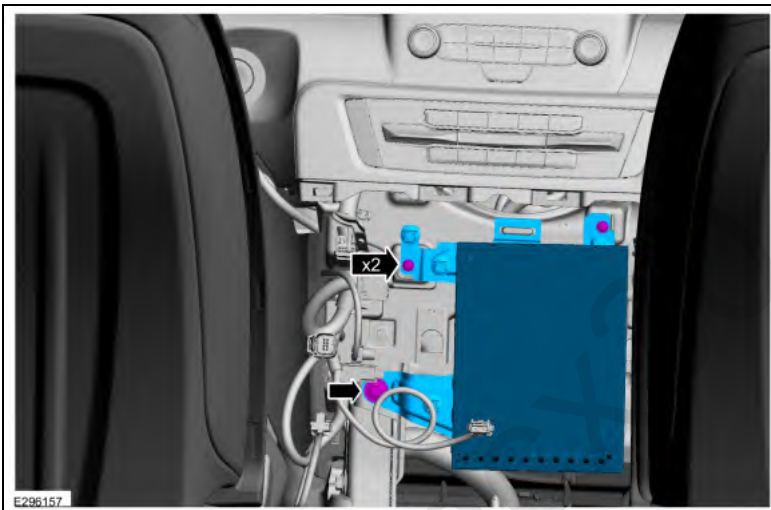

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary when installing a new component.

Using a diagnostic scan tool, complete the PMI process for the ACM following the on-screen instructions.

Audio Unit Antenna Cable

Special Tool(s) / General Equipment

Interior Trim Remover

Removal

Instrument panel AM/FM coaxial cable

1. Remove the floor console.
Refer to: Floor Console (501-12 Instrument Panel and Console, Removal and Installation).
2. Remove the RH front scuff plate trim panel.
Refer to: Front Scuff Plate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. **NOTE:** One screw on each side.

Remove the screws.


Torque: 22 lb.in (2.5 Nm)



4. Release the clips and position the center dash lower trim panel out.



5. Disconnect the electrical connectors and remove the center dash lower trim panel.

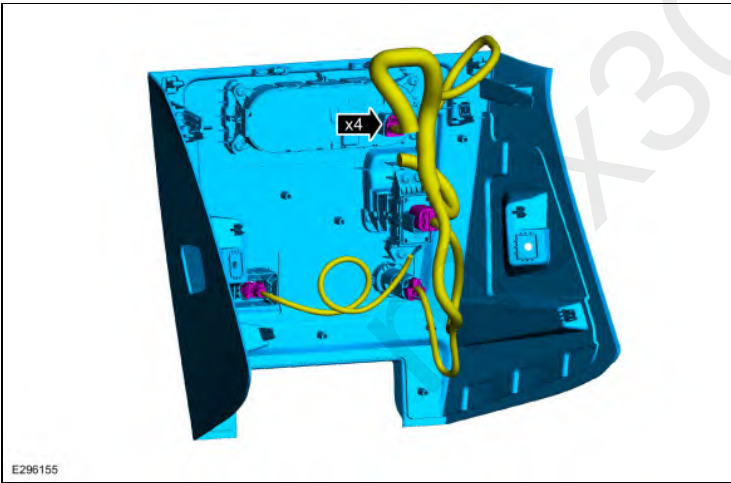

6. Disconnect the electrical connector.