

Audio Unit Antenna Cable

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: The original equipment antenna cables are part of the wiring harnesses and cannot be removed. This procedure refers to replacement of the cable only by overlaying the cable.

/ lower antenna cable


1. Remove the RH and LH loadspace trim panels.
Refer to: Loadspace Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Lower the headliner.
Refer to: Headliner - Lowering (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Disconnect the subwoofer electrical connector.

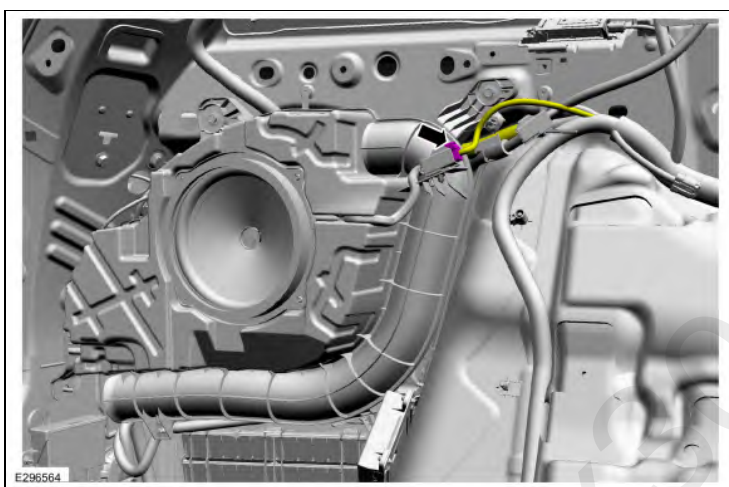

4. Position the subwoofer assembly to access rear connectors.
 1. Remove the nut.
Torque: 80 lb.in (9 Nm)
 2. Remove the bolts.
Torque: 80 lb.in (9 Nm)

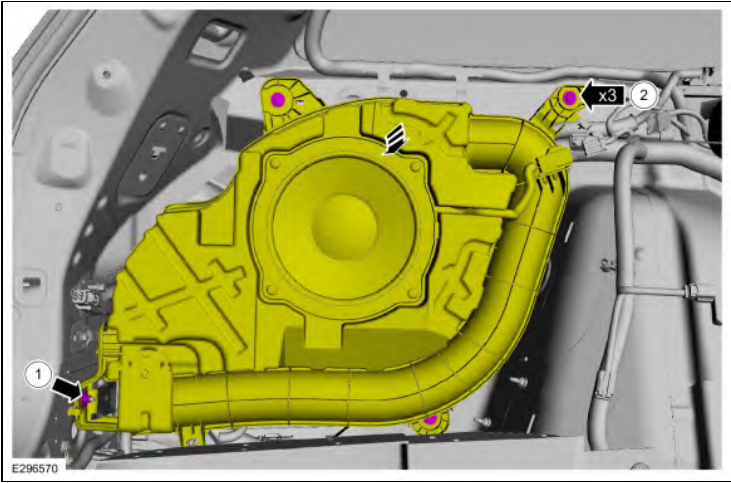

5. Disconnect the electrical connectors and remove the subwoofer assembly.

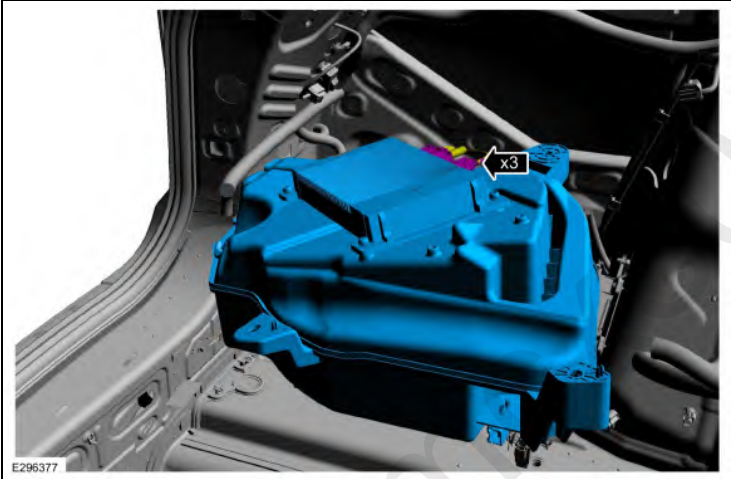

6. Disconnect the AM/ FM antenna connector.