





mcx360.com

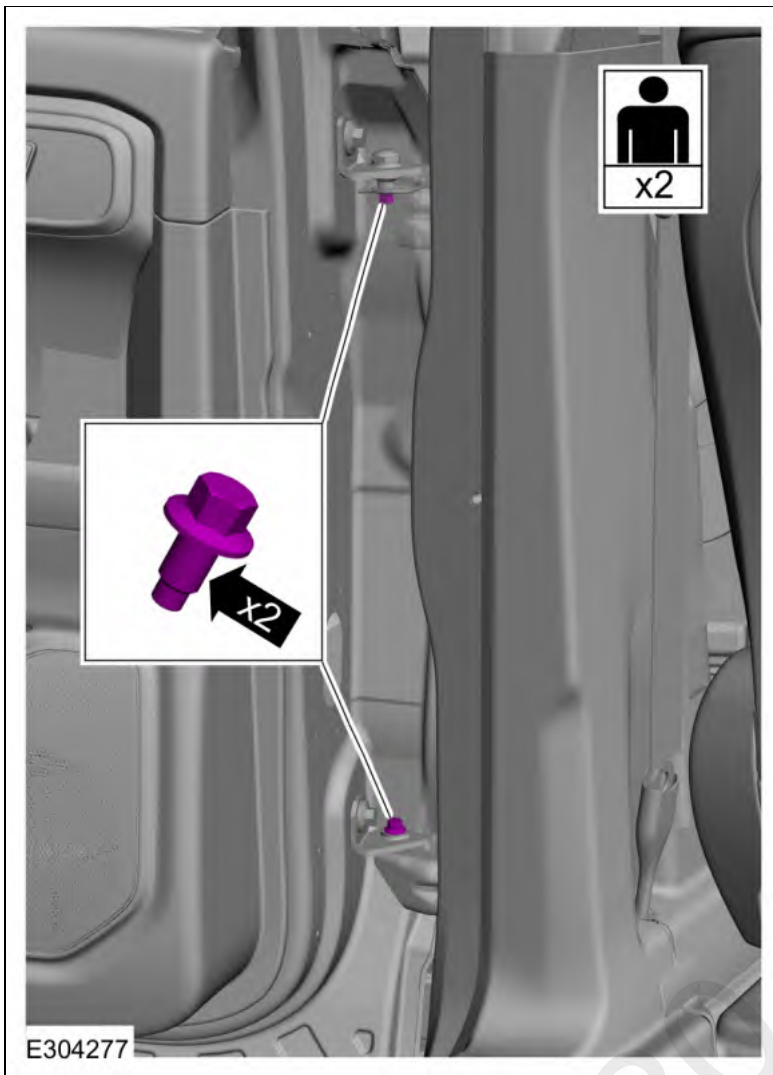

5. **NOTE:** This step requires the aid of another technician.

Remove the door.

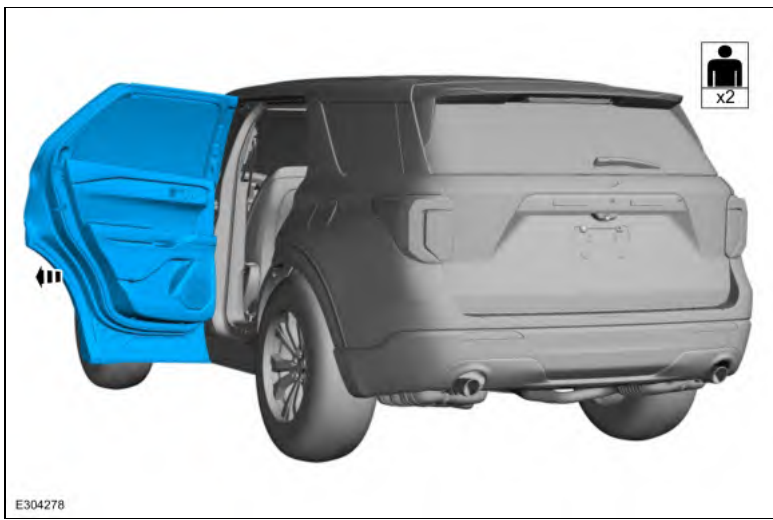

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*
Check the door-to-body alignment. Align the door as necessary.
Refer to: Rear Door Alignment (501-03 Body Closures, General Procedures).

mcx30.com

Rear Door Check Arm

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH similar.

1. Open the door.



2. Remove the check arm bolt.
Torque: 18 lb.ft (25 Nm)

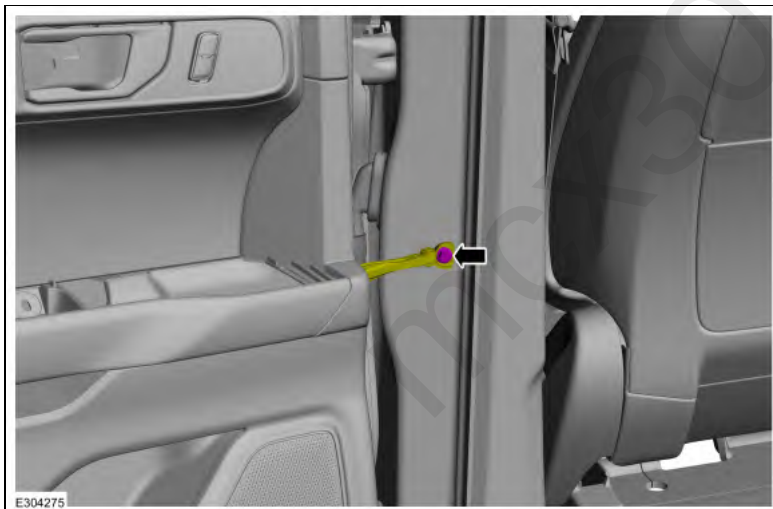

3. Remove the rear door trim panel.

Refer to: Rear Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).

4. Remove the front door speaker.

Refer to: Rear Door Speaker (415-00A Information and Entertainment System - General Information - Vehicles Without: SYNC 3, Removal and Installation).

5. Remove the door check arm cover.

