

Headliner

Special Tool(s) / General Equipment

Pick Hook
Interior Trim Remover

Materials

Name	Specification
3M [®] Super-Fast Repair Adhesive - 04747	-

Removal


1. Remove the following items:

1. On both sides.
Remove the A-pillar trim panel.
Refer to: A-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: A-Pillar Trim Panel - Police (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. On both sides.
Remove the upper B-pillar trim panel.
Refer to: B-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).


3. On both the sides.
Remove the C-pillar trim panel.
Refer to: C-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. On LH side.
Position the headliner wiring harness aside.

1. Disconnect the headliner wiring harness electrical connectors.
2. Release the headliner wiring harness retainers.
Use the General Equipment: Interior Trim Remover

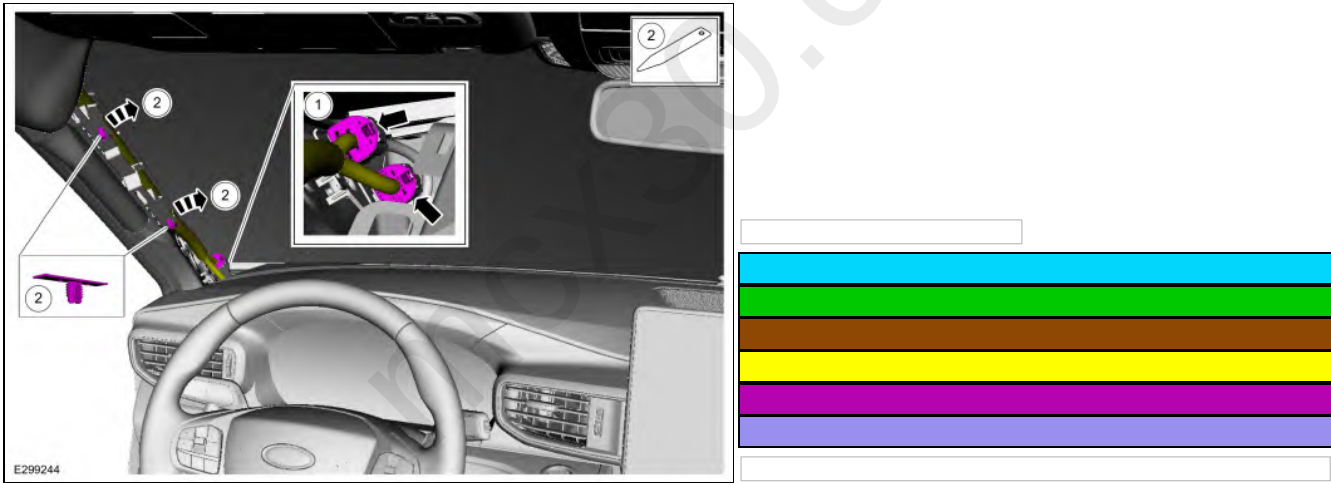


3. On RH side.
Position the headliner wiring harness aside.

1. Disconnect the headliner wiring harness electrical connector.
2. Release the headliner wiring harness retainers.
Use the General Equipment: Interior Trim Remover

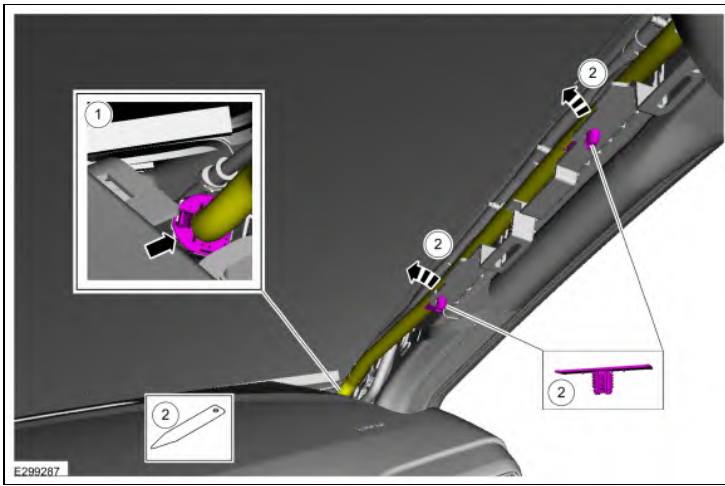

4. On RH side.
Position the rear wiper washer hose aside.
1. Release the rear wiper washer hose retainer.
Use the General Equipment: Pick Hook
 2. Disconnect the rear wiper washer hose coupling.
Refer to: Washer Hose Coupling (501-16 Wipers and Washers, General Procedures).
 3. Release the rear wiper washer hose from the A-pillar.

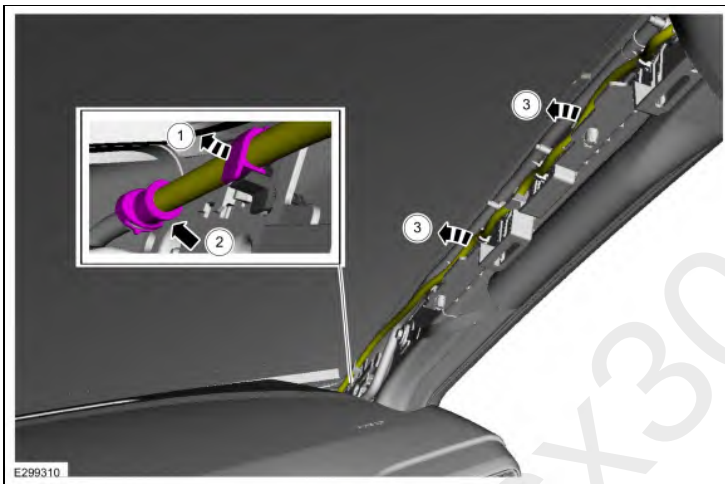

5. **NOTE:** Interior rear view mirror removed for clarity.
- If equipped.
Release the clips and remove the interior rear view mirror cover.