

Rear Spoiler


Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


- 1. Open the rear tail gate.

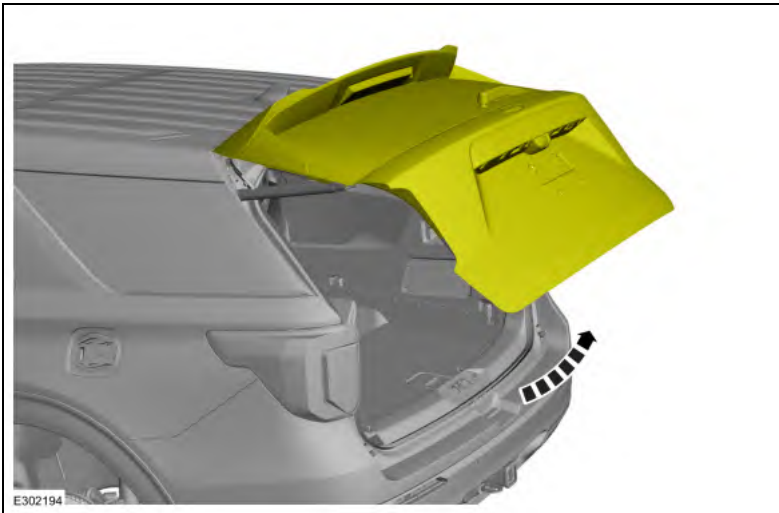


- 2. Release the clips and remove the upper liftgate trim panel.  
Use the General Equipment: Interior Trim Remover

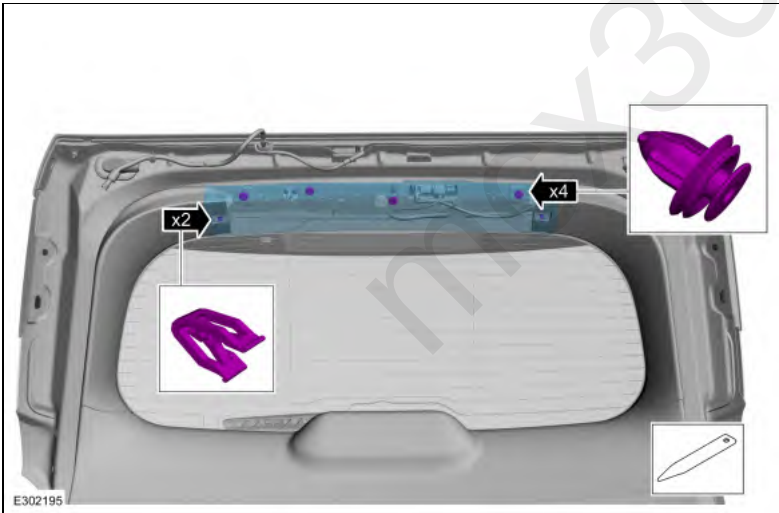

- 3. Disconnect the washer hoses and electrical connector.

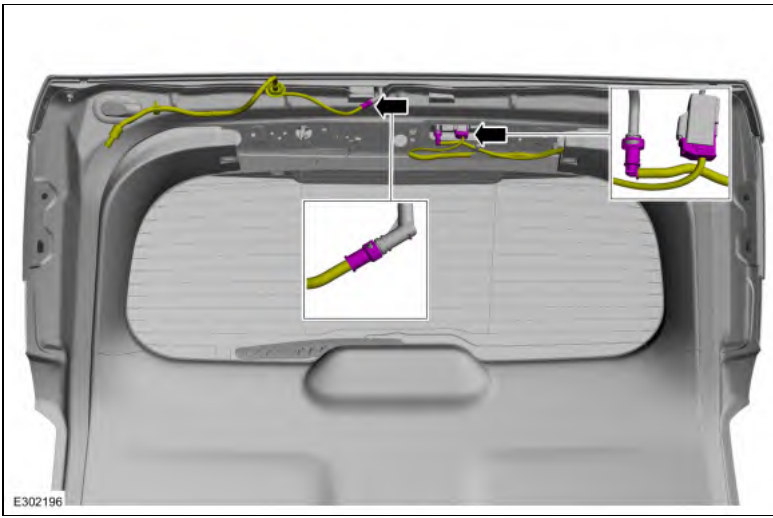

4. Remove the spoiler to liftgate fasteners.  
*Torque: 53 lb.in (6 Nm)*

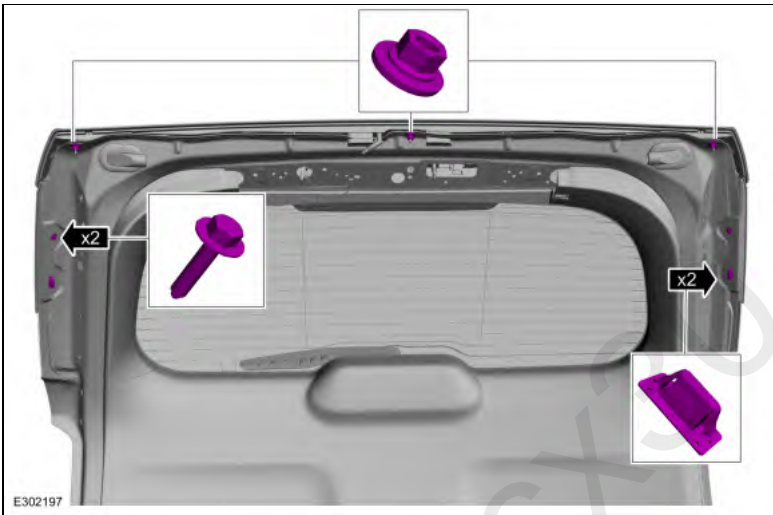

5. Disengage the retainer clips.