



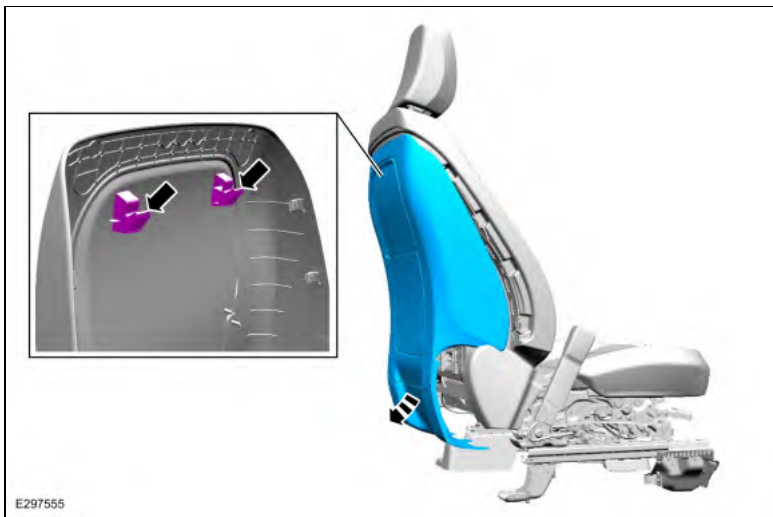


7. **NOTE:** After disconnecting the hose and lock assemblies, verify the black O-ring and white spacer remains with each hose.

**NOTE:** When connecting the hose and lock assemblies, an audible click must be heard for correct installation.

Detach the multi-contour seat cushion hose retainer, release the locking tabs, disconnect the hose couplings from the SCMG and position aside.

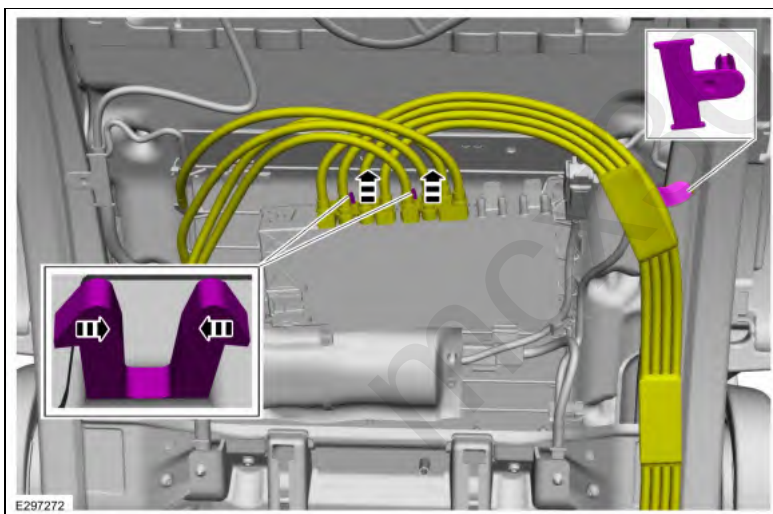

8. Remove the SCMG.
  1. Disconnect the electrical connector.
  2. Lift upwards on the SCMG to release the rear locking clip.
  3. Rotate the SCMG to release the side locking clips.

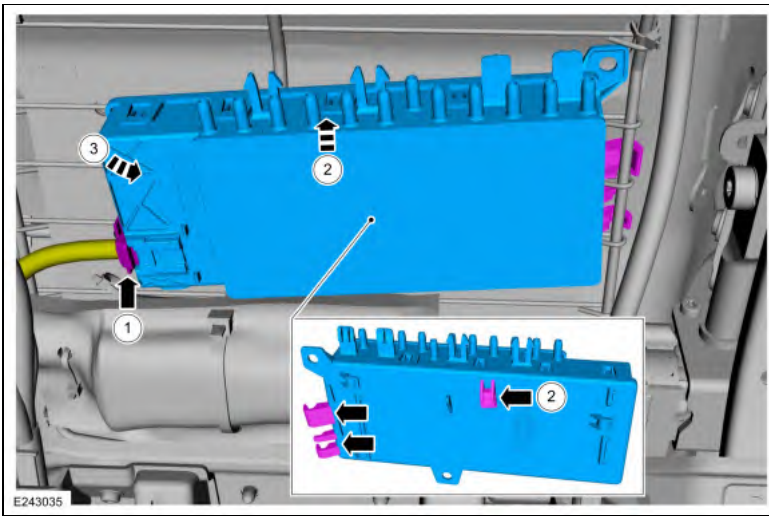

### Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, complete the PMI process for the SCMG following the on-screen instructions.

mcx30.com

## Front Head Restraint Guide Sleeve

### Special Tool(s) / General Equipment


Flat-Bladed Screwdriver

### Removal

**NOTE:** Typical head restraint guide sleeve shown, others similar.

### Vehicles with police package

1. Remove the front head restraint.
  1. Position the front seat backrest cover to access the guide sleeve retainer.
  2. Remove the guide sleeve retainer.
  3. Depress the locking tab.
  4. Remove the front head restraint.

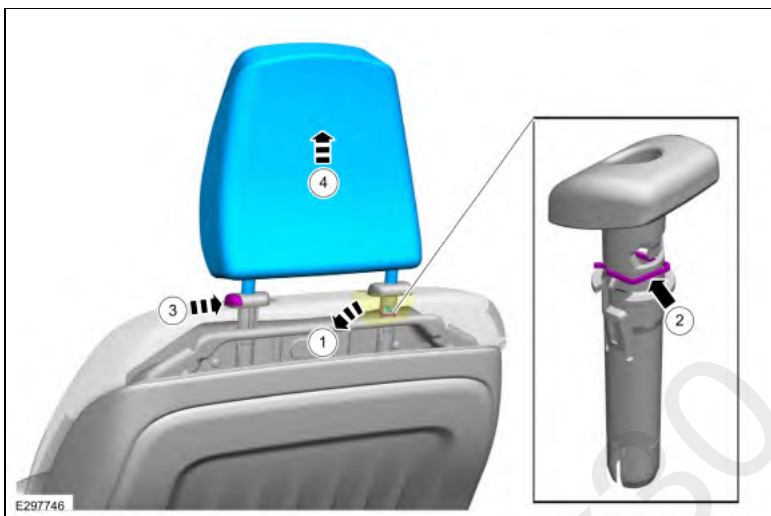

### Vehicles without police package

2. Remove the front head restraint.
  1. Depress the locking tab.
  2. Remove the front head restraint.




All

3. **NOTE:** Follow the unique instructions or graphics for this step in installation.

Remove and discard the front head restraint guide sleeve(s).

1. Release the tab.
2. Remove and discard the front head restraint guide sleeve(s).

Use the General Equipment: Flat-Bladed Screwdriver

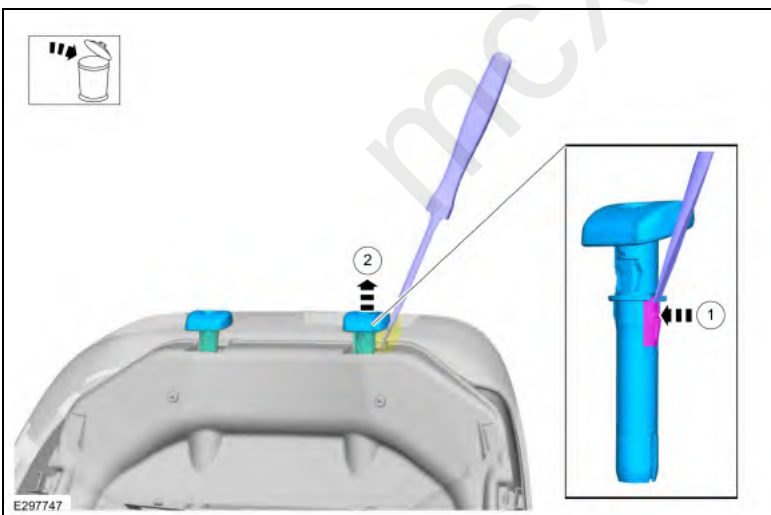

## Installation

1. **NOTICE:** Always install new head restraint guide sleeves. Difficult adjustment of the head restraint may occur. Failure to follow these instructions may result in component failure.

**NOTICE:** The head restraint guide sleeves are not interchangeable. Failure to install the correct head restraint guide sleeves at the correct position may result in component failure.

Allow the head restraint guide sleeve to slide freely through the backrest foam and backrest trim cover. Using hand pressure, twist the head restraint guide sleeve while pushing it into the backrest frame until the tab is locked into placed.