




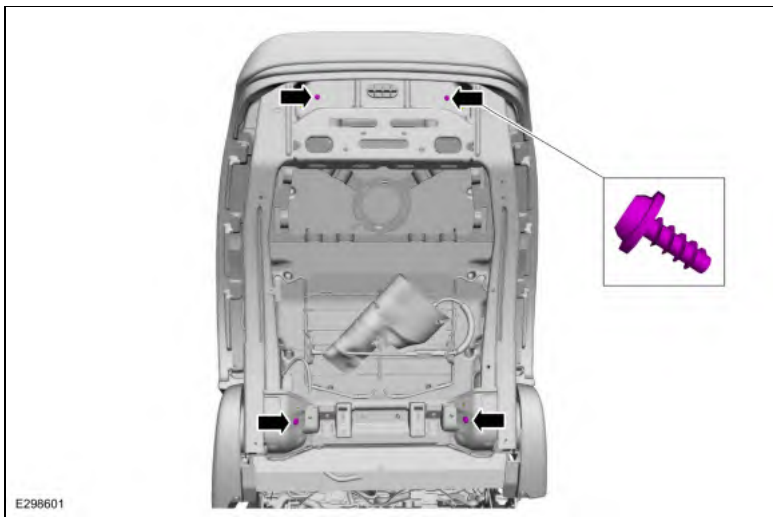


- 9.
1. Feed the side airbag electrical connector through the front seat backrest frame.
 2. Position the front seat backrest trim down.
 3. Remove the front seat backrest cover assembly bolt.
Torque: 62 lb.in (7 Nm)

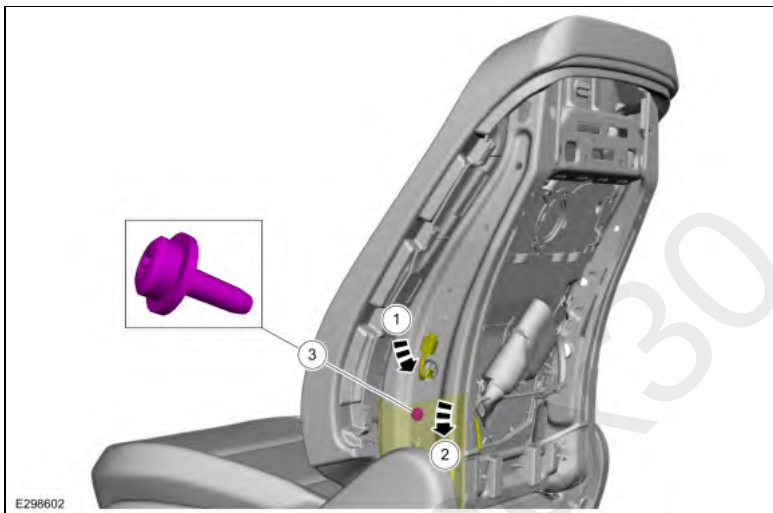

- 10.
1. Position the front seat backrest trim down.
 2. Remove the front seat backrest cover assembly bolts.
Torque: 62 lb.in (7 Nm)

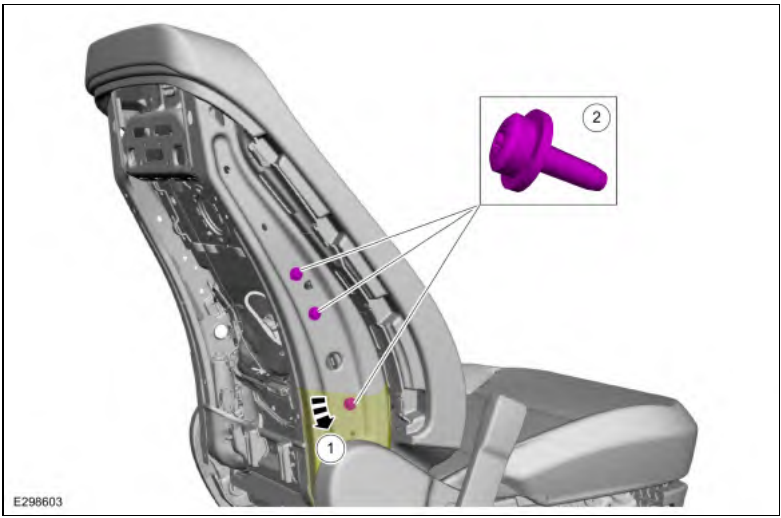


11. Remove the front seat backrest cover assembly.
1. Pull the lower backrest cover assembly out while noting the location of the guide pin for installation.
 2. Lift the upper backrest cover assembly over the backrest frame.

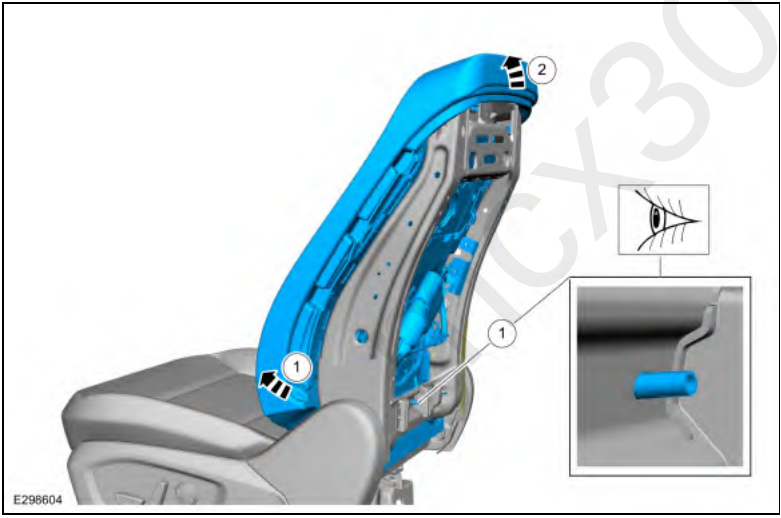

12. Detach the front seat backrest cover retainer and J-clips.



13. If equipped with heated/ventilated seats.
Detach the front seat backrest carrier from the vent bag.
1. Release the tabs.
 2. Detach the front seat backrest carrier from the vent bag.

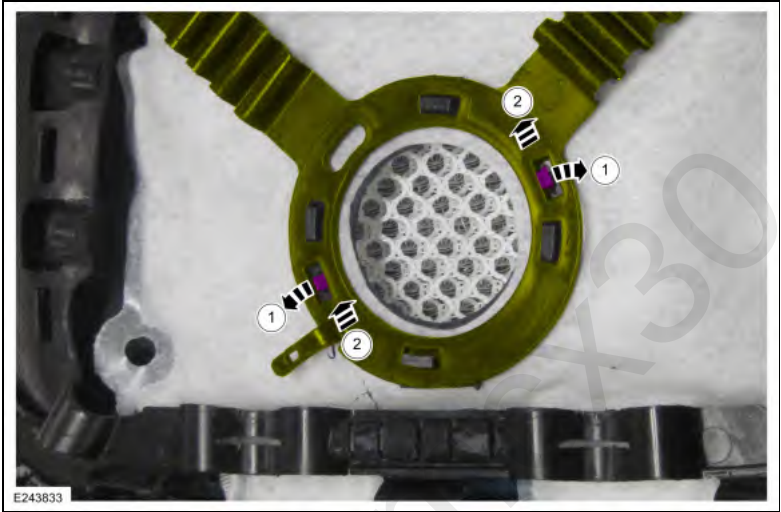

14. Position the front seat backrest cover aside and remove the backrest cover carrier.




15. **NOTICE:** Use care when separating the backrest cover from the hook-and-arrows, or the hooks can be torn from the backrest foam.

NOTICE: Use care when separating the seat backrest trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat backrest foam.

NOTE: Base front seat shown, all others similar.

Remove the front seat backrest cover.

1. Invert the backrest cover.
2. Release the hook-and-arrows.
3. Release the hook-and-loop strip.

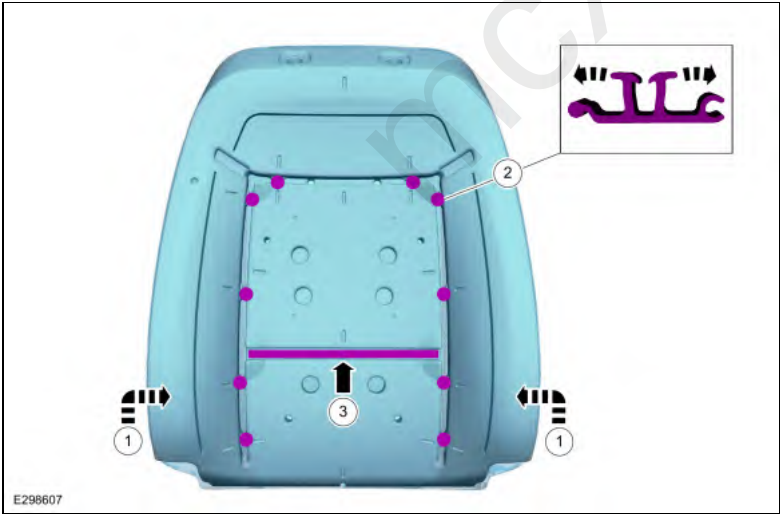

Installation


1. To install, reverse the removal procedure.

Front Seat Control Switch


Removal

NOTE: Driver seat control switch shown, all others similar.

1. Remove the front seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).
2. If equipped with manual recline.
Remove the front seat recline handle cover.
 1. Lift the recline handle.
 2. Remove the screw.
 3. Remove the recline handle cover.

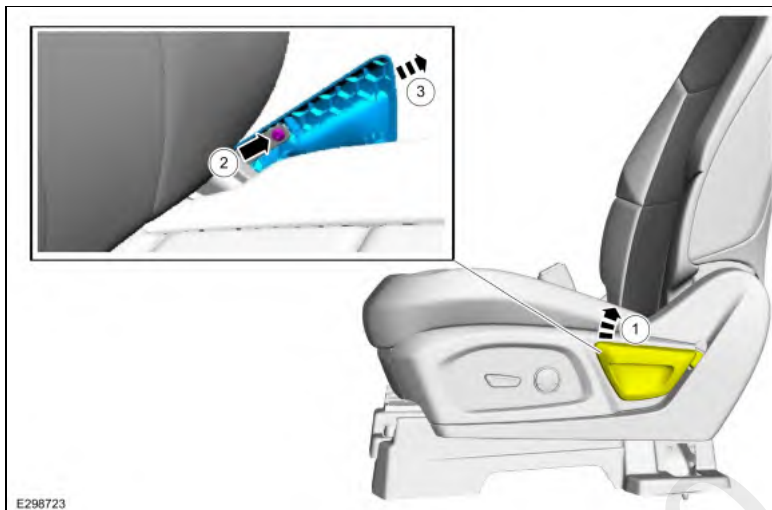

3. Remove the side shield screw.

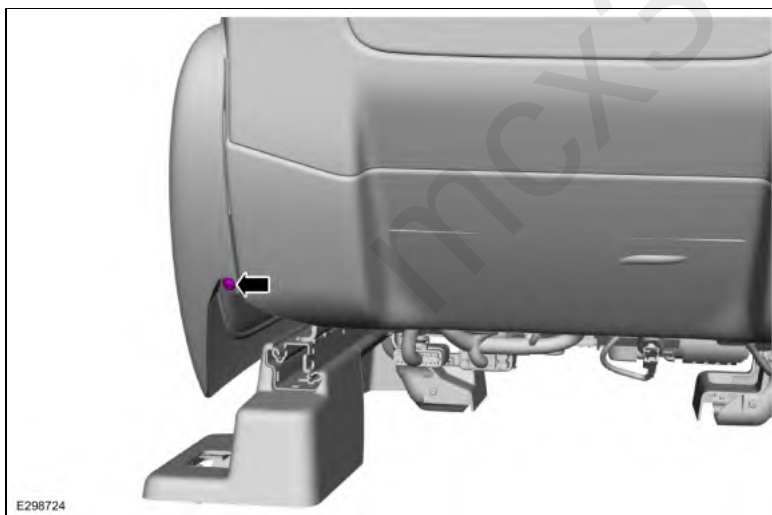

4.
 1. Lift up and out, separating the side shield from the recliner bracket.
 2. Slide the side shield forward and separate the side shield from the seat.



A horizontal bar chart consisting of six stacked rectangular segments of equal width. From top to bottom, the segments are colored blue, green, brown, yellow, purple, and light blue. Each segment is outlined with a thin black border. The chart is positioned within a larger white rectangular frame.



7. Remove the screws and the front seat control switch.