






2. Measure the front, rear and sides of the sliding glass to roof clearances as shown.

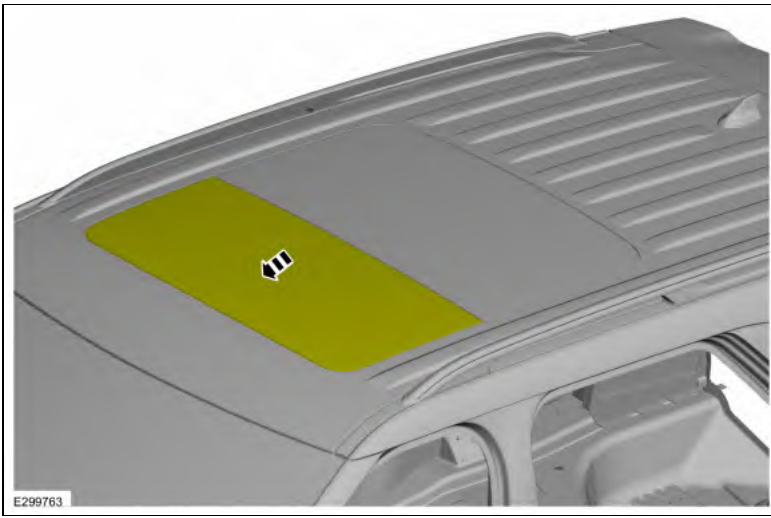

3. If adjustment is needed, fully open the roof opening panel shield.

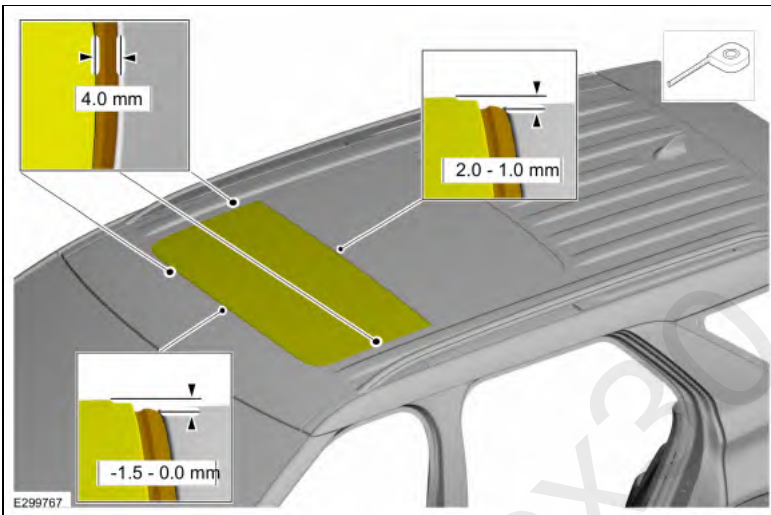

4. If necessary, on both sides.
Detach the top portion of the roof opening panel blind and fold it down to get access to the roof opening panel glass retainers.


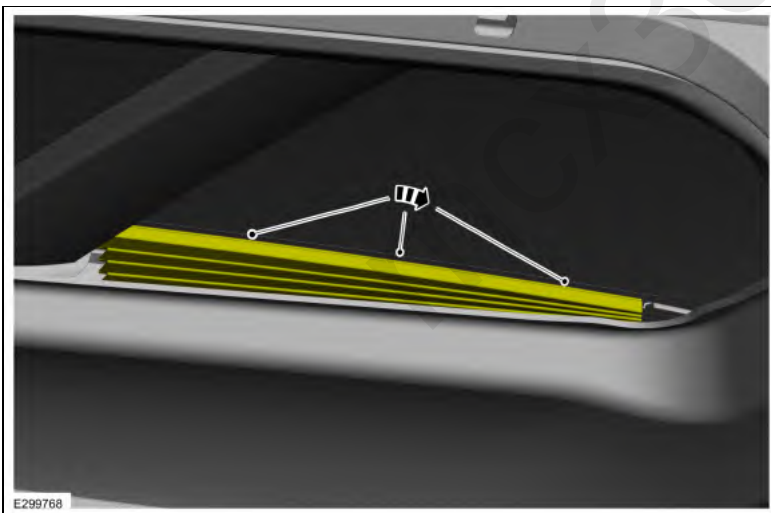


5. **NOTE:** Roof opening panel blind removed for clarity.

On both sides.

Adjust the roof opening panel sliding glass.

1. Loosen the retainers to adjust the roof opening panel sliding glass.
Torque: 53 lb.in (6 Nm)
2. Adjust the roof opening panel sliding glass as necessary.

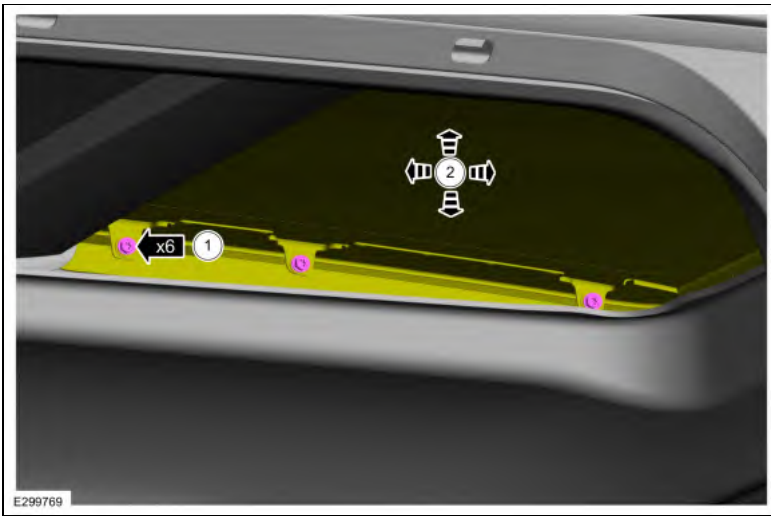

6. If any adjustment was made on the front sliding or rear fixed glass panels, initialize the front sliding glass panel.
Refer to: Power Roof Opening Panel Initialization (501-17 Roof Opening Panel, General Procedures).

mcx30.com

Removal and Installation


mcx30.com

Air Deflector


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Fully open the roof opening panel glass.

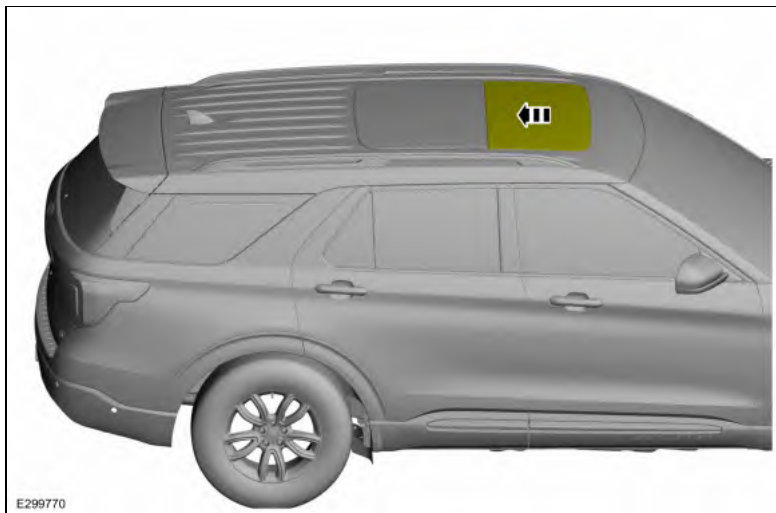

2. Remove the air deflector.
 1. Release the air deflector retaining rod tabs.
 2. Lift the forward part of the air deflector from the frame.
 3. Slide the air deflector forward out of the track assembly to remove.

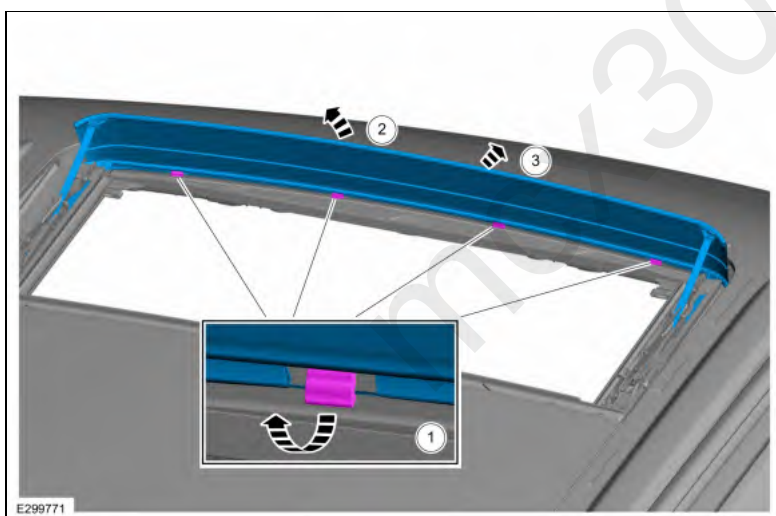

Installation

1. To install, reverse the removal procedure.
2. Initialize the roof opening panel.
Refer to: Power Roof Opening Panel Initialization (501-17 Roof Opening Panel, General Procedures).