



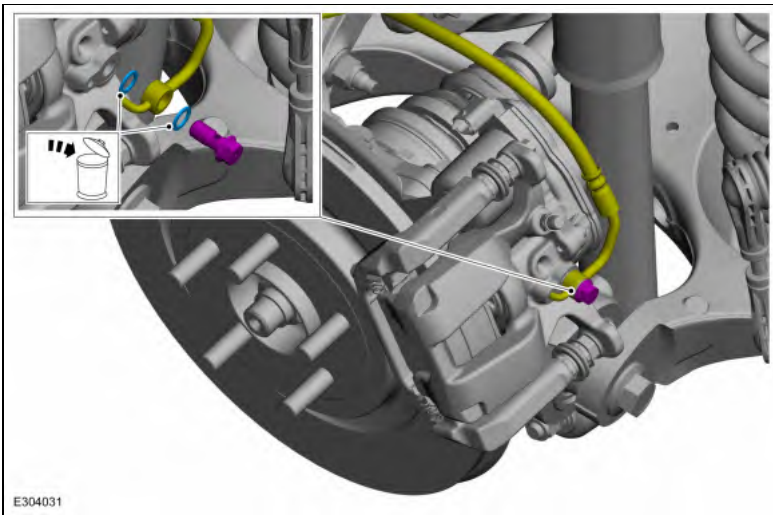

5. Remove and discard the brake caliper mounting bolts.
Torque: 26 lb.ft (35 Nm)

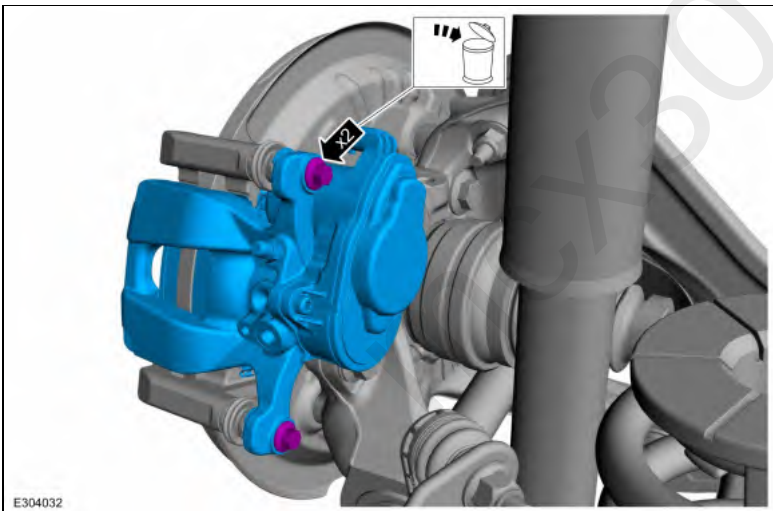

Vehicles with adhesive on brake pad insulator

6. **NOTICE:** Brake pads with adhesive on the insulator are one-time use only. When the brake pads are separated from the brake caliper, new brake pads must be installed to prevent brake noise and shudder.
- Separate the inboard and outboard brake pad from the brake caliper.
 - Remove the brake caliper.