

SECTION 415-00D: Information and Entertainment Systems — 8-Inch (203 mm)
Touchscreen

REMOVAL AND INSTALLATION


2014 F-150 Workshop
Manual

Procedure revision date:
10/25/2013


Front Display Interface Module (FDIM)

Removal and Installation

1. Remove the Front Controls Interface Module (FCIM). [Front Controls Interface Module \(FCIM\)](#).
2. Remove the 4 bolts and the Front Display Interface Module (FDIM).
 - Disconnect the electrical connectors.
 - To install, tighten to 2.5 Nm (23 lb-in).

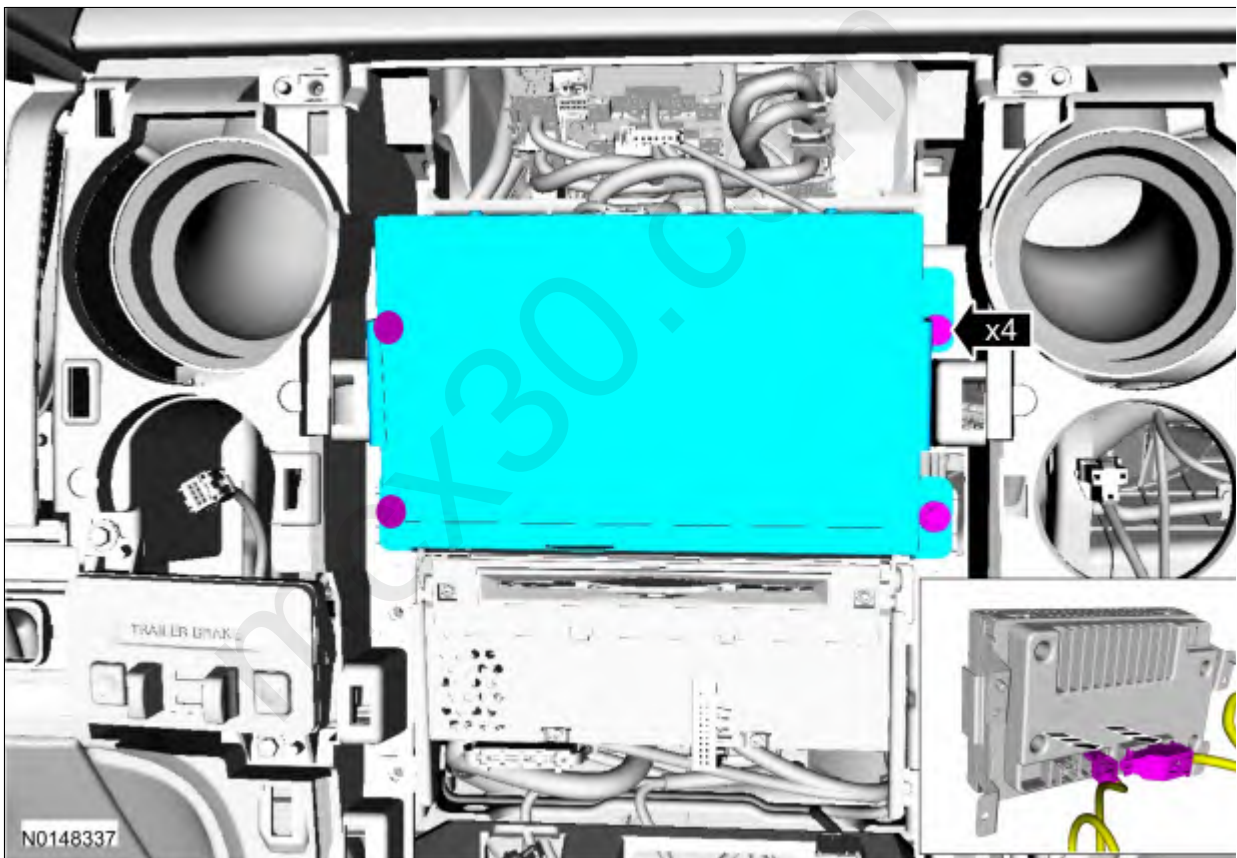

3. Remove the 4 screws and remove the Accessory Protocol Interface Module (APIM) from the [FDIM](#).
 - To install, tighten to 0.6 Nm (5 lb-in).

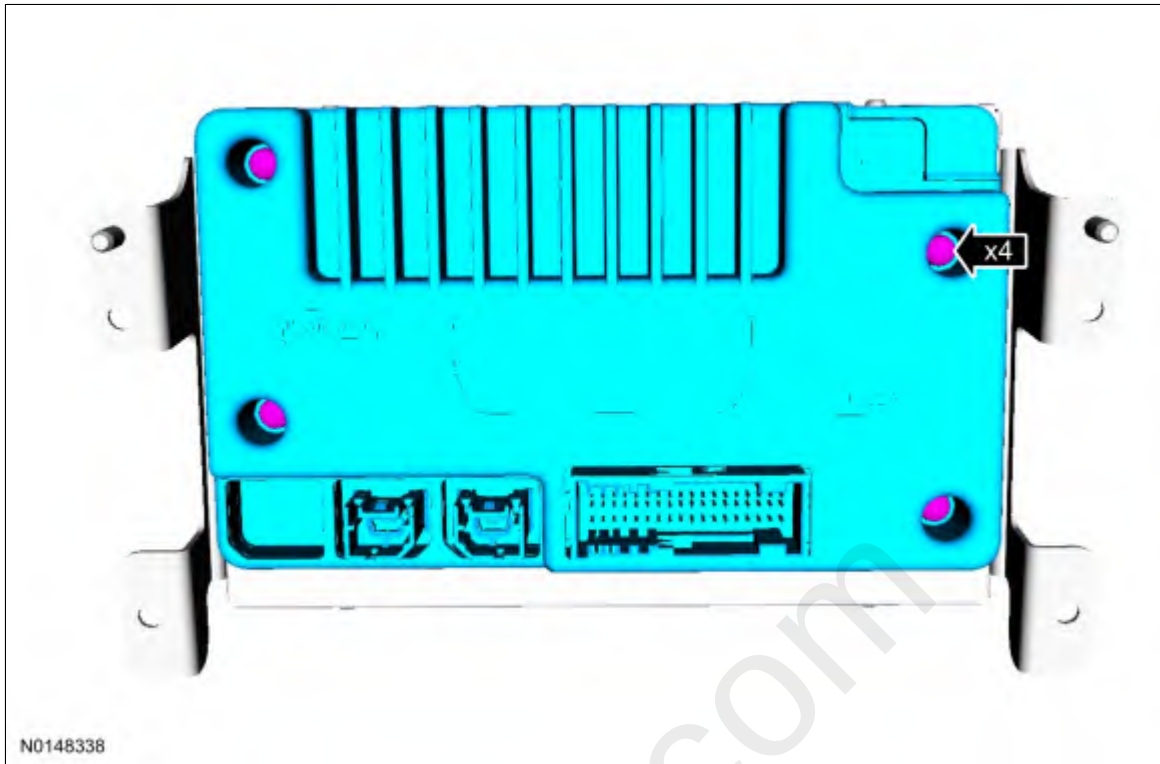

4. To install, reverse the removal procedure.
 5. Calibrate FDIM touchscreen. Refer to [Touchscreen Calibration](#).
-